



# Service Manual




## Table of Contents

<b>Part I : Technical Information</b> .....	1
<b>1. Summary</b> .....	1
<b>2. Specifications</b> .....	4
2.1 Specification Sheet.....	4
2.2 Operation Characteristic Curve .....	32
2.3 Capacity Variation Ratio According to Temperature .....	33
2.4 Cooling and Heating Data Sheet in Rated Frequency .....	33
2.5 Noise Curve.....	34
<b>3. Outline Dimension Diagram</b> .....	35
3.1 Indoor Unit.....	35
3.2 Outdoor Unit.....	36
<b>4. Refrigerant System Diagram</b> .....	38
<b>5. Electrical Part</b> .....	40
5.1 Wiring Diagram.....	40
5.2 PCB Printed Diagram .....	53
<b>6. Function and Control</b> .....	64
6.1 Remote Controller Introduction .....	64
6.2 Ewpe Smart App Operation Manual .....	77
6.3 Brief Description of Modes and Functions.....	78
<b>Part II : Installation and Maintenance</b> .....	87
<b>7. Notes for Installation and Maintenance</b> .....	87
<b>8. Installation</b> .....	90
8.1 Installation Dimension Diagram.....	90
8.2 Installation Parts-checking .....	92
8.3 Selection of Installation Location.....	92
8.4 Requirements for electric connection .....	92
8.5 Installation of Indoor Unit.....	92
8.6 Installation of Outdoor Unit.....	94
8.7 Vacuum Pumping and Leak Detection .....	96
8.8 Check after Installation and Test Operation .....	96





KW24HQ2B8DO  
KW24CQ2B8DO

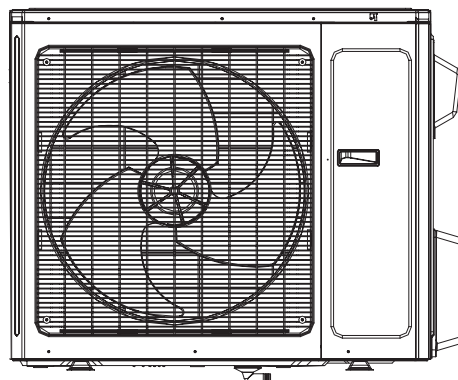

**Remote Controller**

YAN1F1F



YV1FB7F



YAN1F6F(WiFi)



Model	Remote control
For some models	YAN1F1F
KW24HQ2B8D	YV1FB7F
KW12CQ1B8D KW18CQ1B8D KW24CQ1B8D KW18CQ2B8D KW24CQ2B8D	YAN1F6F(WiFi)

Model List:

No.	Model	Product code	Indoor model	Indoor product code	Outdoor model	Outdoor product code
1	KW09CQ2B8A	CB438002500_L74316	KW09CQ2B8AI	CB438N02500_L74316	KW09CQ2B8AO	CB419W03800_L74316
2	KW12CQ2B8A	CB438002800_L74316	KW12CQ2B8AI	CB438N02800_L74316	KW12CQ2B8AO	CB419W04000_L74316
3	KW09CQ2B8D	CB438000300_L74316	KW09CQ2B8DI	CB438N00300_L74316	KW09CQ2B8DO	CB419W04200_L74316
4	KW12CQ2B8D	CB438000200_L74316	KW12CQ2B8DI	CB438N00200_L74316	KW12CQ2B8DO	CB419W04400_L74316
5	KW09HQ1B8D	CB438003602_L74316	KW09HQ1B8DI	CB438N03602_L74316	KW09HQ1B8DO	CB427W02200_L74316
6	KW12HQ1B8D	CB438001402_L74316	KW12HQ1B8DI	CB438N01402_L74316	KW12HQ1B8DO	CB427W02100_L74316
7	KW12CQ1B8D	CB438001601_L74316	KW12CQ1B8DI	CB438N01601_L74316	KW12CQ1B8DO	CB427W01800_L74316
8	KW09HQ2B8A	CB438002601_L74316	KW09HQ2B8AI	CB438N02601_L74316	KW09HQ2B8AO	CB419W03900_L74316
9	KW09HQ1B8A	CB438003702_L74316	KW09HQ1B8AI	CB438N03702_L74316	KW09HQ1B8AO	CB427W03900_L74316
10	KW09HQ3B8A	CB438008000_L74316	KW09HQ3B8AI	CB438N08000_L74316	KW09HQ3B8AO	CB425W08200_L74316
11	KW12HQ2B8A	CB438002901_L74316	KW12HQ2B8AI	CB438N02901_L74316	KW12HQ2B8AO	CB419W04100_L74316
12	KW12HQ1B8A	CB438003902_L74316	KW12HQ1B8AI	CB438N03902_L74316	KW12HQ1B8AO	CB427W03700_L74316
13	KW12HQ3B8A	CB438008200_L74316	KW12HQ3B8AI	CB438N08200_L74316	KW12HQ3B8AO	CB425W07900_L74316
14	KW09HQ3B8D	CB438008100_L74316	KW09HQ3B8DI	CB438N08100_L74316	KW09HQ3B8DO	CB425W08500_L74316
15	KW12HQ3B8D	CB438008300_L74316	KW12HQ3B8DI	CB438N08300_L74316	KW12HQ3B8DO	CB425W08100_L74316
16	KW09HQ2B8D	CB438002301_L74316	KW09HQ2B8DI	CB438N02301_L74316	KW09HQ2B8DO	CB419W04300_L74316
17	KW12HQ2B8D	CB438002701_L74316	KW12HQ2B8DI	CB438N02701_L74316	KW12HQ2B8DO	CB419W04500_L74316
18	KW18HQ1B8D	CB438001502_L74316	KW18HQ1B8DI	CB438N01502_L74316	KW18HQ1B8DO	CB427W02000_L74316
19	KW24HQ1B8D	CB438001802_L74316	KW24HQ1B8DI	CB438N01802_L74316	KW24HQ1B8DO	CB427W02400_L74316
20	KW18CQ1B8D	CB438001901_L74316	KW18CQ1B8DI	CB438N01901_L74316	KW18CQ1B8DO	CB427W01700_L74316
21	KW24CQ1B8D	CB438001701_L74316	KW24CQ1B8DI	CB438N01701_L74316	KW24CQ1B8DO	CB427W02300_L74316
22	KW18HQ3B8D	CB438007800_L74316	KW18HQ3B8DI	CB438N07800_L74316	KW18HQ3B8DO	CB425W07400_L74316
23	KW24HQ3B8D	CB438007900_L74316	KW24HQ3B8DI	CB438N07900_L74316	KW24HQ3B8DO	CB425W07700_L74316
24	KW24HQ2B8D	CB438002401_L74316	KW24HQ2B8DI	CB438N02401_L74316	KW24HQ2B8DO	CB419W03600_L74316
25	KW18CQ2B8D	CB438010000_L74316	KW18CQ2B8DI	CB438N10000_L74316	KW18CQ2B8DO	CB419W06600_L74316
26	KW18HQ2B8D	CB438006400_L74316	KW18HQ2B8DI	CB438N06400_L74316	KW18HQ2B8DO	CB419W06700_L74316
27	KW24CQ2B8D	CB438008600_L74316	KW24CQ2B8DI	CB438N08600_L74316	KW24CQ2B8DO	CB419W06500_L74316

## 2. Specifications

### 2.1 Specification Sheet

Model			KW09HQ1B8D	KW12HQ1B8D	
Product Code			CB438003602_L74316	CB438001402_L74316	
Power Supply	Rated Voltage	V~	208/230	208/230	
	Rated Frequency	Hz	60	60	
	Phases		1	1	
Power Supply Mode			Outdoor	Outdoor	
Cooling Capacity(Min~Max)		Btu/h	9000(3100~9600)	12000(3753~12500)	
Heating Capacity(Min~Max)		Btu/h	9500(3100~12000)	13000(3924~14000)	
Cooling Power Input(Min~Max)		W	900(375~1300)	1300(410~1350)	
Heating Power Input(Min~Max)		W	800(300~1350)	1250(380~1500)	
Cooling Power Current		A	4	5.8	
Heating Power Current		A	3.6	5.6	
Rated Input		W	1350	1500	
Rated Current		A	6.0	6.7	
Air Flow Volume(SH/H/M/L)		CFM	318/288/241/171	400/318/253/194	
Dehumidifying Volume		Pint/h	1.69	2.96	
EER		(Btu/h)/W	10.00	9.23	
COP		(Btu/h)/W	11.88	10.40	
SEER			16.00	16.00	
HSPF			9.00	9.00	
Application Area		yd <sup>2</sup>	14.35-21.53	19.14-28.70	
Indoor Unit	Model of indoor unit		KW09HQ1B8DI	KW12HQ1B8DI	
	Indoor Unit Product Code		CB438N03602_L74316	CB438N01402_L74316	
	Fan Type		Cross-flow	Cross-flow	
	Diameter Length(DXL)		inch	Φ3 7/8X22 13/16	Φ3 7/8X25
	Fan Motor Cooling Speed(SH/H/M/L)		r/min	1350/1200/1050/750	1350/1200/1000/800
	Fan Motor Heating Speed(SH/H/M/L)		r/min	1350/1200/1050/850	1350/1200/1000/900
	Output of Fan Motor		W	20	20
	Fan Motor RLA		A	0.20	0.31
	Fan Motor Capacitor		μF	1	1.5
	Evaporator Form			Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter		inch	Φ3/16	Φ3/16
	Row-fin Gap		inch	2-1/16	2-1/16
	Coil Length (LXDXW)		inch	23X7/8X10 1/2	25X7/8X12 1/16
	Swing Motor Model			MP24AA	MP24BA
	Output of Swing Motor		W	1.5	1.5
	Fuse		A	3.15	3.15
	Sound Pressure Level(SH/H/M/L)		dB (A)	43/38/34/28	45/39/35/29
	Sound Power Level(SH/H/M/L)		dB (A)	53/48/44/38	55/49/45/39
	Dimension (WXHXD)		inch	31 1/8X10 7/8X7 7/8	33 1/4X11 3/8X8 1/4
	Dimension of Carton Box (LXWXH)		inch	34X10 9/16X13 7/8	36 1/8X11X14 5/16
	Dimension of Package (LXWXH)		inch	34X10 11/16X14 7/16	36 1/4X11X15
Net Weight		lb	19.84	23.15	
Gross Weight		lb	24.25	27.56	

Outdoor Unit	Model of Outdoor Unit		KW09HQ1B8DO	KW12HQ1B8DO
	Outdoor Unit Product Code		CB427W02200_L74316	CB427W02100_L74316
	Compressor Manufacturer/Trademark		ZHUHAI GREE DAIKIN DEVICE CO.,LTD	ZHUHAI GREE DAIKIN DEVICE CO.,LTD
	Compressor Model		1GDY23AXD	1GDY23AXD
	Compressor Oil		DAPHNE FVC50K	DAPHNE FVC50K
	Compressor Type		Swing	Swing
	Compressor Locked Rotor Amp (L.R.A)	A	/	/
	Compressor RLA	A	6.6	6.6
	Compressor Power Input	W	845	845
	Overload Protector		KSD115°C or HPC115/95	KSD115°C or HPC115/95
	Throttling Method		Capillary	Capillary
	Operation temp	°F	60.8~86	60.8~86
	Ambient temp (cooling)	°F	0~115	0~115
	Ambient temp (heating)	°F	-4~75	-4~75
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	inch	Φ5/16	Φ5/16
	Rows-fin Gap	inch	1-1/16	2-1/16
	Coil Length (LXDXW)	inch	28X3/4X20	28X1 1/2X20
	Fan Motor Speed	rpm	820	820
	Output of Fan Motor	W	30	30
	Fan Motor RLA	A	0.37	0.37
	Fan Motor Capacitor	μF	2.5	2.5
	Air Flow Volume of Outdoor Unit	CFM	942	942
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	inch	Φ15 3/4	Φ15 3/4
	Defrosting Method		Automatic Defrosting	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IPX4	IPX4
	Permissible Excessive Operating Pressure for the Discharge Side	PSIG	550	550
	Permissible Excessive Operating Pressure for the Suction Side	PSIG	240	240
	Sound Pressure Level (H/M/L)	dB (A)	52/-/-	53/-/-
	Sound Power Level (H/M/L)	dB (A)	62/-/-	63/-/-
Dimension (WXHXD)	inch	30 9/16X21 1/4X12 5/8	30 9/16X21 1/4X12 5/8	
Dimension of Carton Box (LXWXH)	inch	32 9/32X13 63/64X22 27/32	32 9/32X13 63/64X22 27/32	
Dimension of Package (LXWXH)	inch	32 13/32X14 3/32X23 27/64	32 13/32X14 3/32X23 27/64	
Net Weight	lb	66.14	70.55	
Gross Weight	lb	71.65	76.06	
Refrigerant		R410A	R410A	
Refrigerant Charge	oz	24.7	30.0	
Connection Pipe	Length	ft	24.6	24.6
	Gas Additional Charge	oz/ft	0.2	0.2
	Outer Diameter Liquid Pipe	inch	Φ1/4	Φ1/4
	Outer Diameter Gas Pipe	inch	Φ3/8	Φ3/8
	Max Distance Height	ft	32.8	32.8
	Max Distance Length	ft	49.2	65.6
	Note:The connection pipe applies metric diameter.			

The above data is subject to change without notice. Please refer to the nameplate of the unit.



Model			KW09CQ2B8A	KW12CQ2B8A
Product Code			CB438002500_L74316	CB438002800_L74316
Power Supply	Rated Voltage	V~	115	115
	Rated Frequency	Hz	60	60
	Phases		1	1
Power Supply Mode			Outdoor	Outdoor
Cooling Capacity(Min~Max)		Btu/h	9000(2764~10918)	12000(3514~14569)
Heating Capacity(Min~Max)		Btu/h	/	/
Cooling Power Input(Min~Max)		W	700(100~1270)	923(170~1300)
Heating Power Input(Min~Max)		W	/	/
Cooling Power Current		A	6.21	8.78
Heating Power Current		A	/	/
Rated Input		W	1270	1300
Rated Current		A	11.27	11.54
Air Flow Volume(SH/H/M/L)		CFM	377/288/241/171	400/288/241/171
Dehumidifying Volume		Pint/h	1.69	2.96
EER		(Btu/h)/W	12.86	13.00
COP		(Btu/h)/W	/	/
SEER			23.00	22
HSPF			/	/
Application Area		yd <sup>2</sup>	14.35-21.53	19.14-28.70
Indoor Unit	Model of indoor unit		KW09CQ2B8AI	KW12CQ2B8AI
	Indoor Unit Product Code		CB438N02500_L74316	CB438N02800_L74316
	Fan Type		Cross-flow	Cross-flow
	Diameter Length(DXL)		inch	Φ3 55/64X25
	Fan Motor Cooling Speed(SH/H/M/L)		r/min	1350/1200/1050/750
	Fan Motor Heating Speed(SH/H/M/L)		r/min	/
	Output of Fan Motor		W	20
	Fan Motor RLA		A	0.32
	Fan Motor Capacitor		μF	/
	Evaporator Form			Aluminum Fin-copper Tube
	Pipe Diameter		inch	Φ9/32
	Row-fin Gap		inch	2-1/18
	Coil Length (LXDXW)		inch	25X7/8X12 1/16
	Swing Motor Model			MP24BA
	Output of Swing Motor		W	1.5
	Fuse		A	3.15
	Sound Pressure Level(SH/H/M/L)		dB (A)	43/38/32/26
	Sound Power Level(SH/H/M/L)		dB (A)	53/48/42/36
	Dimension (WXHDX)		inch	33 1/4X11 3/8X8 7/32
	Dimension of Carton Box (LXWXH)		inch	36 9/64X11X14 21/64
	Dimension of Package (LXWXH)		inch	36 1/4X11X15
Net Weight		lb	23.15	
Gross Weight		lb	27.56	

Outdoor Unit	Model of Outdoor Unit		KW09CQ2B8AO	KW12CQ2B8AO	
	Outdoor Unit Product Code		CB419W03800_L74316	CB419W04000_L74316	
	Compressor Manufacturer/Trademark		ZHUHAI GREE DAKIN DEVICE CO.,LTD.	ZHUHAI GREE DAKIN DEVICE CO.,LTD.	
	Compressor Model		QXA-A091zE190	QXA-A091zE190	
	Compressor Oil		FVC68D or RB 68EP	FVC68D or RB 68EP	
	Compressor Type		Rotary	Rotary	
	Compressor Locked Rotor Amp (L.R.A)	A	/	/	
	Compressor RLA	A	8.63	12.5	
	Compressor Power Input	W	980	980	
	Overload Protector		1NT11L-6233 or KSD115°C or HPC115/95U1	1NT11L-6233 or KSD115°C or HPC115/95U1	
	Throttling Method		Electron expansion valve	Electron expansion valve	
	Operation temp	°F	61~86	61~86	
	Ambient temp (cooling)	°F	0~115	0~115	
	Ambient temp (heating)	°F	/	/	
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube	
	Pipe Diameter	inch	Φ3/8	Φ3/8	
	Rows-fin Gap	inch	2-1/18	2-1/18	
	Coil Length (LXDXW)	inch	30 43/64X1 47/64X20	30 43/64X1 47/64X22	
	Fan Motor Speed	rpm	850	850	
	Output of Fan Motor	W	30	30	
	Fan Motor RLA	A	0.55	0.55	
	Fan Motor Capacitor	μF	/	/	
	Air Flow Volume of Outdoor Unit	CFM	1059	1177	
	Fan Type		Axial-flow	Axial-flow	
	Fan Diameter	inch	Φ15 3/4	Φ15 3/4	
	Defrosting Method		/	/	
	Climate Type		T1	T1	
	Isolation		I	I	
	Moisture Protection		IPX4	IPX4	
	Permissible Excessive Operating Pressure for the Discharge Side	MPa	4.3	4.3	
	Permissible Excessive Operating Pressure for the Suction Side	MPa	2.5	2.5	
	Sound Pressure Level (H/M/L)	dB (A)	53/-/-	53/-/-	
	Sound Power Level (H/M/L)	dB (A)	63/-/-	63/-/-	
	Dimension (WXHXD)	inch	33 3/8X21 1/4X12 5/8	33 3/8X21 1/4X12 5/8	
	Dimension of Carton Box (LXWXH)	inch	34 9/16X14 3/16X22 13/16	34 9/16X14 3/16X22 13/16	
	Dimension of Package (LXWXH)	inch	34 11/16X14 5/16X23 7/16	34 11/16X14 5/16X23 7/16	
	Net Weight	lb	62.83	73.85	
	Gross Weight	lb	68.34	80.47	
	Refrigerant		R410A	R410A	
	Refrigerant Charge	oz	42.34	47.62	
	Connection Pipe	Length	ft	24.6	24.6
		Gas Additional Charge	oz/ft	0.2	0.2
Outer Diameter Liquid Pipe		inch	Φ1/4	Φ1/4	
Outer Diameter Gas Pipe		inch	Φ3/8	Φ1/2	
Max Distance Height		ft	32.8	32.8	
Max Distance Length		ft	49.2	65.6	
Note:The connection pipe applies metric diameter.					

The above data is subject to change without notice. Please refer to the nameplate of the unit.

Model			KW09CQ2B8D	KW12CQ2B8D
Product Code			CB438000300_L74316	CB438000200_L74316
Power Supply	Rated Voltage	V~	208/230	208/230
	Rated Frequency	Hz	60	60
	Phases		1	1
Power Supply Mode			Outdoor	Outdoor
Cooling Capacity(Min~Max)		Btu/h	9000(3100~9600)	12000(3100~13000)
Heating Capacity(Min~Max)		Btu/h	/	/
Cooling Power Input(Min~Max)		W	630(160~1300)	923(200~1350)
Heating Power Input(Min~Max)		W	/	/
Cooling Power Current		A	2.80	4.50
Heating Power Current		A	/	/
Rated Input		W	1300	1350
Rated Current		A	5.8	6.0
Air Flow Volume(SH/H/M/L)		CFM	377/288/241/171	400/288/241/171
Dehumidifying Volume		Pint/h	1.69	2.96
EER		(Btu/h)/W	14.29	12.50
COP		(Btu/h)/W	/	/
SEER			23.00	22.00
HSPF			/	/
Application Area		yd <sup>2</sup>	14.35-21.53	19.14-28.70
Indoor Unit	Model of indoor unit		KW09CQ2B8DI	KW12CQ2B8DI
	Indoor Unit Product Code		CB438N00300_L74316	CB438N00200_L74316
	Fan Type		Cross-flow	Cross-flow
	Diameter Length(DXL)		inch	Φ3 55/64X25
	Fan Motor Cooling Speed(SH/H/M/L)		r/min	1350/1200/1050/750
	Fan Motor Heating Speed(SH/H/M/L)		r/min	/
	Output of Fan Motor		W	20
	Fan Motor RLA		A	0.09
	Fan Motor Capacitor		μF	/
	Evaporator Form			Aluminum Fin-copper Tube
	Pipe Diameter		inch	Φ2/7
	Row-fin Gap		inch	2-1/18
	Coil Length (LXDXW)		inch	25X7/8X12 1/16
	Swing Motor Model			MP24BA
	Output of Swing Motor		W	1.5
	Fuse		A	3.15
	Sound Pressure Level(SH/H/M/L)		dB (A)	43/39/35/29
	Sound Power Level(SH/H/M/L)		dB (A)	53/49/45/39
	Dimension (WXHXD)		inch	33 1/4X11 3/8X8 7/32
	Dimension of Carton Box (LXWXH)		inch	36 9/64X11X14 21/64
Dimension of Package (LXWXH)		inch	36 1/4X11X15	
Net Weight		lb	22.05	
Gross Weight		lb	26.46	

Outdoor Unit	Model of Outdoor Unit		KW09CQ2B8DO	KW12CQ2B8DO
	Outdoor Unit Product Code		CB419W04200_L74316	CB419W04400_L74316
	Compressor Manufacturer/Trademark		ZHUHAI GREE DAIKIN DEVICE CO.,LTD	ZHUHAI GREE DAIKIN DEVICE CO.,LTD
	Compressor Model		1GDY23AXD	1GDY23AXD
	Compressor Oil		DAPHNE FVC50K	DAPHNE FVC50K
	Compressor Type		Swing	Swing
	Compressor Locked Rotor Amp (L.R.A)	A	/	/
	Compressor RLA	A	6.6	6.6
	Compressor Power Input	W	845	845
	Overload Protector		KSD115°C or HPC115/95	KSD115°C or HPC115/95
	Throttling Method		Electron expansion valve	Electron expansion valve
	Operation temp	°F	61~86	61~86
	Ambient temp (cooling)	°F	0~115	0~115
	Ambient temp (heating)	°F	/	/
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	inch	Φ3/8	Φ3/8
	Rows-fin Gap	inch	2-1/16	2-1/16
	Coil Length (LXDXW)	inch	29 13/32X1 3/4X20	29 13/32X1 3/4X22
	Fan Motor Speed	rpm	900	900
	Output of Fan Motor	W	30	30
	Fan Motor RLA	A	/	/
	Fan Motor Capacitor	μF	/	/
	Air Flow Volume of Outdoor Unit	CFM	1059	1177
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	inch	Φ15 3/4	Φ15 3/4
	Defrosting Method		/	/
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IPX4	IPX4
	Permissible Excessive Operating Pressure for the Discharge Side	MPa	4.3	4.3
	Permissible Excessive Operating Pressure for the Suction Side	MPa	2.5	2.5
	Sound Pressure Level (H/M/L)	dB (A)	53/-/-	54/-/-
	Sound Power Level (H/M/L)	dB (A)	63/-/-	64/-/-
Dimension (WXHXD)	inch	33 3/8X21 1/4X12 5/8	33 3/8X21 1/4X12 5/8	
Dimension of Carton Box (LXWXH)	inch	34 9/16X14 3/16X22 13/16	34 9/16X14 3/16X22 13/16	
Dimension of Package (LXWXH)	inch	34 11/16X14 5/16X23 7/16	34 11/16X14 5/16X23 7/16	
Net Weight	lb	72.75	80.47	
Gross Weight	lb	78.26	87.08	
Refrigerant		R410A	R410A	
Refrigerant Charge	oz	45.86	47.62	
Connection Pipe	Length	ft	24.6	24.6
	Gas Additional Charge	oz/ft	0.2	0.2
	Outer Diameter Liquid Pipe	inch	Φ1/4	Φ1/4
	Outer Diameter Gas Pipe	inch	Φ3/8	Φ1/2
	Max Distance Height	ft	32.8	32.8
	Max Distance Length	ft	49.2	65.6
	Note:The connection pipe applies metric diameter.			

The above data is subject to change without notice. Please refer to the nameplate of the unit.

Model			KW09HQ2B8A	KW09HQ1B8A	
Product Code			CB438002601_L74316	CB438003702_L74316	
Power Supply	Rated Voltage	V~	115	115	
	Rated Frequency	Hz	60	60	
	Phases		1	1	
Power Supply Mode			Outdoor	Outdoor	
Cooling Capacity(Min~Max)		Btu/h	9000(2764~10918)	9000(2764~10918)	
Heating Capacity(Min~Max)		Btu/h	9900(2081~13989)	9600(2081~12263)	
Cooling Power Input(Min~Max)		W	700(100~1270)	895(350~1270)	
Heating Power Input(Min~Max)		W	930(140~1200)	852(280~1250)	
Cooling Power Current		A	6.21	10.93	
Heating Power Current		A	6.21	10.20	
Rated Input		W	1270	1270	
Rated Current		A	11.27	11.27	
Air Flow Volume(SH/H/M/L)		CFM	377/288/241/171	318/288/241/171	
Dehumidifying Volume		Pint/h	1.69	1.69	
EER		(Btu/h)/W	12.86	10.06	
COP		(Btu/h)/W	10.65	11.25	
SEER			23.00	16.00	
HSPF			10.50	9.00	
Application Area		yd <sup>2</sup>	14.35-21.53	14.35-21.53	
Indoor Unit	Model of indoor unit		KW09HQ2B8AI	KW09HQ1B8AI	
	Indoor Unit Product Code		CB438N02601_L74316	CB438N03702_L74316	
	Fan Type		Cross-flow	Cross-flow	
	Diameter Length(DXL)		inch	Φ3 55/64X25	Φ3 7/8X22 13/16
	Fan Motor Cooling Speed(SH/H/M/L)		r/min	1350/1200/1050/750	1350/1200/1050/750
	Fan Motor Heating Speed(SH/H/M/L)		r/min	1300/1150/1000/900	1350/1200/1050/850
	Output of Fan Motor		W	20	20
	Fan Motor RLA		A	0.32	0.24
	Fan Motor Capacitor		μF	/	4
	Evaporator Form			Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter		inch	Φ9/32	Φ3/16
	Row-fin Gap		inch	2-1/18	2-1/16
	Coil Length (LXDXW)		inch	25X7/8X12 1/16	23X7/8X10 8/16
	Swing Motor Model			MP24BA	MP24AA
	Output of Swing Motor		W	1.5	1.5
	Fuse		A	3.15	3.15
	Sound Pressure Level(SH/H/M/L)		dB (A)	43/38/32/26	42/38/34/28
	Sound Power Level(SH/H/M/L)		dB (A)	53/48/42/36	52/49/45/39
	Dimension (WXHXD)		inch	33 1/4X11 3/8X8 7/32	31 1/8X10 13/16X7 7/8
	Dimension of Carton Box (LXWXH)		inch	36 9/64X11X14 21/64	34X10 9/16X13 7/8
Dimension of Package (LXWXH)		inch	36 1/4X11X15	34 1/8X10 11/16X14 7/16	
Net Weight		lb	23.14	19.84	
Gross Weight		lb	27.56	24.25	

Outdoor Unit	Model of Outdoor Unit		KW09HQ2B8AO	KW09HQ1B8AO
	Outdoor Unit Product Code		CB419W03900_L74316	CB427W03900_L74316
	Compressor Manufacturer/Trademark		ZHUHAI LANDA COMPRESSOR CO.,LTD	ZHUHAI LANDA COMPRESSOR CO.,LTD
	Compressor Model		QXA-A091zE190	QXA-A091zE190
	Compressor Oil		FVC68D or RB 68EP	FVC68D or RB 68EP
	Compressor Type		Rotary	Rotary
	Compressor Locked Rotor Amp (L.R.A)	A	/	/
	Compressor RLA	A	8.63	12.62
	Compressor Power Input	W	980	980
	Overload Protector		1NT11L-6233 or KSD115°C or HPC115/95U1	1NT11L-6233 or KSD115°C or HPC115/95U1
	Throttling Method		Electron expansion valve	Capillary
	Operation temp	°F	61~86	61~86
	Ambient temp (cooling)	°F	0~115	0~115
	Ambient temp (heating)	°F	-4~75	-4~75
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	inch	Φ3/8	Φ1/4
	Rows-fin Gap	inch	2-1/18	2-1/16
	Coil Length (LXDXW)	inch	30 43/64X1 47/64X20	29 3/4X3/4X20
	Fan Motor Speed	rpm	850	850
	Output of Fan Motor	W	30	30
	Fan Motor RLA	A	0.55	0.24
	Fan Motor Capacitor	μF	/	/
	Air Flow Volume of Outdoor Unit	CFM	1059	1059
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	inch	Φ15 3/4	Φ15 3/4
	Defrosting Method		Automatic Defrosting	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IP24	IPX4
	Permissible Excessive Operating Pressure for the Discharge Side	PSIG	550	550
	Permissible Excessive Operating Pressure for the Suction Side	PSIG	240	240
	Sound Pressure Level (H/M/L)	dB (A)	53/-/-	53/-/-
	Sound Power Level (H/M/L)	dB (A)	63/-/-	63/-/-
Dimension (WXHXD)	inch	33 3/8X21 1/4X12 5/8	33 3/8X21 1/4X12 5/8	
Dimension of Carton Box (LXWXH)	inch	34 9/16X14 3/16X22 13/16	34 9/16X14 3/16X22 13/16	
Dimension of Package (LXWXH)	inch	34 11/16X14 5/16X23 7/16	34 11/16X14 5/16X23 7/16	
Net Weight	lb	71.65	62.83	
Gross Weight	lb	77.16	68.34	
Refrigerant		R410A	R410A	
Refrigerant Charge	oz	42.34	24.7	
Connection Pipe	Length	ft	24.6	24.6
	Gas Additional Charge	oz/ft	0.2	0.2
	Outer Diameter Liquid Pipe	inch	Φ1/4	Φ1/4
	Outer Diameter Gas Pipe	inch	Φ3/8	Φ3/8
	Max Distance Height	ft	32.8	32.8
	Max Distance Length	ft	49.2	49.2
Note:The connection pipe applies metric diameter.				

The above data is subject to change without notice. Please refer to the nameplate of the unit.

Model		KW12CQ1B8D	KW18HQ2B8D
Product Code		CB438001601_L74316	CB438006400_L74316
Power Supply	Rated Voltage	V~	208/230
	Rated Frequency	Hz	60
	Phases		1
Power Supply Mode		Outdoor	Outdoor
Cooling Capacity(Min~Max)	Btu/h	12000(3753~12500)	18000(6800~20000)
Heating Capacity(Min~Max)	Btu/h	/	19800(7340~23500)
Cooling Power Input(Min~Max)	W	1300(410~1350)	1435(450~2150)
Heating Power Input(Min~Max)	W	/	1730(580~2600)
Cooling Power Current	A	5.8	6.37
Heating Power Current	A	/	7.68
Rated Input	W	1350	3000
Rated Current	A	6.0	10.39
Air Flow Volume(SH/H/M/L)	CFM	400/318/253/194	559/488/412/335
Dehumidifying Volume	Pint/h	2.96	1.8
EER	(Btu/h)/W	9.23	12.50
COP	(Btu/h)/W	/	11.45
SEER		16.00	20
HSPF		/	10
Application Area	yd <sup>2</sup>	19.14-28.70	27.51-40.66
Indoor Unit	Model of indoor unit		KW12CQ1B8DI
	Indoor Unit Product Code		CB438N01601_L74316
	Fan Type		Cross-flow
	Diameter Length(DXL)	inch	Φ3 7/8X25
	Fan Motor Cooling Speed(SH/H/M/L)	r/min	1350/1200/1000/800
	Fan Motor Heating Speed(SH/H/M/L)	r/min	/
	Output of Fan Motor	W	20
	Fan Motor RLA	A	0.31
	Fan Motor Capacitor	μF	1.5
	Evaporator Form		Aluminum Fin-copper Tube
	Pipe Diameter	inch	Φ3/16
	Row-fin Gap	inch	2-1/16
	Coil Length (LXDXW)	inch	25X7/8X12 1/16
	Swing Motor Model		MP24BA
	Output of Swing Motor	W	1.5
	Fuse	A	3.15
	Sound Pressure Level(SH/H/M/L)	dB (A)	45/39/35/29
	Sound Power Level(SH/H/M/L)	dB (A)	55/49/45/39
	Dimension (WXHXD)	inch	33 1/4X11 3/8X8 1/4
	Dimension of Carton Box (LXWXH)	inch	36 1/8X11X14 5/16
Dimension of Package (LXWXH)	inch	36 1/4X11X15	
Net Weight	lb	23.15	
Gross Weight	lb	27.56	

Outdoor Unit	Model of Outdoor Unit		KW12CQ1B8DO	KW18HQ2B8DO
	Outdoor Unit Product Code		CB427W01800_L74316	CB419W06700_L74316
	Compressor Manufacturer/Trademark		ZHUHAI GREE DAIKIN DEVICE CO.,LTD	ZHUHAI LANDA COMPRESSOR CO.,LTD.
	Compressor Model		1GDY23AXD	QXA-B141zF030A
	Compressor Oil		DAPHNE FVC50K	RB68EP
	Compressor Type		Swing	Rotary
	Compressor Locked Rotor Amp (L.R.A)	A	/	25
	Compressor RLA	A	6.6	12.08
	Compressor Power Input	W	845	1440
	Overload Protector		KSD115°C or HPC115/95	1NT11L-6233 or KSD115°C or HPC115/95U1
	Throttling Method		Capillary	Electron expansion valve
	Operation temp	°F	60.8~86	61~86
	Ambient temp (cooling)	°F	0~115	0~115
	Ambient temp (heating)	°F	/	-4~75
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	inch	Φ5/16	Φ9/32
	Rows-fin Gap	inch	2-1/16	3-1/18
	Coil Length (LXDXW)	inch	28X1 1/2X20	36 13/16X1 1/2X25 63/64
	Fan Motor Speed	rpm	820	800
	Output of Fan Motor	W	30	60
	Fan Motor RLA	A	0.37	0.49
	Fan Motor Capacitor	μF	2.5	/
	Air Flow Volume of Outdoor Unit	CFM	942	3200
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	inch	Φ15 3/4	Φ20 15/32
	Defrosting Method		/	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IPX4	IP24
	Permissible Excessive Operating Pressure for the Discharge Side	PSIG	550	4.3
	Permissible Excessive Operating Pressure for the Suction Side	PSIG	240	2.5
	Sound Pressure Level (H/M/L)	dB (A)	52/-/-	55/-/-
	Sound Power Level (H/M/L)	dB (A)	62/-/-	65/-/-
Dimension (WXHXD)	inch	30 9/16X21 1/4X12 5/8	38X27 9/16X15 19/32	
Dimension of Carton Box (LXWXH)	inch	32 9/32X13 63/64X22 27/32	40 25/64X17 29/32X28 15/16	
Dimension of Package (LXWXH)	inch	32 13/32X14 3/32X23 27/64	40 33/64X18 5/16X29 33/64	
Net Weight	lb	69.45	105.82	
Gross Weight	lb	74.96	115.74	
Refrigerant		R410A	R410A	
Refrigerant Charge	oz	30.0	56.44	
Connection Pipe	Length	ft	24.6	24.6
	Gas Additional Charge	oz/ft	0.2	0.2
	Outer Diameter Liquid Pipe	inch	Φ1/4	Φ1/4
	Outer Diameter Gas Pipe	inch	Φ3/8	Φ5/8
	Max Distance Height	ft	32.8	32.8
	Max Distance Length	ft	65.6	82
Note:The connection pipe applies metric diameter.				

The above data is subject to change without notice. Please refer to the nameplate of the unit.



Model			KW12HQ1B8A	KW12HQ2B8A	
Product Code			CB438003902_L74316	CB438002901_L74316	
Power Supply	Rated Voltage	V~	115	115	
	Rated Frequency	Hz	60	60	
	Phases		1	1	
Power Supply Mode			Outdoor	Outdoor	
Cooling Capacity(Min~Max)		Btu/h	12000(3753~12500)	12000(3514~14569)	
Heating Capacity(Min~Max)		Btu/h	13000(3412~15013)	12000(2764~16582)	
Cooling Power Input(Min~Max)		W	1193(380~1300)	960(170~1300)	
Heating Power Input(Min~Max)		W	1250(350~1350)	990(170~1350)	
Cooling Power Current		A	12.40	8.78	
Heating Power Current		A	13.50	8.78	
Rated Input		W	1350	1350	
Rated Current		A	13.20	11.98	
Air Flow Volume(SH/H/M/L)		CFM	400/318/241/194	400/288/241/171	
Dehumidifying Volume		Pint/h	2.96	2.96	
EER		(Btu/h)/W	10.06	12.50	
COP		(Btu/h)/W	10.40	12.32	
SEER			16	22.00	
HSPF			9	10.20	
Application Area		yd <sup>2</sup>	19.14-28.70	19.14-28.70	
Indoor Unit	Model of indoor unit		KW12HQ1B8AI	KW12HQ2B8AI	
	Indoor Unit Product Code		CB438N03902_L74316	CB438N02901_L74316	
	Fan Type		Cross-flow	Cross-flow	
	Diameter Length(DXL)		inch	Φ3 7/8X24 15/16	Φ3 55/64X25
	Fan Motor Cooling Speed(SH/H/M/L)		r/min	1350/1200/1000/800	1400/1200/1050/800
	Fan Motor Heating Speed(SH/H/M/L)		r/min	1350/1200/1000/900	1400/1200/1000/900
	Output of Fan Motor		W	20	40
	Fan Motor RLA		A	0.25	0.32
	Fan Motor Capacitor		μF	4	/
	Evaporator Form			Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter		inch	Φ3/16	Φ9/32
	Row-fin Gap		inch	2-1/16	2-1/18
	Coil Length (LXDXW)		inch	25X7/8X12 1/16	25X7/8X12 1/16
	Swing Motor Model			MP24BA	MP24BA
	Output of Swing Motor		W	1.5	1.5
	Fuse		A	3.15	3.15
	Sound Pressure Level(SH/H/M/L)		dB (A)	43/39/35/29	45/40/34/28
	Sound Power Level(SH/H/M/L)		dB (A)	53/49/45/39	55/50/44/38
	Dimension (WXHXD)		inch	33 1/4X11 3/8X8 1/4	33 1/4X11 3/8X8 7/32
	Dimension of Carton Box (LXWXH)		inch	36 1/8X10 15/16X14 5/16	36 9/64X11X14 21/64
Dimension of Package (LXWXH)		inch	36 1/4X11 1/16X14 15/16	36 1/4X11X15	
Net Weight		lb	23.15	23.15	
Gross Weight		lb	27.56	27.56	

Outdoor Unit	Model of Outdoor Unit		KW12HQ1B8AO	KW12HQ2B8AO
	Outdoor Unit Product Code		CB427W03700_L74316	CB419W04100_L74316
	Compressor Manufacturer/Trademark		ZHUHAI LANDA COMPRESSOR CO.,LTD	ZHUHAI LANDA COMPRESSOR CO.,LTD
	Compressor Model		QXA-A091zE190	QXA-A091zE190
	Compressor Oil		FVC68D or RB 68EP	FVC68D or RB 68EP
	Compressor Type		Rotary	Rotary
	Compressor Locked Rotor Amp (L.R.A)	A	/	/
	Compressor RLA	A	15.23	12.5
	Compressor Power Input	W	980	980
	Overload Protector		1NT11L-6233 or KSD115°C or HPC115/95U1	1NT11L-6233 or KSD115°C or HPC115/95U1
	Throttling Method		Capillary	Electron expansion valve
	Operation temp	°F	61~86	61~86
	Ambient temp (cooling)	°F	0~115	0~115
	Ambient temp (heating)	°F	-4~75	-4~75
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	inch	Φ1/4	Φ3/8
	Rows-fin Gap	inch	2-1/16	2-1/18
	Coil Length (LXDXW)	inch	28X1 1/2X20	30 43/64X1 47/64X22
	Fan Motor Speed	rpm	850	850
	Output of Fan Motor	W	30	30
	Fan Motor RLA	A	0.23	0.55
	Fan Motor Capacitor	μF	/	/
	Air Flow Volume of Outdoor Unit	CFM	1059	1177
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	inch	Φ15 3/4	Φ15 3/4
	Defrosting Method		Automatic Defrosting	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IPX4	IP24
	Permissible Excessive Operating Pressure for the Discharge Side	PSIG	550	550
	Permissible Excessive Operating Pressure for the Suction Side	PSIG	240	240
	Sound Pressure Level (H/M/L)	dB (A)	53/-/-	53/-/-
	Sound Power Level (H/M/L)	dB (A)	63/-/-	63/-/-
	Dimension (WXHXD)	inch	33 3/8X21 1/4X12 5/8	33 3/8X21 1/4X12 5/8
Dimension of Carton Box (LXWXH)	inch	34 9/16X14 3/16X22 13/16	34 9/16X14 3/16X22 13/16	
Dimension of Package (LXWXH)	inch	34 11/16X14 5/16X23 7/16	34 11/16X14 5/16X23 7/16	
Net Weight	lb	67.24	77.16	
Gross Weight	lb	72.75	83.77	
Refrigerant		R410A	R410A	
Refrigerant Charge	oz	31.8	47.63	
Connection Pipe	Length	ft	24.6	24.6
	Gas Additional Charge	oz/ft	0.2	0.215
	Outer Diameter Liquid Pipe	inch	Φ1/4	Φ1/4
	Outer Diameter Gas Pipe	inch	Φ3/8	Φ1/2
	Max Distance Height	ft	32.8	32.8
	Max Distance Length	ft	65.6	65.6
Note:The connection pipe applies metric diameter.				

The above data is subject to change without notice. Please refer to the nameplate of the unit.

Model			KW12HQ3B8D	KW09HQ3B8D	
Product Code			CB438008300_L74316	CB438008100_L74316	
Power Supply	Rated Voltage	V~	208/230	208/230	
	Rated Frequency	Hz	60	60	
	Phases		1	1	
Power Supply Mode			Outdoor	Outdoor	
Cooling Capacity(Min~Max)		Btu/h	12000(3753~12500)	9000(909~9600)	
Heating Capacity(Min~Max)		Btu/h	13000(3924~14000)	9500(3100~12000)	
Cooling Power Input(Min~Max)		W	1150(410~1350)	850(375~1300)	
Heating Power Input(Min~Max)		W	1250(380~1500)	850(300~1350)	
Cooling Power Current		A	5.1	4.0	
Heating Power Current		A	5.55	3.8	
Rated Input		W	1500	1350	
Rated Current		A	6.88	5.8	
Air Flow Volume(SH/H/M/L)		CFM	400/318/253/194	318/288/241/171	
Dehumidifying Volume		Pint/h	2.96	1.69	
EER		(Btu/h)/W	10.43	10.59	
COP		(Btu/h)/W	10.4	11.18	
SEER			18.00	18.00	
HSPF			9.00	9.00	
Application Area		yd <sup>2</sup>	19.14-28.70	19.14-28.70	
Indoor Unit	Model of indoor unit		KW12HQ3B8DI	KW09HQ3B8DI	
	Indoor Unit Product Code		CB438N08300_L74316	CB438N08100_L74316	
	Fan Type		Cross-flow	Cross-flow	
	Diameter Length(DXL)		inch	Φ3 7/8X25	Φ3 55/64X22 5/6
	Fan Motor Cooling Speed(SH/H/M/L)		r/min	1350/1200/1000/800	1350/1200/1050/750
	Fan Motor Heating Speed(SH/H/M/L)		r/min	1350/1200/1000/900	1350/1200/1050/850
	Output of Fan Motor		W	20	20
	Fan Motor RLA		A	0.31	0.22
	Fan Motor Capacitor		μF	1.5	1
	Evaporator Form			Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter		inch	Φ3/16	Φ13/64
	Row-fin Gap		inch	2-1/16	2-1/16
	Coil Length (LXDXW)		inch	25X7/8X12 1/16	23X7/8X10 8/16
	Swing Motor Model			MP24BA	MP24AA
	Output of Swing Motor		W	1.5	1.5
	Fuse		A	3.15	3.15
	Sound Pressure Level(SH/H/M/L)		dB (A)	43/39/35/29	43/38/34/28
	Sound Power Level(SH/H/M/L)		dB (A)	53/49/45/39	53/49/45/39
	Dimension (WXHXD)		inch	33 1/4X11 3/8X8 1/4	31 7/64X10 5/6X7 7/8
	Dimension of Carton Box (LXWXH)		inch	36 1/8X11X14 5/16	34X10 35/64X13 55/64
Dimension of Package (LXWXH)		inch	36 1/4X11X15	34X10 21/32X14 29/64	
Net Weight		lb	23.15	20.94	
Gross Weight		lb	27.56	25.35	

Outdoor Unit	Model of Outdoor Unit		KW12HQ3B8DO	KW09HQ3B8DO
	Outdoor Unit Product Code		CB425W08100_L74316	CB425W08500_L74316
	Compressor Manufacturer/Trademark		ZHUHAI LANDA COMPRESSOR CO.,LTD.	ZHUHAI GREE DAIKIN DEVICE CO.,LTD
	Compressor Model		QXA-B102zE190	RB68EP
	Compressor Oil		RB68EP	DAPHNE FVC50K
	Compressor Type		Rotary	Rotary
	Compressor Locked Rotor Amp (L.R.A)	A	/	/
	Compressor RLA	A	6.6	6.6
	Compressor Power Input	W	1020	1020
	Overload Protector		1NT11L-6233 or HPC115/95U1 or KSD115°C	1NT11L-6233 or HPC115/95U1 or KSD115°C
	Throttling Method		Electron expansion valve	Electric Expansion Valve Sub-Assy
	Operation temp	°F	60.8~86	60.8~86
	Ambient temp (cooling)	°F	0~115	0~115
	Ambient temp (heating)	°F	-4~75	-13~75
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	inch	Φ5/16	Φ9/32
	Rows-fin Gap	inch	2-1/16	1-1/18
	Coil Length (LXDXW)	inch	28X1 1/2X20	28X3/4X20
	Fan Motor Speed	rpm	900	900
	Output of Fan Motor	W	30	30
	Fan Motor RLA	A	0.37	0.36
	Fan Motor Capacitor	μF	/	/
	Air Flow Volume of Outdoor Unit	CFM	1600	942
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	inch	Φ15 3/4	Φ15 3/4
	Defrosting Method		Automatic Defrosting	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IPX4	IPX4
	Permissible Excessive Operating Pressure for the Discharge Side	PSIG	550	550
	Permissible Excessive Operating Pressure for the Suction Side	PSIG	240	240
	Sound Pressure Level (H/M/L)	dB (A)	53/-/-	52/-/-
	Sound Power Level (H/M/L)	dB (A)	63/-/-	62/-/-
Dimension (WXHXD)	inch	30 9/16X21 1/4X12 5/8	30 9/16X21 1/4X12 5/8	
Dimension of Carton Box (LXWXH)	inch	32 9/32X13 63/64X22 27/32	32 9/32X13 63/64X22 27/32	
Dimension of Package (LXWXH)	inch	32 13/32X14 3/32X23 27/64	32 13/32X14 3/32X23 27/64	
Net Weight	lb	69.45	63.93	
Gross Weight	lb	74.96	69.45	
Refrigerant		R410A	R410A	
Refrigerant Charge	oz	31.8	24.7	
Connection Pipe	Length	ft	24.6	24.6
	Gas Additional Charge	oz/ft	0.2	0.2
	Outer Diameter Liquid Pipe	inch	Φ1/4	Φ1/4
	Outer Diameter Gas Pipe	inch	Φ3/8	Φ3/8
	Max Distance Height	ft	65	65
	Max Distance Length	ft	100	100
Note:The connection pipe applies metric diameter.				

The above data is subject to change without notice. Please refer to the nameplate of the unit.

Model			KW12HQ3B8A	KW09HQ3B8A	
Product Code			CB438008200_L74316	CB438008000_L74316	
Power Supply	Rated Voltage	V~	115	115	
	Rated Frequency	Hz	60	60	
	Phases		1	1	
Power Supply Mode			Outdoor	Outdoor	
Cooling Capacity(Min~Max)		Btu/h	12000(3753~12500)	9000	
Heating Capacity(Min~Max)		Btu/h	13000(3412~15013)	9500	
Cooling Power Input(Min~Max)		W	1193(380~1300)	900	
Heating Power Input(Min~Max)		W	1250(350~1350)	870	
Cooling Power Current		A	13.5	10.87	
Heating Power Current		A	13.8	10.36	
Rated Input		W	1350	1270	
Rated Current		A	13.5	12.66	
Air Flow Volume(SH/H/M/L)		CFM	400/318/241/194	318/288/241/171	
Dehumidifying Volume		Pint/h	2.96	1.69	
EER		(Btu/h)/W	10.06	10.00	
COP		(Btu/h)/W	10.40	10.92	
SEER			16	18.00	
HSPF			9	9.00	
Application Area		yd <sup>2</sup>	19.14-28.70	14.35-21.53	
Indoor Unit	Model of indoor unit		KW12HQ3B8AI	KW09HQ3B8AI	
	Indoor Unit Product Code		CB438N08200_L74316	CB438N08000_L74316	
	Fan Type		Cross-flow	Cross-flow	
	Diameter Length(DXL)		inch	Φ3 7/8X24 15/16	Φ3 7/8X24 15/16
	Fan Motor Cooling Speed(SH/H/M/L)		r/min	1350/1200/1000/800	1350/1200/1050/750
	Fan Motor Heating Speed(SH/H/M/L)		r/min	1350/1200/1000/900	1350/1200/1050/850
	Output of Fan Motor		W	20	20
	Fan Motor RLA		A	0.25	0.24
	Fan Motor Capacitor		μF	4	4
	Evaporator Form			Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter		inch	Φ3/16	Φ3/16
	Row-fin Gap		inch	2-1/18	2-1/18
	Coil Length (LXDXW)		inch	25X7/8X12 1/16	23X7/8X10 1/2
	Swing Motor Model			MP24BA	MP24AA
	Output of Swing Motor		W	1.5	1.5
	Fuse		A	3.15	3.15
	Sound Pressure Level(SH/H/M/L)		dB (A)	43/39/35/29	43/38/34/28
	Sound Power Level(SH/H/M/L)		dB (A)	53/49/45/39	53/48/44/28
	Dimension (WXHXD)		inch	33 1/4X11 3/8X8 1/4	31 1/8X10 13/16X7 7/8
	Dimension of Carton Box (LXWXH)		inch	36 1/8X10 15/16X14 5/16	34X10 9/16X13 7/8
Dimension of Package (LXWXH)		inch	36 1/4X11 1/16X14 15/16	34 1/8X10 11/16X14 7/16	
Net Weight		lb	23.15	20.94	
Gross Weight		lb	27.56	25.35	

Outdoor Unit	Model of Outdoor Unit		KW12HQ3B8AO	KW09HQ3B8AO
	Outdoor Unit Product Code		CB425W07900_L74316	CB425W08200_L74316
	Compressor Manufacturer/Trademark		ZHUHAI LANDA COMPRESSOR CO.,LTD	ZHUHAI LANDA COMPRESSOR CO.,LTD
	Compressor Model		QXA-A091zE190	QXA-A091zE190
	Compressor Oil		FVC68D or RB 68EP	FVC68D or RB 68EP
	Compressor Type		Rotary	Rotary
	Compressor Locked Rotor Amp (L.R.A)	A	40	40
	Compressor RLA	A	15.23	12.62
	Compressor Power Input	W	980	980
	Overload Protector		1NT11L-6233 or KSD115°C or HPC115/95U1	1NT11L-6233 or KSD115°C or HPC115/95U1
	Throttling Method		Electric Expansion Valve	Electric Expansion Valve
	Operation temp	°F	61~86	61~86
	Ambient temp (cooling)	°F	0~115	0~115
	Ambient temp (heating)	°F	-4~75	-4~75
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	inch	Φ1/4	Φ1/4
	Rows-fin Gap	inch	2-1/18	1-1/18
	Coil Length (LXDXW)	inch	28X1 1/2X20	29 3/4X3/4X20
	Fan Motor Speed	rpm	900	850
	Output of Fan Motor	W	30	30
	Fan Motor RLA	A	0.23	0.24
	Fan Motor Capacitor	μF	/	/
	Air Flow Volume of Outdoor Unit	CFM	1059	1059
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	inch	Φ15 3/4	Φ15 3/4
	Defrosting Method		Automatic Defrosting	/
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IPX4	IPX4
	Permissible Excessive Operating Pressure for the Discharge Side	PSIG	550	550
	Permissible Excessive Operating Pressure for the Suction Side	PSIG	240	240
	Sound Pressure Level (H/M/L)	dB (A)	53/-/-	52/-/-
Sound Power Level (H/M/L)	dB (A)	63/-/-	62/-/-	
Dimension (WXHXD)	inch	33 3/8X21 1/4X12 5/8	33 3/8X21 1/4X12 5/8	
Dimension of Carton Box (LXWXH)	inch	34 9/16X14 3/16X22 13/16	34 9/16X14 3/16X22 13/16	
Dimension of Package (LXWXH)	inch	34 11/16X14 5/16X23 7/16	34 11/16X14 5/16X23 7/16	
Net Weight	lb	67.24	62.83	
Gross Weight	lb	72.75	68.34	
Refrigerant		R410A	R410A	
Refrigerant Charge	oz	31.8	24.7	
Connection Pipe	Length	ft	24.6	24.6
	Gas Additional Charge	oz/ft	0.2	0.2
	Outer Diameter Liquid Pipe	inch	Φ1/4	Φ1/4
	Outer Diameter Gas Pipe	inch	Φ3/8	Φ3/8
	Max Distance Height	ft	49.2	32.8
	Max Distance Length	ft	98.4	65.6
Note:The connection pipe applies metric diameter.				

The above data is subject to change without notice. Please refer to the nameplate of the unit.

Model			KW09HQ2B8D	KW12HQ2B8D
Product Code			CB438002301_L74316	CB438002701_L74316
Power Supply	Rated Voltage	V~	208/230	208/230
	Rated Frequency	Hz	60	60
	Phases		1	1
Power Supply Mode			Outdoor	Outdoor
Cooling Capacity(Min~Max)		Btu/h	9000(3100~9600)	12000(3100~13000)
Heating Capacity(Min~Max)		Btu/h	11000(1911~12000)	13000(2400~14000)
Cooling Power Input(Min~Max)		W	630(160~1300)	960(200~1350)
Heating Power Input(Min~Max)		W	1020(160~1350)	1100(400~1400)
Cooling Power Current		A	2.80	4.50
Heating Power Current		A	3.50	5.50
Rated Input		W	1350	1400
Rated Current		A	6.0	6.3
Air Flow Volume(SH/H/M/L)		CFM	377/288/241/171	400/288/241/171
Dehumidifying Volume		Pint/h	1.69	2.96
EER		(Btu/h)/W	14.29	12.5
COP		(Btu/h)/W	10.78	11.82
SEER			23.00	22.00
HSPF			10.50	10.10
Application Area		yd <sup>2</sup>	14.35-21.53	19.14-28.70
Indoor Unit	Model of indoor unit		KW09HQ2B8DI	KW12HQ2B8DI
	Indoor Unit Product Code		CB438N02301_L74316	CB438N02701_L74316
	Fan Type		Cross-flow	Cross-flow
	Diameter Length(DXL)		inch	Φ3 55/64X25
	Fan Motor Cooling Speed(SH/H/M/L)		r/min	1350/1200/1050/750
	Fan Motor Heating Speed(SH/H/M/L)		r/min	1300/1150/1000/900
	Output of Fan Motor		W	20
	Fan Motor RLA		A	0.09
	Fan Motor Capacitor		μF	/
	Evaporator Form			Aluminum Fin-copper Tube
	Pipe Diameter		inch	Φ3/16
	Row-fin Gap		inch	2-1/18
	Coil Length (LXDXW)		inch	25X7/8X12 1/16
	Swing Motor Model			MP24BA
	Output of Swing Motor		W	1.5
	Fuse		A	3.15
	Sound Pressure Level(SH/H/M/L)		dB (A)	43/39/35/29
	Sound Power Level(SH/H/M/L)		dB (A)	53/49/45/39
	Dimension (WXHXD)		inch	33 1/4X11 3/8X8 7/32
	Dimension of Carton Box (LXWXH)		inch	36 9/64X11X14 21/64
Dimension of Package (LXWXH)		inch	36 1/4X11X15	
Net Weight		lb	22.05	
Gross Weight		lb	26.46	

Outdoor Unit	Model of Outdoor Unit		KW09HQ2B8DO	KW12HQ2B8DO
	Outdoor Unit Product Code		CB419W04300_L74316	CB419W04500_L74316
	Compressor Manufacturer/Trademark		ZHUHAI GREE DAIKIN DEVICE CO.,LTD	ZHUHAI GREE DAIKIN DEVICE CO.,LTD
	Compressor Model		1GDY23AXD	1GDY23AXD
	Compressor Oil		DAPHNE FVC50K	DAPHNE FVC50K
	Compressor Type		Swing	Swing
	Compressor Locked Rotor Amp (L.R.A)	A	/	/
	Compressor RLA	A	6.6	6.6
	Compressor Power Input	W	845	845
	Overload Protector		KSD115°C or HPC115/95	KSD115°C or HPC115/95
	Throttling Method		Electron expansion valve	Electron expansion valve
	Operation temp	°F	61~86	61~86
	Ambient temp (cooling)	°F	0~115	0~115
	Ambient temp (heating)	°F	-4~75	-4~75
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	inch	Φ3/8	Φ3/8
	Rows-fin Gap	inch	2-1/16	2-1/16
	Coil Length (LXDXW)	inch	29 13/32 X1 3/4X20	29 13/32X1 3/4X22
	Fan Motor Speed	rpm	900	900
	Output of Fan Motor	W	30	30
	Fan Motor RLA	A	0.36	0.36
	Fan Motor Capacitor	μF	/	/
	Air Flow Volume of Outdoor Unit	CFM	1059	1177
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	inch	Φ15 3/4	Φ15 3/4
	Defrosting Method		Automatic Defrosting	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IP24	IP24
	Permissible Excessive Operating Pressure for the Discharge Side	PSIG	550	550
	Permissible Excessive Operating Pressure for the Suction Side	PSIG	240	240
	Sound Pressure Level (H/M/L)	dB (A)	53/-/-	54/-/-
	Sound Power Level (H/M/L)	dB (A)	63/-/-	64/-/-
	Dimension (WXHXD)	inch	33 3/8X21 1/4X12 5/8	33 3/8X21 1/4X12 5/8
Dimension of Carton Box (LXWXH)	inch	34 9/16X14 3/16X22 13/16	34 9/16X14 3/16X22 13/16	
Dimension of Package (LXWXH)	inch	34 11/16X14 5/16X23 7/16	34 11/16X14 5/16X23 7/16	
Net Weight	lb	78.26	85.98	
Gross Weight	lb	83.77	92.59	
Refrigerant		R410A	R410A	
Refrigerant Charge	oz	45.86	47.62	
Connection Pipe	Length	ft	24.6	24.6
	Gas Additional Charge	oz/ft	0.2	0.2
	Outer Diameter Liquid Pipe	inch	Φ1/4	Φ1/4
	Outer Diameter Gas Pipe	inch	Φ3/8	Φ1/2
	Max Distance Height	ft	32.8	32.8
	Max Distance Length	ft	49.2	65.6
	Note:The connection pipe applies metric diameter.			

The above data is subject to change without notice. Please refer to the nameplate of the unit.



Model			KW18HQ1B8D	KW24HQ1B8D	
Product Code			CB438001502_L74316	CB438001802_L74316	
Power Supply	Rated Voltage	V~	208/230	208/230	
	Rated Frequency	Hz	60	60	
	Phases		1	1	
Power Supply Mode			Outdoor	Outdoor	
Cooling Capacity(Min~Max)		Btu/h	18000(7165~20001)	22000(8630~23200)	
Heating Capacity(Min~Max)		Btu/h	19000(7336~23498)	23000(8650~26000)	
Cooling Power Input(Min~Max)		W	1920(570~2600)	2260(600~27000)	
Heating Power Input(Min~Max)		W	2000(580~2600)	2300(610~2750)	
Cooling Power Current		A	8.5	10.03	
Heating Power Current		A	8.9	10.20	
Rated Input		W	2600	2750	
Rated Current		A	11.54	12.20	
Air Flow Volume(SH/H/M/L)		CFM	471/403/341/282	706/647/589/530	
Dehumidifying Volume		Pint/h	3.80	4.23	
EER		(Btu/h)/W	9.37	9.73	
COP		(Btu/h)/W	9.50	10.00	
SEER			16.00	16.00	
HSPF			9.00	9.00	
Application Area		yd <sup>2</sup>	27.50-40.66	32.29-50.23	
Indoor Unit	Model of indoor unit		KW18HQ1B8DI	KW24HQ1B8DI	
	Indoor Unit Product Code		CB438N01502_L74316	CB438N01802_L74316	
	Fan Type		Cross-flow	Cross-flow	
	Diameter Length(DXL)		inch	Φ4 3/16X27 13/16	Φ4 1/4X32 11/16
	Fan Motor Cooling Speed(SH/H/M/L)		r/min	1350/1200/1050/900	1250/1100/900/800
	Fan Motor Heating Speed(SH/H/M/L)		r/min	1300/1200/1100/900	1150/1000/900/850
	Output of Fan Motor		W	35	30
	Fan Motor RLA		A	0.37	0.32
	Fan Motor Capacitor		μF	2.5	3
	Evaporator Form			Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter		inch	Φ5/16	Φ5/16
	Row-fin Gap		inch	2-1/16	2-1/16
	Coil Length (LXDXW)		inch	28 1/8X1X12	33 1/4X1X13 1/2
	Swing Motor Model			MP35CJ	MP35CJ
	Output of Swing Motor		W	2.5	2.5
	Fuse		A	3.15	3.15
	Sound Pressure Level(SH/H//M/L)		dB (A)	46/42/39/35	48/44/40/36
	Sound Power Level(SH/H//M/L)		dB (A)	56/52/49/45	58/54/50/46
	Dimension (WXHXD)		inch	38 3/16X11 13/16X8 13/16	42 7/16X12 13/16X9 11/16
	Dimension of Carton Box (LXWXH)		inch	40 7/8X15X12	45X16 1/8X13 3/16
	Dimension of Package (LXWXH)		inch	41X15X12 5/8	45 3/16X16 1/4X13 3/4
Net Weight		lb	29.76	37.48	
Gross Weight		lb	36.38	45.19	

Outdoor Unit	Model of Outdoor Unit		KW18HQ1B8DO	KW24HQ1B8DO
	Outdoor Unit Product Code		CB427W02000_L74316	CB427W02400_L74316
	Compressor Manufacturer/Trademark		ZHUHAI LANDA COMPRESSOR CO.,LTD	ZHUHAI LANDA COMPRESSOR CO.,LTD
	Compressor Model		QXA-B141zF030A	QXA-B141zF030A
	Compressor Oil		RB68EP	68EP
	Compressor Type		Rotary	Rotary
	Compressor Locked Rotor Amp (L.R.A)	A	25	25.00
	Compressor RLA	A	12.08	12.18
	Compressor Power Input	W	1440	1440
	Overload Protector		1NT11L-6233 or KSD115°C or HPC115/95U1	1NT11L-6233 or KSD115°C or HPC115/95U1
	Throttling Method		Capillary	Capillary
	Operation temp	°F	60.8~86	60.8~86
	Ambient temp (cooling)	°F	0~115	0~115
	Ambient temp (heating)	°F	-4~75	-4~75
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	inch	Φ3/8	Φ3/8
	Rows-fin Gap	inch	1-1/16	2-1/16
	Coil Length (LXD <sub>X</sub> W)	inch	33 5/8X26X7/8	33 5/16X1 3/4X26
	Fan Motor Speed	rpm	800	800
	Output of Fan Motor	W	60	60
	Fan Motor RLA	A	0.52	0.4
	Fan Motor Capacitor	μF	/	/
	Air Flow Volume of Outdoor Unit	CFM	1883	1883
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	inch	Φ20 1/2	Φ20 1/2
	Defrosting Method		Automatic Defrosting	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IPX4	IPX4
	Permissible Excessive Operating Pressure for the Discharge Side	ISPG	550	550
	Permissible Excessive Operating Pressure for the Suction Side	ISPG	240	240
Sound Pressure Level (H/M/L)	dB (A)	56/-/-	59/-/-	
Sound Power Level (H/M/L)	dB (A)	66/-/-	69/-/-	
Dimension (WXHXD)	inch	38X27 9/16X15 5/8	38X27 9/16X15 5/8	
Dimension of Carton Box (LXWXH)	inch	40 3/8X17 7/8X29	40 3/8X17 7/8X29	
Dimension of Package (LXWXH)	inch	40 1/2X18X29 1/2	40 1/2X18X29 1/2	
Net Weight	lb	95.90	110.23	
Gross Weight	lb	105.82	120.15	
Refrigerant		R410A	R410A	
Refrigerant Charge	oz	49.4	65.25	
Connection Pipe	Length	ft	24.6	24.6
	Gas Additional Charge	oz/ft	0.2	0.2
	Outer Diameter Liquid Pipe	inch	Φ1/4	Φ1/4
	Outer Diameter Gas Pipe	inch	Φ1/2	Φ5/8
	Max Distance Height	ft	32.8	32.8
	Max Distance Length	ft	82	82
	Note:The connection pipe applies metric diameter.			

The above data is subject to change without notice; please refer to the nameplate of the unit.

Model			KW18CQ1B8D	KW24CQ1B8D	
Product Code			CB438001901_L74316	CB438001701_L74316	
Power Supply	Rated Voltage	V~	208/230	208/230	
	Rated Frequency	Hz	60	60	
	Phases		1	1	
Power Supply Mode			Outdoor	Outdoor	
Cooling Capacity(Min~Max)		Btu/h	18000(7165~20001)	22000(8630~23200)	
Heating Capacity(Min~Max)		Btu/h	/	/	
Cooling Power Input(Min~Max)		W	1800(570~2600)	2260(600~27000)	
Heating Power Input(Min~Max)		W	/	/	
Cooling Power Current		A	8	10.03	
Heating Power Current		A	/	/	
Rated Input		W	2600	2700	
Rated Current		A	11.54	11.98	
Air Flow Volume(SH/H/M/L)		CFM	471/403/341/282	706/647/589/530	
Dehumidifying Volume		Pint/h	3.80	4.23	
EER		(Btu/h)/W	10.00	9.73	
COP		(Btu/h)/W	/	/	
SEER			16.00	16.00	
HSPF			/	/	
Application Area		yd <sup>2</sup>	27.50-40.66	32.29-50.23	
Indoor Unit	Model of indoor unit		KW18CQ1B8DI	KW24CQ1B8DI	
	Indoor Unit Product Code		CB438N01901_L74316	CB438N01701_L74316	
	Fan Type		Cross-flow	Cross-flow	
	Diameter Length(DXL)		inch	Φ4 3/16X27 13/16	Φ4 1/4X32 11/16
	Fan Motor Cooling Speed(SH/H/M/L)		r/min	1350/1200/1050/900	1250/1100/900/800
	Fan Motor Heating Speed(SH/H/M/L)		r/min	/	/
	Output of Fan Motor		W	35	30
	Fan Motor RLA		A	0.37	0.32
	Fan Motor Capacitor		μF	2.5	3
	Evaporator Form			Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter		inch	Φ5/16	Φ5/16
	Row-fin Gap		inch	2-1/16	2-1/16
	Coil Length (LXDXW)		inch	28 1/8X1X12	33 1/4X1X13 1/2
	Swing Motor Model			MP35CJ	MP35CJ
	Output of Swing Motor		W	2.5	2.5
	Fuse		A	3.15	3.15
	Sound Pressure Level(SH/H//M/L)		dB (A)	46/42/39/35	48/44/40/36
	Sound Power Level(SH/H//M/L)		dB (A)	56/52/49/45	58/54/50/46
	Dimension (WXHXD)		inch	38 3/16X11 13/16X8 13/16	42 7/16X12 13/16X9 11/16
	Dimension of Carton Box (LXWXH)		inch	40 7/8X15X12	45X16 1/8X13 3/16
Dimension of Package (LXWXH)		inch	41X15X12 5/8	45 3/16X16 1/4X13 3/4	
Net Weight		lb	29.76	37.48	
Gross Weight		lb	36.38	45.19	

Outdoor Unit	Model of Outdoor Unit		KW18CQ1B8DO	KW24CQ1B8DO
	Outdoor Unit Product Code		CB427W01700_L74316	CB427W02300_L74316
	Compressor Manufacturer/Trademark		ZHUHAI LANDA COMPRESSOR CO.,LTD	ZHUHAI LANDA COMPRESSOR CO.,LTD
	Compressor Model		QXA-B141zF030A	QXA-B141zF030A
	Compressor Oil		RB68EP	RB68EP
	Compressor Type		Rotary	Rotary
	Compressor Locked Rotor Amp (L.R.A)	A	25	25
	Compressor RLA	A	12.08	11.29
	Compressor Power Input	W	1440	1440
	Overload Protector		1NT11L-6233 or KSD115 <sup>°</sup> C or HPC115/95U1	1NT11L-6233 or KSD115 <sup>°</sup> C or HPC115/95U1
	Throttling Method		Capillary	Electron expansion valve
	Operation temp	°F	60.8~86	60.8~86
	Ambient temp (cooling)	°F	0~115	0~115
	Ambient temp (heating)	°F	/	/
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	inch	Φ5/16	Φ3/8
	Rows-fin Gap	inch	1-1/16	2-1/16
	Coil Length (LXDXW)	inch	34 11/16X26X7/8	33 5/16X1 3/4X26
	Fan Motor Speed	rpm	800	800
	Output of Fan Motor	W	60	60
	Fan Motor RLA	A	0.52	0.4
	Fan Motor Capacitor	μF	/	/
	Air Flow Volume of Outdoor Unit	CFM	1883	3200
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	inch	Φ20 1/2	Φ20 1/2
	Defrosting Method		/	/
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IPX4	IPX4
	Permissible Excessive Operating Pressure for the Discharge Side	ISPG	550	550
	Permissible Excessive Operating Pressure for the Suction Side	ISPG	240	240
	Sound Pressure Level (H/M/L)	dB (A)	56/-/-	58/-/-
	Sound Power Level (H/M/L)	dB (A)	66/-/-	68/-/-
	Dimension (WXHXD)	inch	38X27 9/16X15 5/8	38X27 9/16X15 5/8
	Dimension of Carton Box (LXWXH)	inch	40 3/8X17 7/8X29	40 3/8X17 7/8X29
	Dimension of Package (LXWXH)	inch	40 1/2X18X29 1/2	40 1/2X18X29 1/2
Net Weight	lb	90.39	101.41	
Gross Weight	lb	100.31	111.33	
Refrigerant		R410A	R410A	
Refrigerant Charge	oz	35.3	56.4	
Connection Pipe	Length	ft	24.6	24.6
	Gas Additional Charge	oz/ft	0.2	0.2
	Outer Diameter Liquid Pipe	inch	Φ1/4	Φ1/4
	Outer Diameter Gas Pipe	inch	Φ1/2	Φ5/8
	Max Distance Height	ft	32.8	32.8
	Max Distance Length	ft	82	82
Note:The connection pipe applies metric diameter.				

The above data is subject to change without notice; please refer to the nameplate of the unit.

Model			KW18HQ3B8D	KW24HQ3B8D	
Product Code			CB438007800_L74316	CB438007900_L74316	
Power Supply	Rated Voltage	V~	208/230	208/230	
	Rated Frequency	Hz	60	60	
	Phases		1	1	
Power Supply Mode			Outdoor	Outdoor	
Cooling Capacity(Min~Max)		Btu/h	18000(3412~20472)	22000(8630~23200)	
Heating Capacity(Min~Max)		Btu/h	19800(3412~21837)	24000(8650~26000)	
Cooling Power Input(Min~Max)		W	1820(80~2350)	2260(600~27000)	
Heating Power Input(Min~Max)		W	2090(220~2350)	2300(610~2750)	
Cooling Power Current		A	8.1	10.03	
Heating Power Current		A	8.5	10.20	
Rated Input		W	2350	2750	
Rated Current		A	12	11.98	
Air Flow Volume(SH/H/M/L)		CFM	500/441/383/294	1200/1050/900/750	
Dehumidifying Volume		Pint/h	3.80	2.5	
EER		(Btu/h)/W	9.89	9.73	
COP		(Btu/h)/W	9.47	10.40	
SEER			18.00	18.00	
HSPF			9.00	10.00	
Application Area		yd <sup>2</sup>	27.50-40.66	32.29-50.23	
Indoor Unit	Model of indoor unit		KW18HQ3B8DI	KW24HQ3B8DI	
	Indoor Unit Product Code		CB438N07800_L74316	CB438N07900_L74316	
	Fan Type		Cross-flow	Cross-flow	
	Diameter Length(DXL)		inch	Φ4 3/16X27 13/16	Φ4 1/4X32 11/16
	Fan Motor Cooling Speed(SH/H/M/L)		r/min	1350/1200/1050/900	1300/1150/1000/850
	Fan Motor Heating Speed(SH/H/M/L)		r/min	1300/1200/1100/900	1300/1150/1000/850
	Output of Fan Motor		W	35	30
	Fan Motor RLA		A	0.37	0.32
	Fan Motor Capacitor		μF	2.5	3
	Evaporator Form			Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter		inch	Φ5/16	Φ5/16
	Row-fin Gap		inch	2-1/16	2-1/16
	Coil Length (LXDXW)		inch	28 1/8X1X12	33 1/4X1X13 1/2
	Swing Motor Model			MP35CJ	MP35CJ
	Output of Swing Motor		W	2.5	2.5
	Fuse		A	3.15	3.15
	Sound Pressure Level(SH/H//M/L)		dB (A)	47/44/40/35	49/46/42/36
	Sound Power Level(SH/H//M/L)		dB (A)	57/54/50/45	59/56/52/46
	Dimension (WXHXD)		inch	38 3/16X11 13/16X8 13/16	42 7/16X12 13/16X9 11/16
	Dimension of Carton Box (LXWXH)		inch	40 7/8X15X12	45X16 1/8X13 3/16
	Dimension of Package (LXWXH)		inch	41X15X12 5/8	45 3/16X16 1/4X13 3/4
Net Weight		lb	30.86	38.58	
Gross Weight		lb	37.48	45.19	

Outdoor Unit	Model of Outdoor Unit		KW18HQ3B8DO	KW24HQ3B8DO
	Outdoor Unit Product Code		CB425W07400_L74316	CB425W07700_L74316
	Compressor Manufacturer/Trademark		ZHUHAI LANDA COMPRESSOR CO.,LTD	ZHUHAI LANDA COMPRESSOR CO.,LTD
	Compressor Model		QXA-B141zF030A	QXA-B141zF030A
	Compressor Oil		RB68EP	RB68EP
	Compressor Type		Rotary	Rotary
	Compressor Locked Rotor Amp (L.R.A)	A	25	25
	Compressor RLA	A	12.08	12.18
	Compressor Power Input	W	1440	1440
	Overload Protector		1NT11L-6233 or KSD115°C or HPC115/95U1	NT11L-6233 or KSD115°C or HPC115/95U1
	Throttling Method		Electron expansion valve	Electron expansion valve
	Operation temp	°F	60.8~86	60.8~86
	Ambient temp (cooling)	°F	0~115	0~115
	Ambient temp (heating)	°F	-4~75	-4~75
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	inch	Φ3/8	Φ3/8
	Rows-fin Gap	inch	1-1/16	2-1/16
	Coil Length (LXDXW)	inch	33 5/8X26X7/8	33 5/16X1 3/4X26
	Fan Motor Speed	rpm	800	800
	Output of Fan Motor	W	60	60
	Fan Motor RLA	A	0.52	0.4
	Fan Motor Capacitor	μF	/	/
	Air Flow Volume of Outdoor Unit	CFM	1883	3200
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	inch	Φ20 1/2	Φ20 1/2
	Defrosting Method		Automatic Defrosting	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IPX4	IPX4
	Permissible Excessive Operating Pressure for the Discharge Side	ISPG	550	550
	Permissible Excessive Operating Pressure for the Suction Side	ISPG	240	240
	Sound Pressure Level (H/M/L)	dB (A)	57/-/-	58/-/-
	Sound Power Level (H/M/L)	dB (A)	67/-/-	68/-/-
Dimension (WXHxD)	inch	38X27 9/16X15 5/8	38X27 9/16X15 5/8	
Dimension of Carton Box (LXWXH)	inch	40 3/8X17 7/8X29	40 3/8X17 7/8X29	
Dimension of Package (LXWXH)	inch	40 1/2X18X29 1/2	40 1/2X18X29 1/2	
Net Weight	lb	97.00	103.62	
Gross Weight	lb	106.92	113.54	
Refrigerant		R410A	R410A	
Refrigerant Charge	oz	45.86	56.4	
Connection Pipe	Length	ft	24.6	24.6
	Gas Additional Charge	oz/ft	0.2	0.2
	Outer Diameter Liquid Pipe	inch	Φ1/4	Φ1/4
	Outer Diameter Gas Pipe	inch	Φ1/2	Φ5/8
	Max Distance Height	ft	32.8	32.8
	Max Distance Length	ft	82	82
Note:The connection pipe applies metric diameter.				

The above data is subject to change without notice; please refer to the nameplate of the unit.

Model			KW24HQ2B8D	KW18CQ2B8D	
Product Code			CB438002401_L74316	CB438010000_L74316	
Power Supply	Rated Voltage	V~	208/230	208/230	
	Rated Frequency	Hz	60	60	
	Phases		1	1	
Power Supply Mode			Outdoor	Outdoor	
Cooling Capacity(Min~Max)		Btu/h	22000(6824~27296)	18000(6800~20000)	
Heating Capacity(Min~Max)		Btu/h	23000(6824~30708)	/	
Cooling Power Input(Min~Max)		W	1830(450~3000)	1380(450~2150)	
Heating Power Input(Min~Max)		W	2000(450~3000)	/	
Cooling Power Current		A	8.05	6.12	
Heating Power Current		A	8.35	/	
Rated Input		W	3000	2600	
Rated Current		A	14.49	10.39	
Air Flow Volume(SH/H//M/L)		CFM	706/647/589/530	559/488/412/335	
Dehumidifying Volume		Pint/h	4.23	1.8	
EER		(Btu/h)/W	12.02	13.00	
COP		(Btu/h)/W	11.50	/	
SEER			20	20	
HSPF			9	/	
Application Area		yd <sup>2</sup>	32.29-50.23	27.51-40.66	
Indoor Unit	Model of indoor unit		KW24HQ2B8DI	KW18CQ2B8DI	
	Indoor Unit Product Code		CB438N02401_L74316	CB438N10000_L74316	
	Fan Type		Cross-flow	Cross-flow	
	Diameter Length(DXL)		inch	Φ4 1/4X32 7/10	Φ4 3/16X27 13/16
	Fan Motor Cooling Speed(SH/H/M/L)		r/min	1300/1100/900/850	1400/1200/1050/800
	Fan Motor Heating Speed(SH/H/M/L)		r/min	1300/1100/1000/900	/
	Output of Fan Motor		W	60	60
	Fan Motor RLA		A	0.38	0.24
	Fan Motor Capacitor		μF	/	/
	Evaporator Form			Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter		inch	Φ9/32	Φ9/32
	Row-fin Gap		inch	2-1/16	2-1/18
	Coil Length (LXDXW)		inch	33 1/4X1X13 1/2	28 9/64X1X12
	Swing Motor Model			MP35CJ	MP35CJ
	Output of Swing Motor		W	2.5	2.5
	Fuse		A	3.15	3.15
	Sound Pressure Level(SH/H/M/L)		dB (A)	48/44/40/36	47/43/40/39
	Sound Power Level(SH/H/M/L)		dB (A)	58/54/50/46	57/53/50/49
	Dimension (WXHXD)		inch	42 7/16X12 51/64X9 11/16	38 13/64X11 13/16X8 13/16
	Dimension of Carton Box (LXWXH)		inch	45 5/64X16 9/64X13 3/16	40 55/64X15X12
Dimension of Package (LXWXH)		inch	45 13/64X16 17/64X13 25/32	41X15X12 39/64	
Net Weight		lb	34.17	27.56	
Gross Weight		lb	41.89	34.17	

Outdoor Unit	Model of Outdoor Unit		KW24HQ2B8DO	KW18CQ2B8DO
	Outdoor Unit Product Code		CB419W03600_L74316	CB419W06600_L74316
	Compressor Manufacturer/Trademark		ZHUHAI LANDA COMPRESSOR CO,LTD.	ZHUHAI LANDA COMPRESSOR CO,LTD.
	Compressor Model		QXAS-D23zX090A	QXA-B141zF030A
	Compressor Oil		RB68EP	RB68EP
	Compressor Type		Rotary	Rotary
	Compressor Locked Rotor Amp (L.R.A)	A	25	25
	Compressor RLA	A	14.67	12.08
	Compressor Power Input	W	2550	1440
	Overload Protector		1NT11L-6233/HPC 115/95 / KSD115°C	1NT11L-6233 or KSD115°C or HPC115/95U1
	Throttling Method		Electron expansion valve	Electron expansion valve
	Operation temp	°F	61~86	61~86
	Ambient temp (cooling)	°F	0~115	0~115
	Ambient temp (heating)	°F	-4~75	/
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	inch	Φ9/32	Φ9/32
	Rows-fin Gap	inch	2-1/18	3-1/18
	Coil Length (LXDXW)	inch	37 31/64X1 1/2X19/32	36 13/16X1 1/2X25 63/64
	Fan Motor Speed	rpm	820	800
	Output of Fan Motor	W	92	60
	Fan Motor RLA	A	0.65	0.49
	Fan Motor Capacitor	μF	/	/
	Air Flow Volume of Outdoor Unit	CFM	2354	3200
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	inch	Φ21 21/32	Φ20 15/32
	Defrosting Method		Automatic Defrosting	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IP24	IP24
	Permissible Excessive Operating Pressure for the Discharge Side	PSIG	550	550
	Permissible Excessive Operating Pressure for the Suction Side	PSIG	240	240
	Sound Pressure Level (H/M/L)	dB (A)	59/-/-	55/-/-
	Sound Power Level (H/M/L)	dB (A)	69/-/-	65/-/-
Dimension (WXHXD)	inch	38 37/64X31 7/64X16 13/16	38X27 9/16X15 19/32	
Dimension of Carton Box (LXWXH)	inch	42 33/64X19X33	40 25/64X17 29/32X28 15/16	
Dimension of Package (LXWXH)	inch	42 41/64X19 7/32X33 21/32	40 33/64X18 5/16X29 33/64	
Net Weight	lb	142.20	102.51	
Gross Weight	lb	153.22	112.44	
Refrigerant		R410A	R410A	
Refrigerant Charge	oz	77.6	56.44	
Connection Pipe	Length	ft	24.6	24.6
	Gas Additional Charge	oz/ft	0.5	0.2
	Outer Diameter Liquid Pipe	inch	Φ1/4	Φ1/4
	Outer Diameter Gas Pipe	inch	Φ5/8	Φ5/8
	Max Distance Height	ft	32.8	32.8
	Max Distance Length	ft	82	82
	Note:The connection pipe applies metric diameter.			

The above data is subject to change without notice; please refer to the nameplate of the unit.



Model			KW24CQ2B8D	
Product Code			CB438008600_L74316	
Power Supply	Rated Voltage	V~	208/230	
	Rated Frequency	Hz	60	
	Phases		1	
Power Supply Mode			Outdoor	
Cooling Capacity(Min~Max)		Btu/h	22000(6800-29700)	
Heating Capacity(Min~Max)		Btu/h	/	
Cooling Power Input(Min~Max)		W	1650(450~3000)	
Heating Power Input(Min~Max)		W	/	
Cooling Power Current		A	7.21	
Heating Power Current		A	/	
Rated Input		W	3000	
Rated Current		A	14.49	
Air Flow Volume(SH/H/M/L)		CFM	706/647/589/530	
Dehumidifying Volume		Pint/h	2	
EER		(Btu/h)/W	13.30	
COP		(Btu/h)/W	/	
SEER			20	
HSPF			/	
Application Area		yd <sup>2</sup>	32.29-50.23	
Indoor Unit	Model of indoor unit		KW24CQ2B8DI	
	Indoor Unit Product Code		CB438N08600_L74316	
	Fan Type		Cross-flow	
	Diameter Length(DXL)		inch	Φ4 1/4X32 7/10
	Fan Motor Cooling Speed(SH/H/M/L)		r/min	1300/1100/900/850
	Fan Motor Heating Speed(SH/H/M/L)		r/min	/
	Output of Fan Motor		W	60
	Fan Motor RLA		A	0.38
	Fan Motor Capacitor		μF	/
	Evaporator Form			Aluminum Fin-copper Tube
	Pipe Diameter		inch	Φ9/32
	Row-fin Gap		inch	2-1/16
	Coil Length (LXDXW)		inch	33 1/4X1X13 1/2
	Swing Motor Model			MP35CJ
	Output of Swing Motor		W	2.5
	Fuse		A	3.15
	Sound Pressure Level(SH/H/M/L)		dB (A)	48/44/40/36
	Sound Power Level(SH/H/M/L)		dB (A)	58/54/50/46
	Dimension (WXHxD)		inch	42 7/16X12 51/64X9 11/16
	Dimension of Carton Box (LXWXH)		inch	45 5/64X16 9/64X13 3/16
Dimension of Package (LXWXH)		inch	45 13/64X16 17/64X13 25/32	
Net Weight		lb	34.17	
Gross Weight		lb	41.88	


Outdoor Unit	Model of Outdoor Unit		GWC24QE-D3DNA1G/O	
	Outdoor Unit Product Code		CB419W06500	
	Compressor Manufacturer/Trademark		ZHUHAI LANDA COMPRESSOR CO,LTD.	
	Compressor Model		QXAS-D23zX090	
	Compressor Oil		RB68EP	
	Compressor Type		Rotary	
	Compressor Locked Rotor Amp (L.R.A)	A		40
	Compressor RLA	A		14.67
	Compressor Power Input	W		2450
	Overload Protector			1NT11L-6233/HPC 115/95 /KSD115°C
	Throttling Method			Electron expansion valve
	Operation temp	°F		61~86
	Ambient temp (cooling)	°F		0~115
	Ambient temp (heating)	°F		/
	Condenser Form			Aluminum Fin-copper Tube
	Pipe Diameter	inch		Φ9/32
	Rows-fin Gap	inch		3-1/16
	Coil Length (LXD <sub>X</sub> W)	inch		35 9/32X2 1/2X29 7/16
	Fan Motor Speed	rpm		820
	Output of Fan Motor	W		92
	Fan Motor RLA	A		0.65
	Fan Motor Capacitor	μF		/
	Air Flow Volume of Outdoor Unit	CFM		4000
	Fan Type			Axial-flow
	Fan Diameter	inch		Φ21 21/32
	Defrosting Method			/
	Climate Type			T1
	Isolation			I
	Moisture Protection			IP24
	Permissible Excessive Operating Pressure for the Discharge Side	MPa		4.3
	Permissible Excessive Operating Pressure for the Suction Side	MPa		2.5
	Sound Pressure Level (H/M/L)	dB (A)		59/-/-
	Sound Power Level (H/M/L)	dB (A)		69/-/-
Dimension (WXHXD)	inch		38 37/64X31 7/64X16 13/16	
Dimension of Carton Box (LXWXH)	inch		42 33/64X19X33	
Dimension of Package (LXWXH)	inch		42 41/64X19 7/32X33 21/32	
Net Weight	lb		147.71	
Gross Weight	lb		158.73	
Refrigerant			R410A	
Refrigerant Charge	oz		81.1	
Connection Pipe	Length	ft	24.6	
	Gas Additional Charge	oz/ft	0.2	
	Outer Diameter Liquid Pipe	inch	Φ1/4	
	Outer Diameter Gas Pipe	inch	Φ5/8	
	Max Distance Height	ft	32.8	
	Max Distance Length	ft	82	
	Note:The connection pipe applies metric diameter.			

The above data is subject to change without notice; please refer to the nameplate of the unit.


## 2.2 Operation Characteristic Curve

09/12K

### Cooling

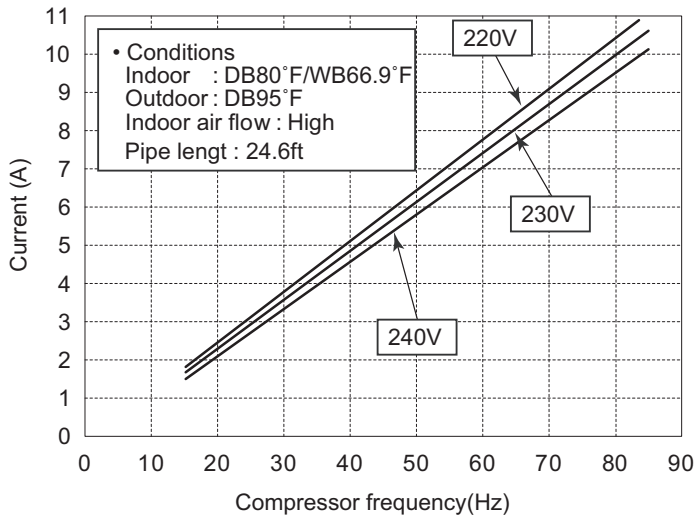


### Heating

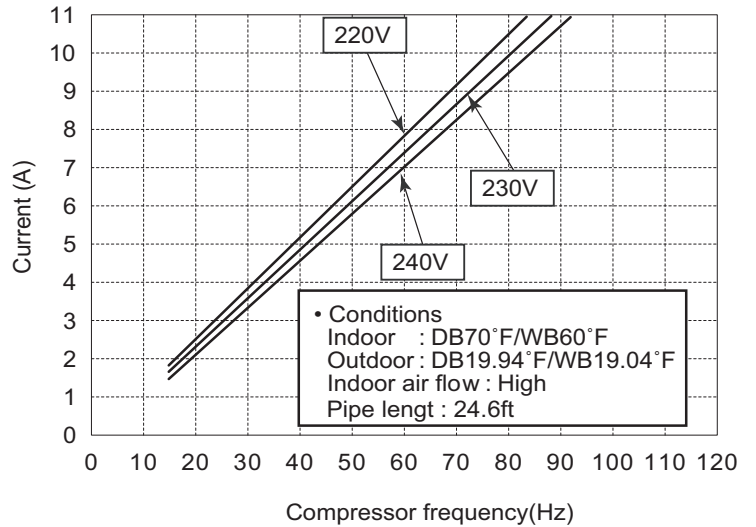


18/24K

### Cooling

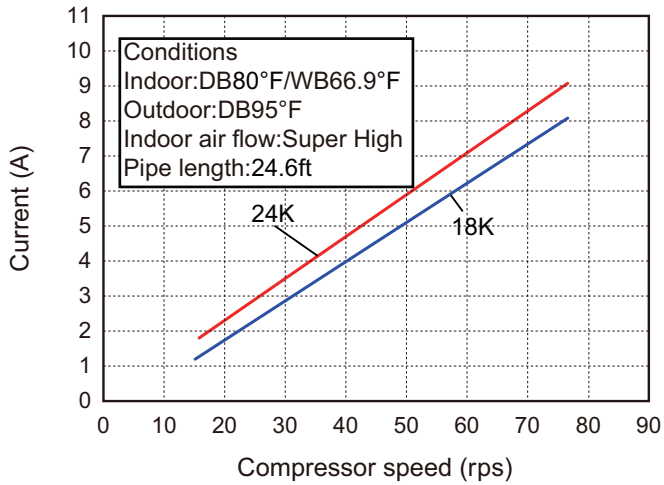


### Heating

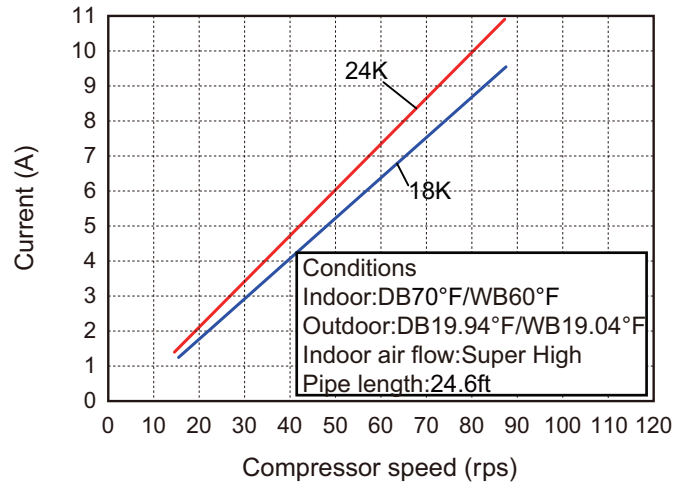


## 2.3 Capacity Variation Ratio According to Temperature

### Cooling

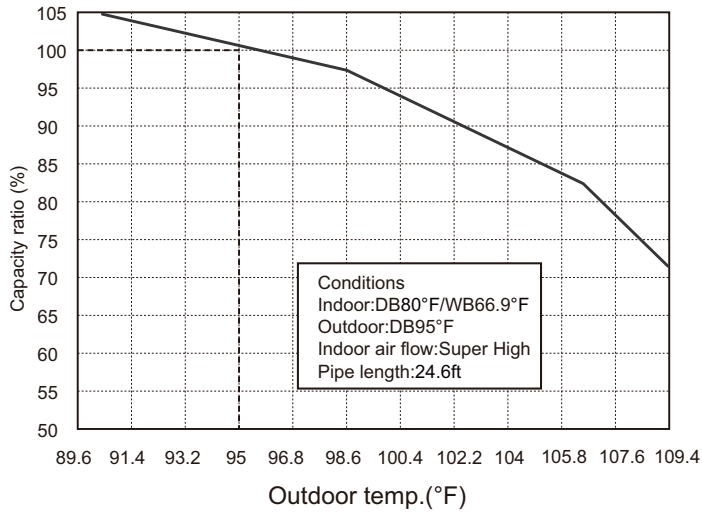


### Heating

All heating models is except:KW09HQ3B8DO

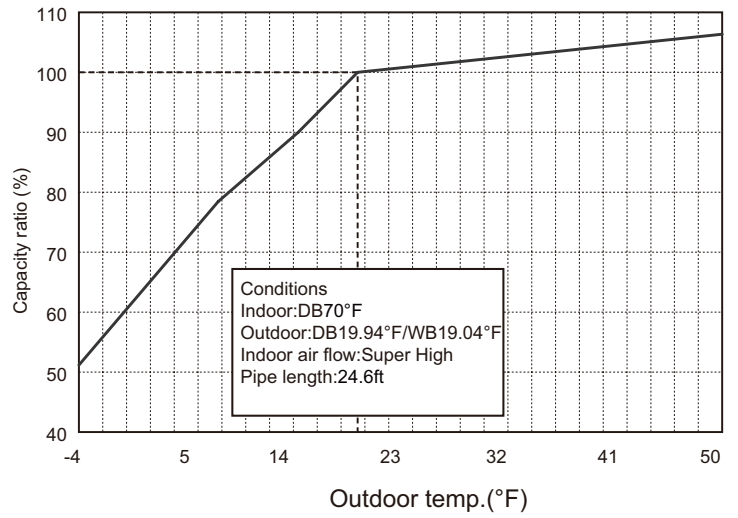

### KW09HQ3B8DO

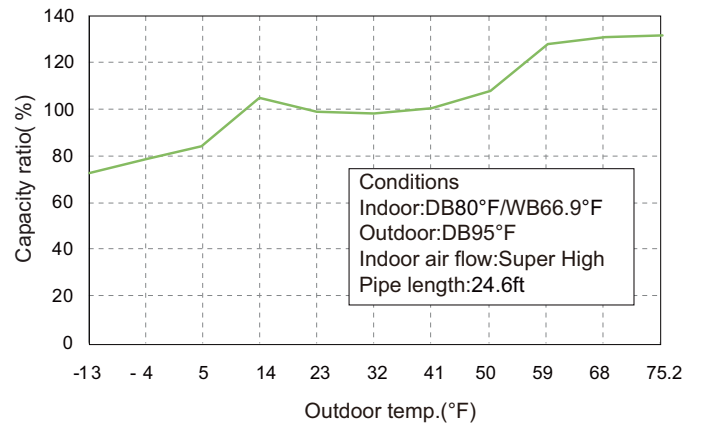

## 2.4 Cooling and Heating Data Sheet in Rated Frequency

### Cooling:

Rated cooling condition(°F) (DB/WB)		Model	Pressure of gas pipe connecting indoor and outdoor unit	Inlet and outlet pipe temperature of heat exchanger		Fan speed of indoor unit	Fan speed of outdoor unit	Compressor revolution (rps)
Indoor	Outdoor			T1 (°F)	T2 (°F)			
80/66.9	95/-	09K	130~144	in:46.4~51.8 out:51.8~57.2	in:167~181.4 out:98.6~118.4	Super High	High	52
80/66.9	95/-	12K	130~144	in:46.4~51.8 out:51.8~57.2	in:167~181.4 out:98.6~118.4	Super High	High	72
80/66.9	95/-	18K	130~142	in:46.4~51.8 out:51.8~57.2	in:167~181.4 out:98.6~118.4	Super High	High	73
80/66.9	95/-	24K	130~142	in:46.4~51.8 out:51.8~57.2	in:167~181.4 out:98.6~118.4	Super High	High	75

### Heating:

Rated heating condition(°F) (DB/WB)		Model	Pressure of gas pipe connecting indoor and outdoor unit	Inlet and outlet pipe temperature of heat exchanger		Fan speed of indoor unit	Fan speed of outdoor unit	Compressor revolution (rps)
Indoor	Outdoor			T1 (°F)	T2 (°F)			
70/60	19.94/19.04	09K	362~405	in:167~181.4 out:98.6~113	in:33.8~37.4 out:35.6~42.8	Super High	High	65
70/60	19.94/19.04	12K	362~405	in:167~181.4 out:98.6~113	in:33.8~37.4 out:35.6~42.8	Super High	High	77
70/60	19.94/19.04	18K	507~550	in:167~181.4 out:98.6~113	in:33.8~37.4 out:35.6~42.8	Super High	High	75
70/60	19.94/19.04	24K	507~550	in:167~181.4 out:98.6~113	in:33.8~37.4 out:35.6~42.8	Super High	High	80

### Instruction:

T1: Inlet and outlet pipe temperature of evaporator



T2: Inlet and outlet pipe temperature of condenser

P: Pressure at the side of big valve



Connection pipe length: 24.6ft.

## 2.5 Noise Curve

09/12K

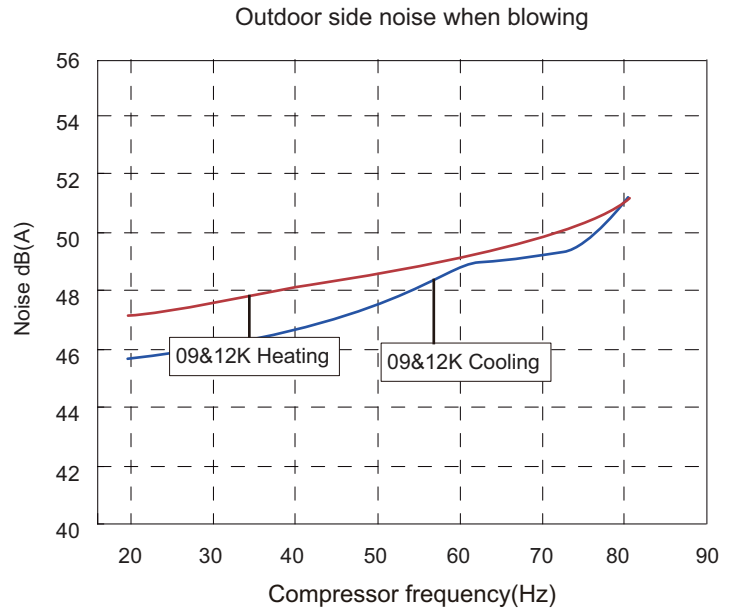
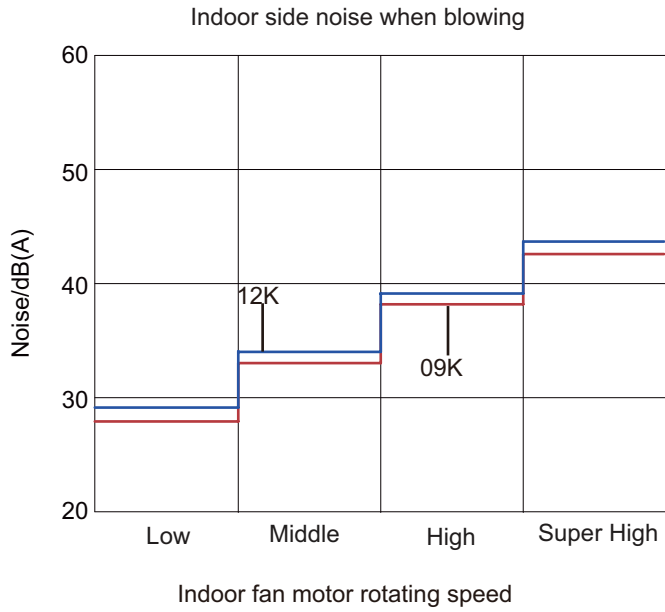


18/24K

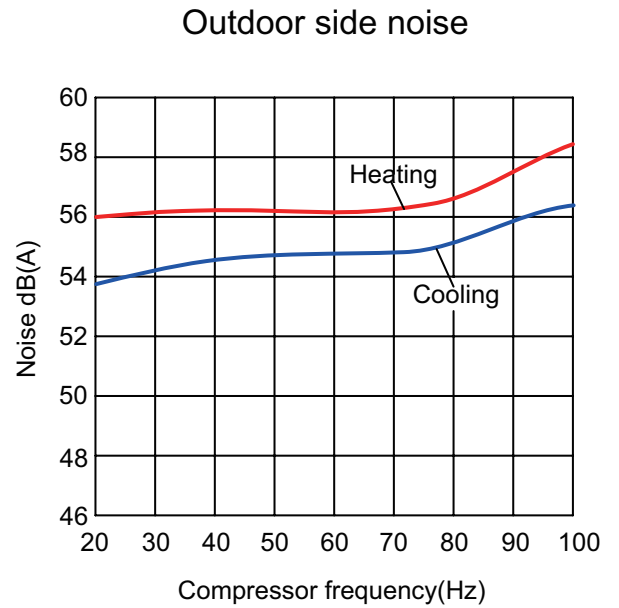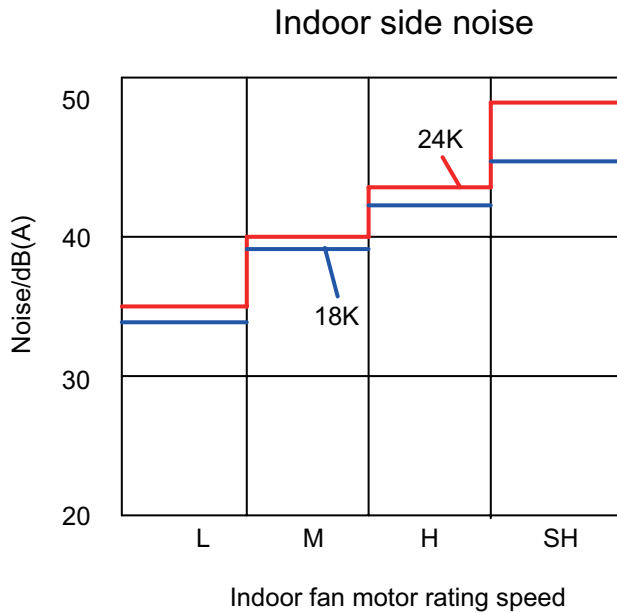



## 3. Outline Dimension Diagram

### 3.1 Indoor Unit

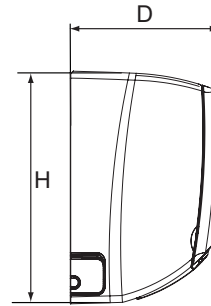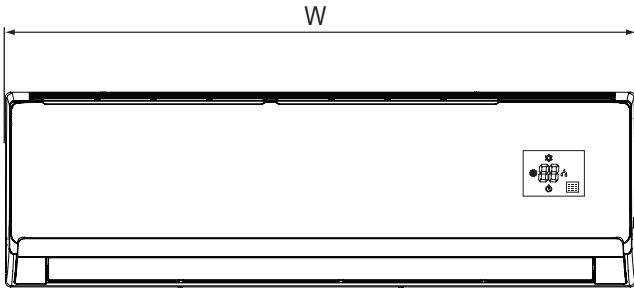



09K

12K KW09CQ2B8AI KW09CQ2B8DI KW09HQ2B8DI

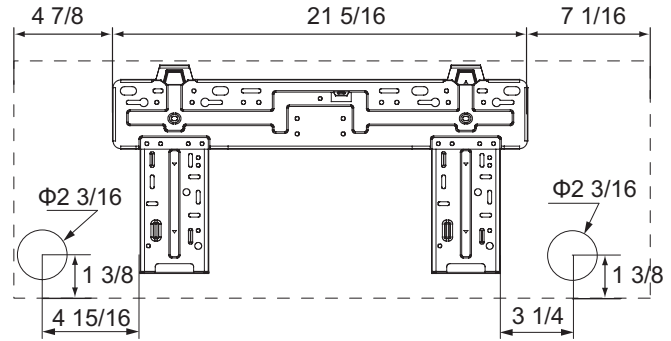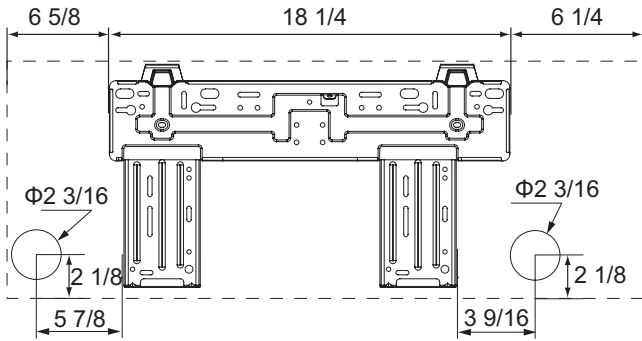

18K

24K

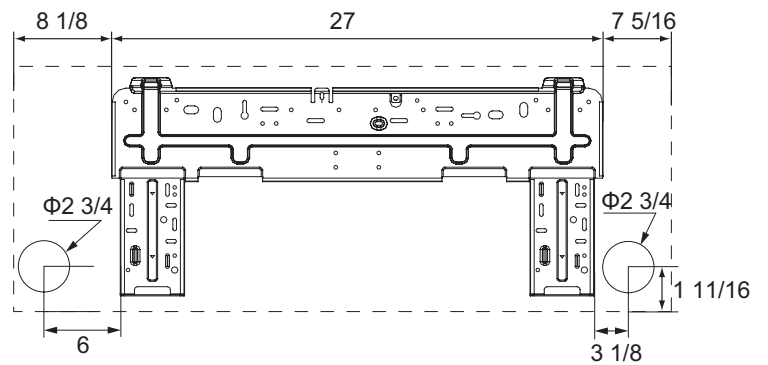
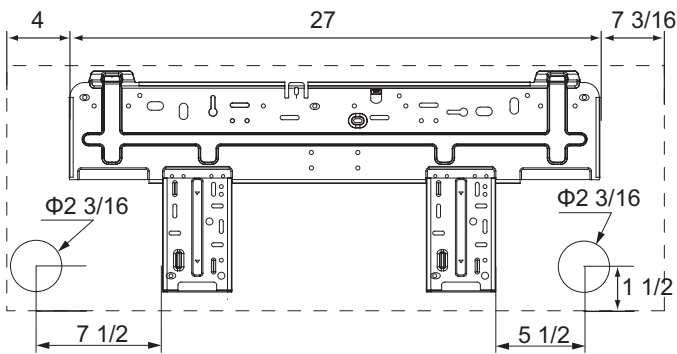


Models	W	H	D
09K	31 1/8	10 13/16	7 7/8
KW09CQ2B8AI KW09CQ2B8DI KW09HQ2B8DI	33 1/4	11 3/8	8 1/4
12K			
18K	38 3/16	11 13/16	8 13/16
24K	42 7/16	12 13/16	9 11/16

Unit:inch



### 3.2 Outdoor Unit

KW09HQ1B8AO  
KW12HQ1B8AO  
KW09HQ3B8AO  
KW12HQ3B8AO  
KW09HQ2B8AO  
KW12HQ2B8AO  
KW09CQ2B8AO  
KW12CQ2B8AO  
KW09CQ2B8DO  
KW12CQ2B8DO  
KW09HQ2B8DO  
KW12HQ2B8DO

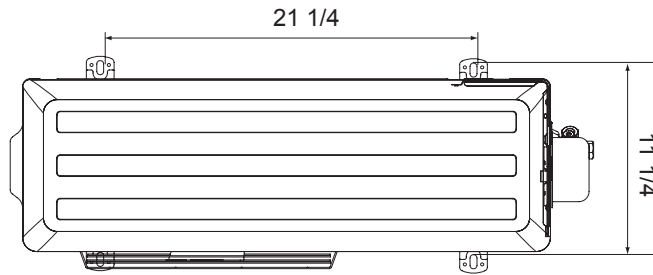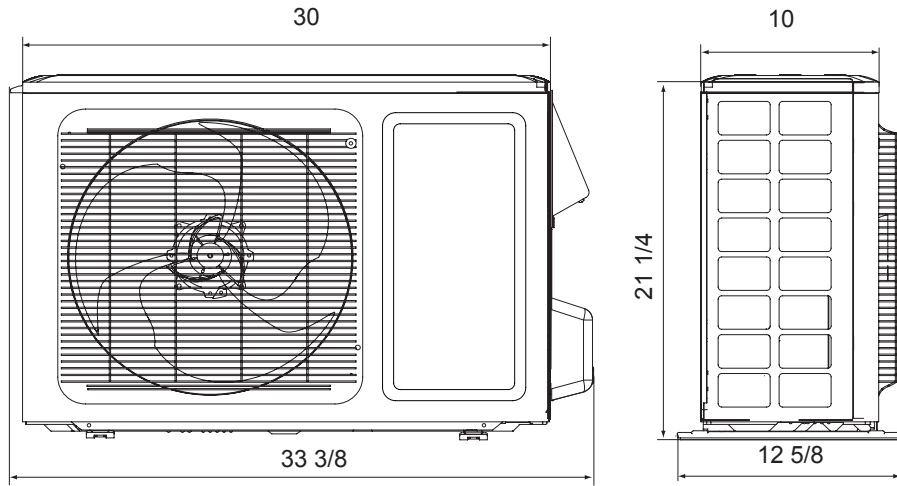

Unit:inch


KW09HQ1B8DO  
KW12HQ1B8DO  
KW12CQ1B8DO  
KW09HQ3B8DO  
KW12HQ3B8DO  
KW18HQ2B8DO

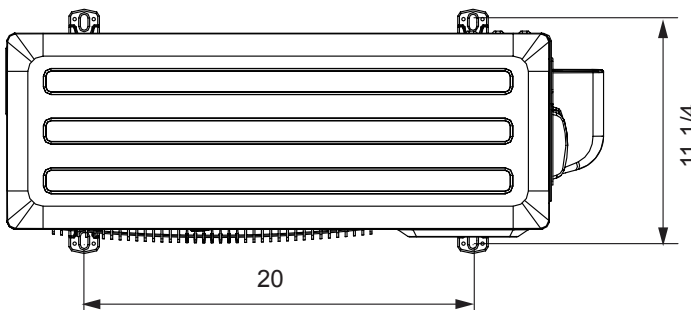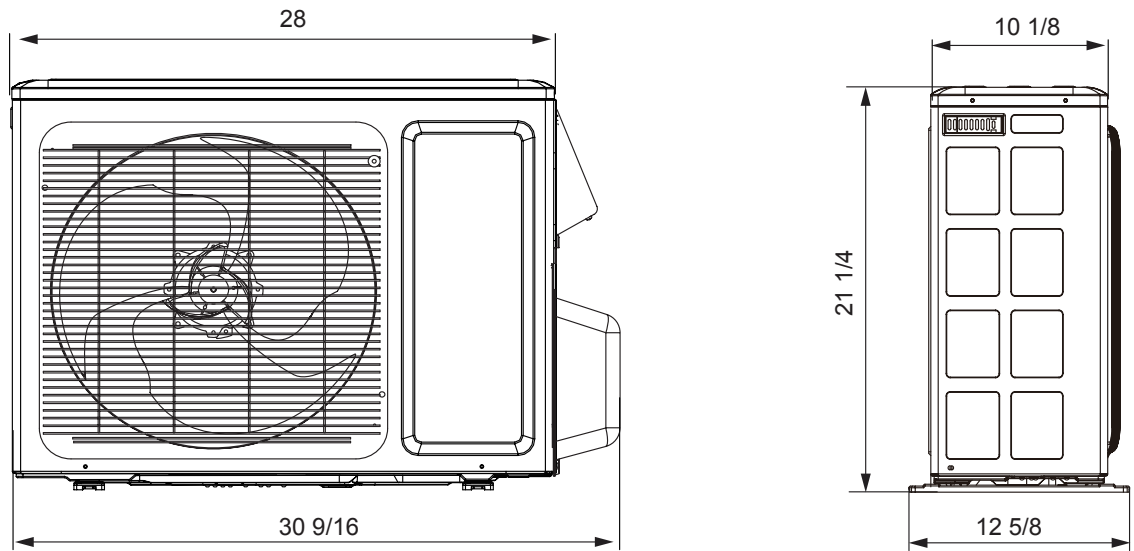

Unit:inch




KW09HQ1B8DO KW12HQ1B8DO KW12CQ1B8DO KW09HQ3B8DO KW12HQ3B8DO KW18CQ2B8DO KW18HQ2B8DO

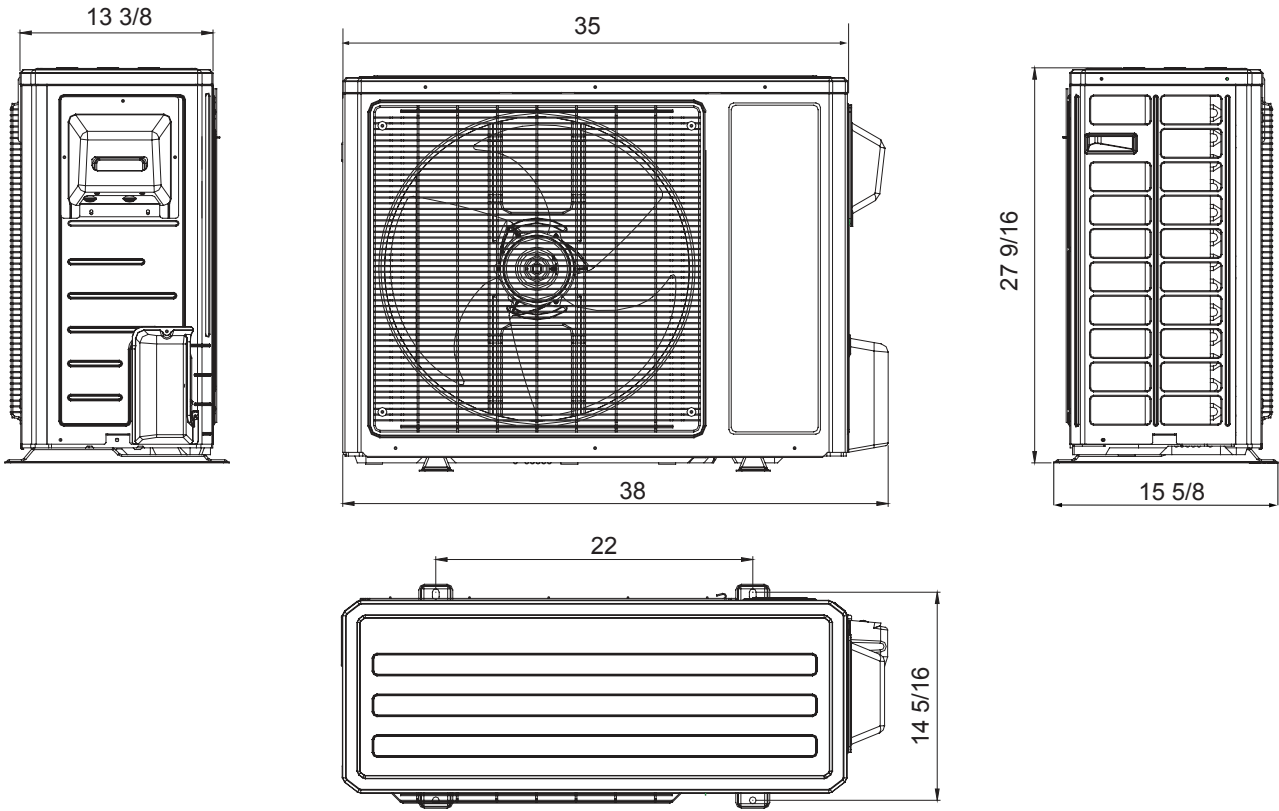

Unit: inch

KW24HQ2B8DO KW24CQ2B8DO

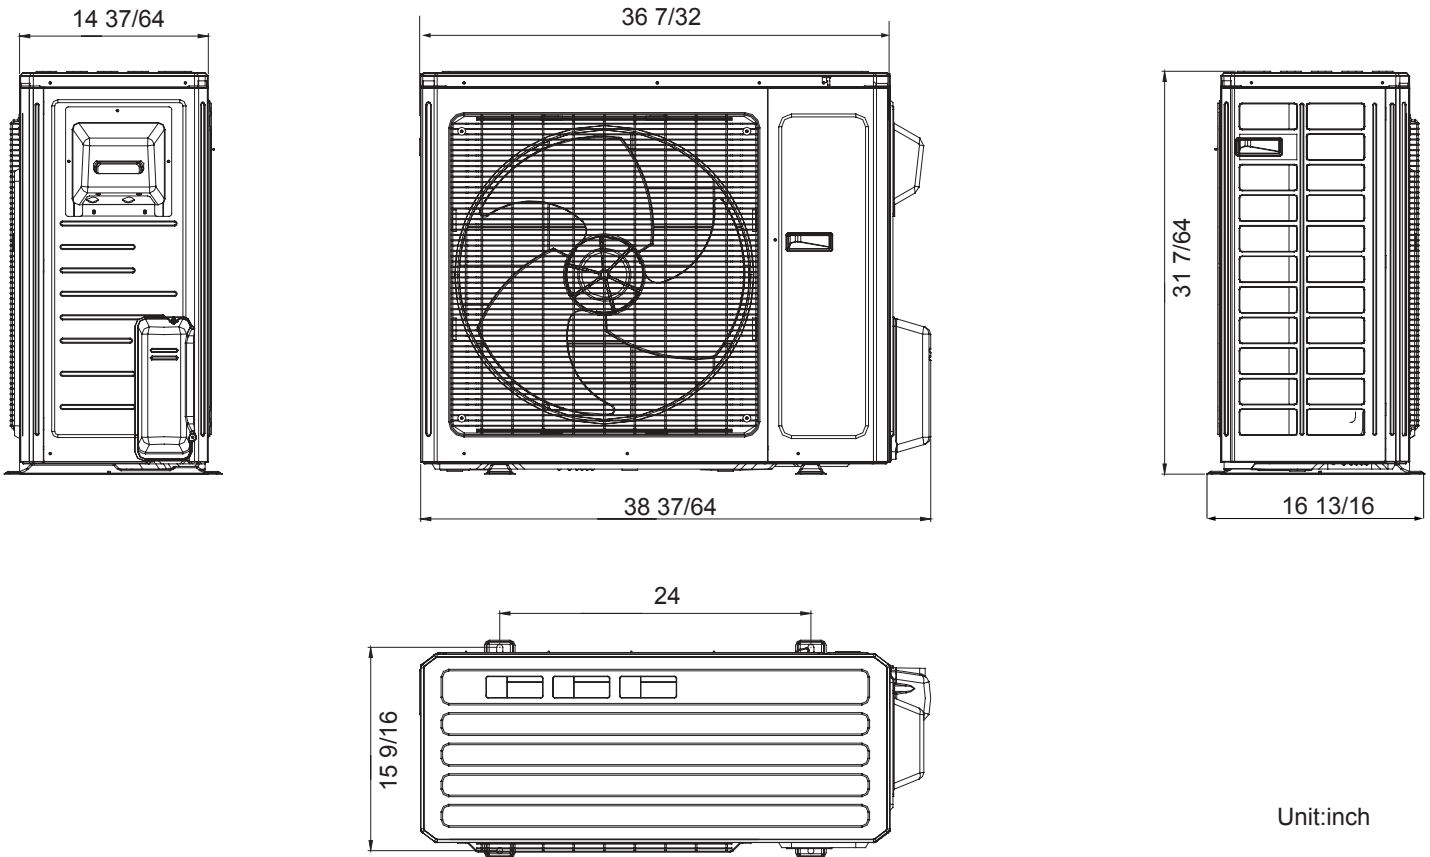


Unit:inch




Cooling unit

KW09CQ2B8A KW12CQ2B8A KW09CQ2B8D KW12CQ2B8D KW12CQ1B8D KW18CQ2B8DO KW24CQ2B8D

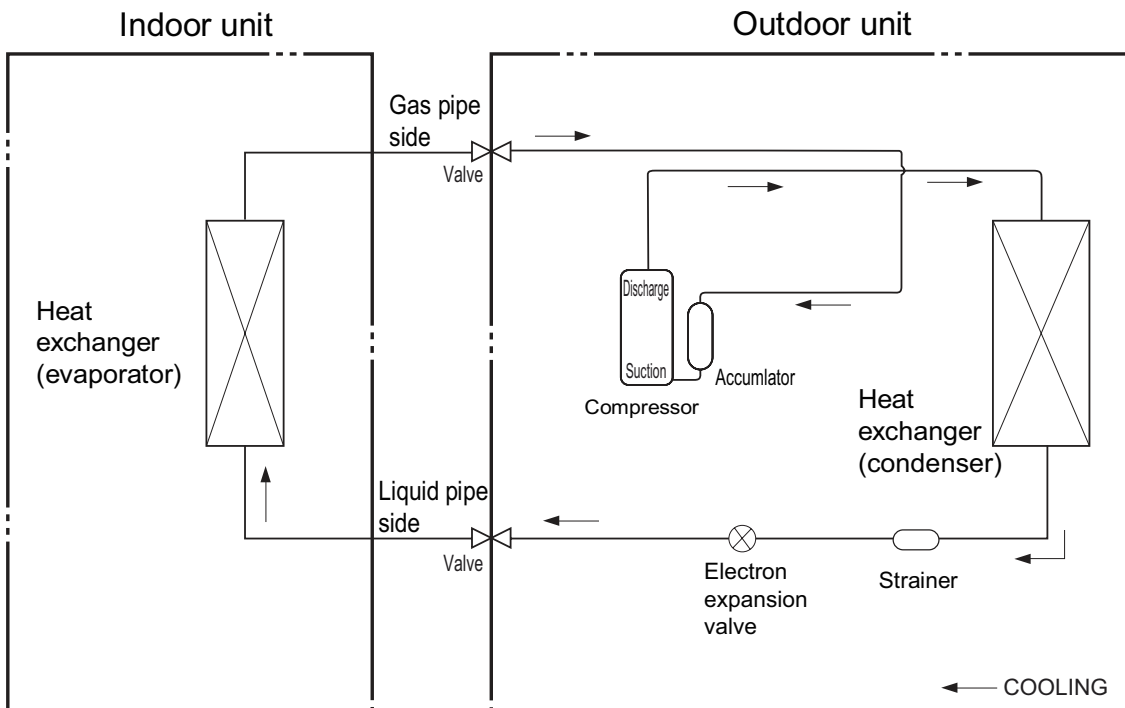

Cooling and heating unit

KW09HQ3B8A KW12HQ3B8A KW09HQ2B8A KW12HQ2B8A KW09HQ3B8D KW12HQ3B8D KW09HQ2B8D KW12HQ2B8D  
KW18HQ3B8D KW24HQ3B8D KW24HQ2B8DO KW18HQ2B8D

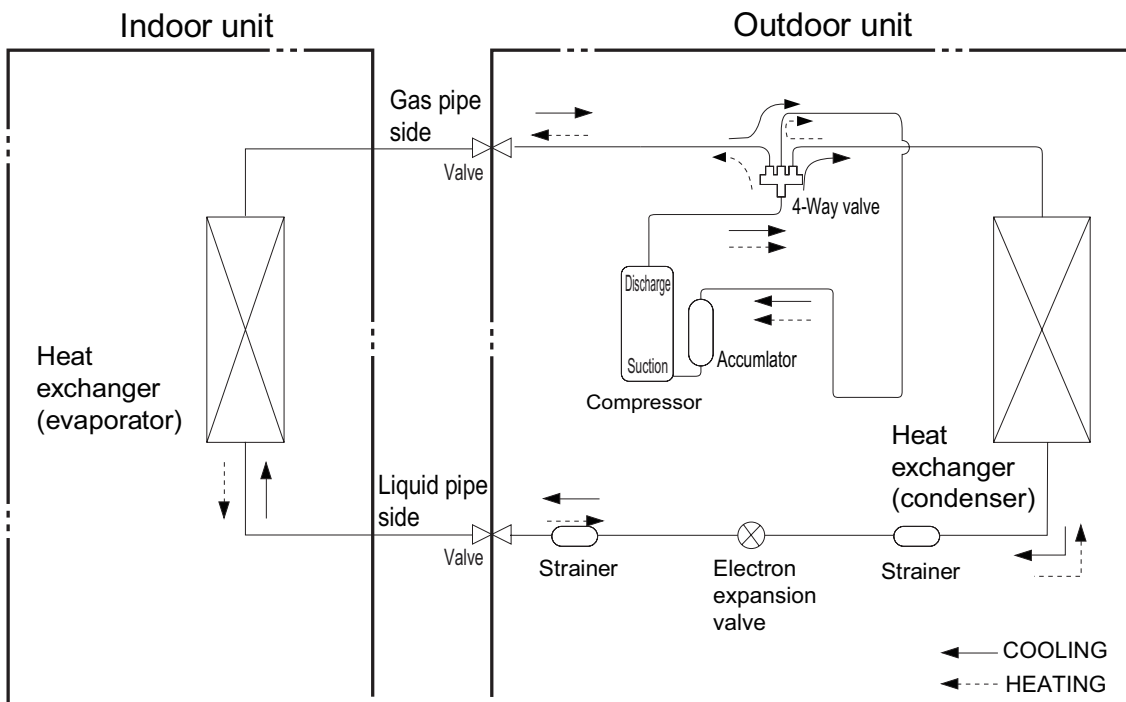

Connection pipe specification:

Liquid pipe: 1/4"

Gas pipe: 3/8" for 09/12K

Gas pipe: 1/2" for 18K

Gas pipe: 5/8" for 24K

# 5. Electrical Part

## 5.1 Wiring Diagram


- Instruction

Symbol	Symbol Color	Symbol	Symbol Color	Symbol	Name
WH	White	GN	Green	CAP	Jumper cap
YE	Yellow	BN	Brown	COMP	Compressor
RD	Red	BU	Blue		Grounding wire
YEGN	Yellow/Green	BK	Black	/	/
VT	Violet	OG	Orange	/	/


Note: Jumper cap is used to determine fan speed and the swing angle of horizontal lover for this model.

- Indoor Unit


KW09HQ1B8AI KW12HQ1B8AI KW09HQ3B8AI KW12HQ3B8AI KW09HQ1B8DI KW12HQ1B8DI  
 KW12CQ1B8DI KW09HQ3B8DI KW12HQ3B8DI KW18HQ1B8DI KW24HQ1B8DI KW18CQ1B8DI  
 KW24CQ1B8DI KW18HQ3B8DI KW24HQ3B8DI

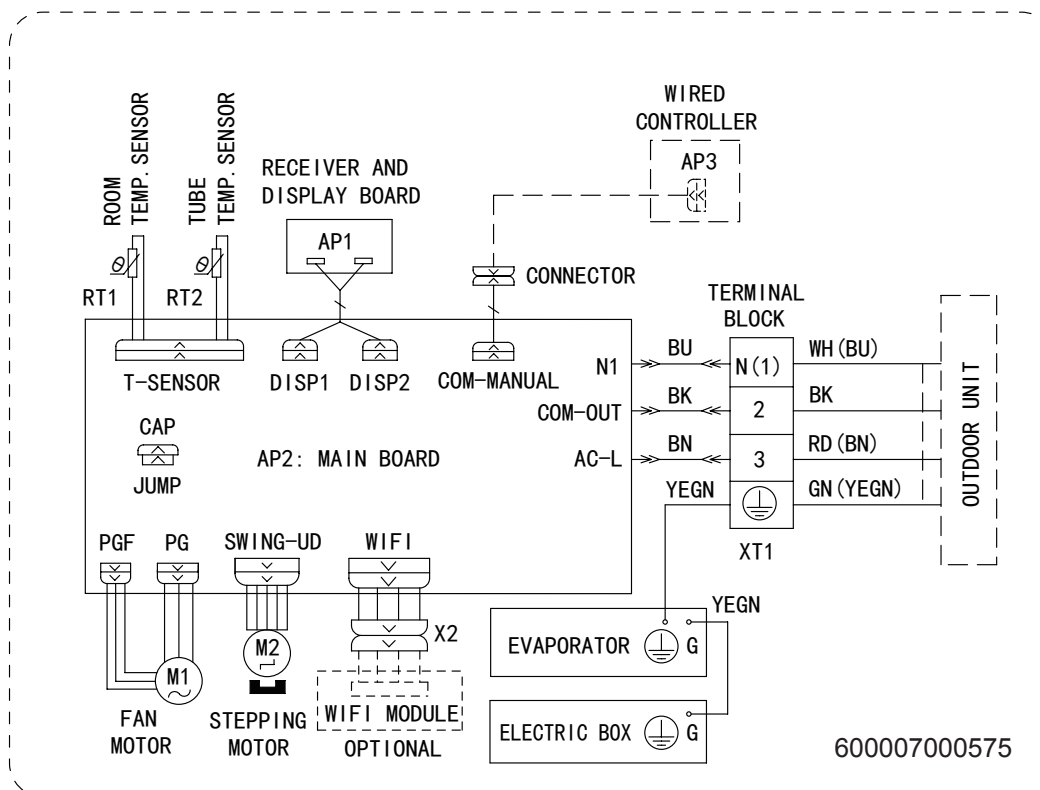

KW09HQ2B8AI KW12HQ2B8AI

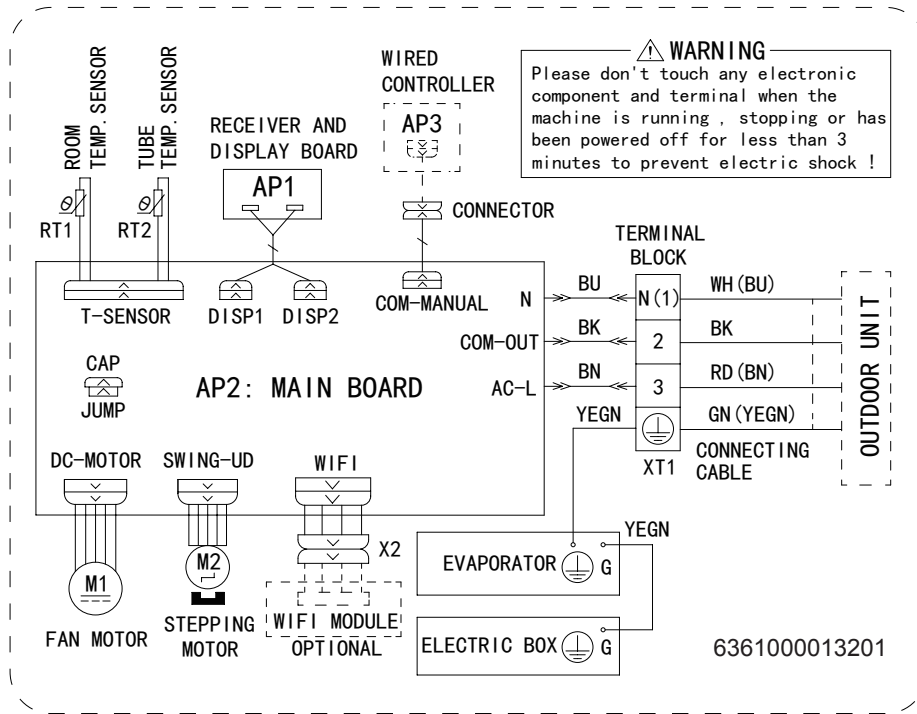


KW09CQ2B8AI KW12CQ2B8AI

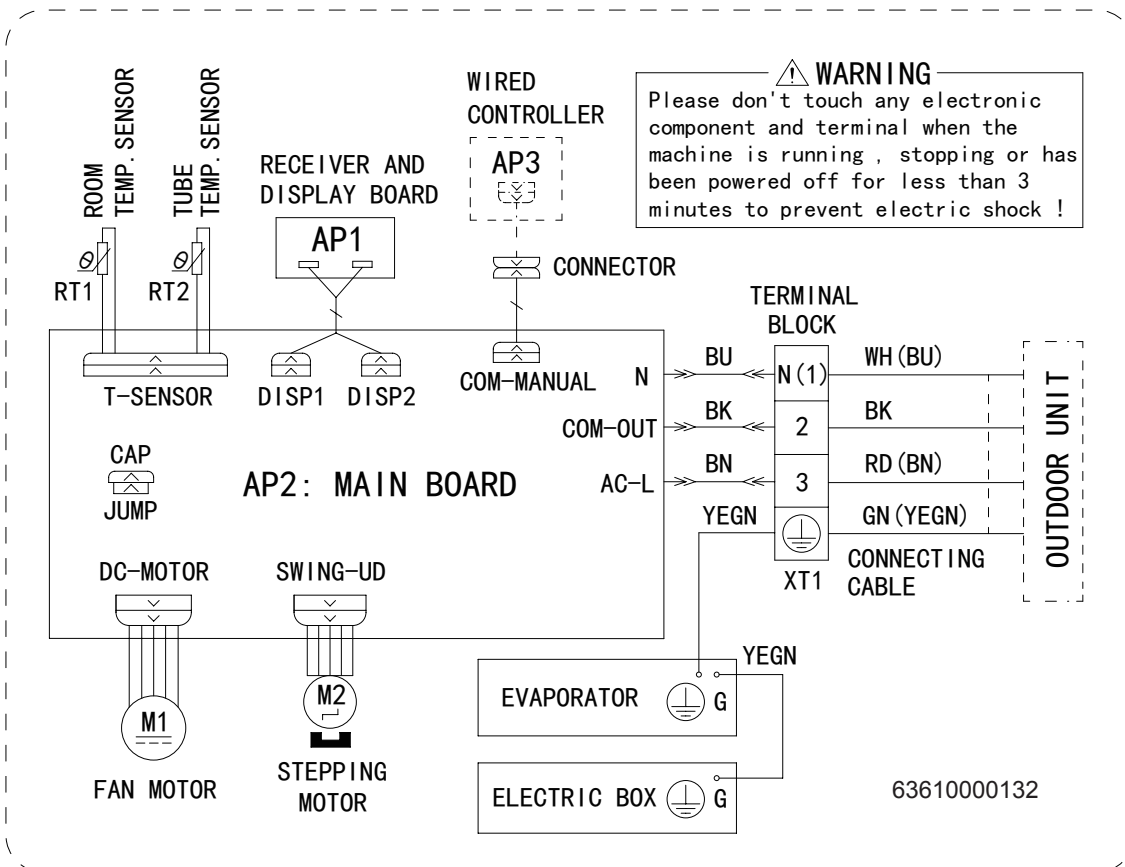




KW18CQ2B8DI KW18HQ2B8DI KW24CQ2B8DI

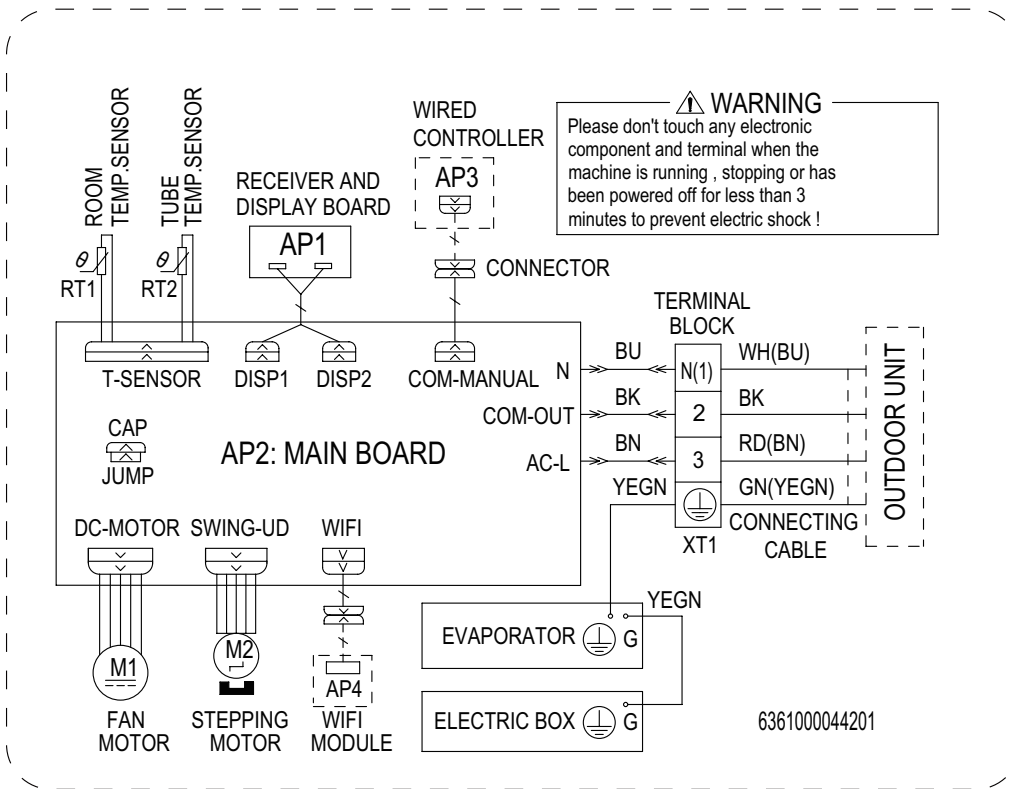


KW24HQ2B8DI

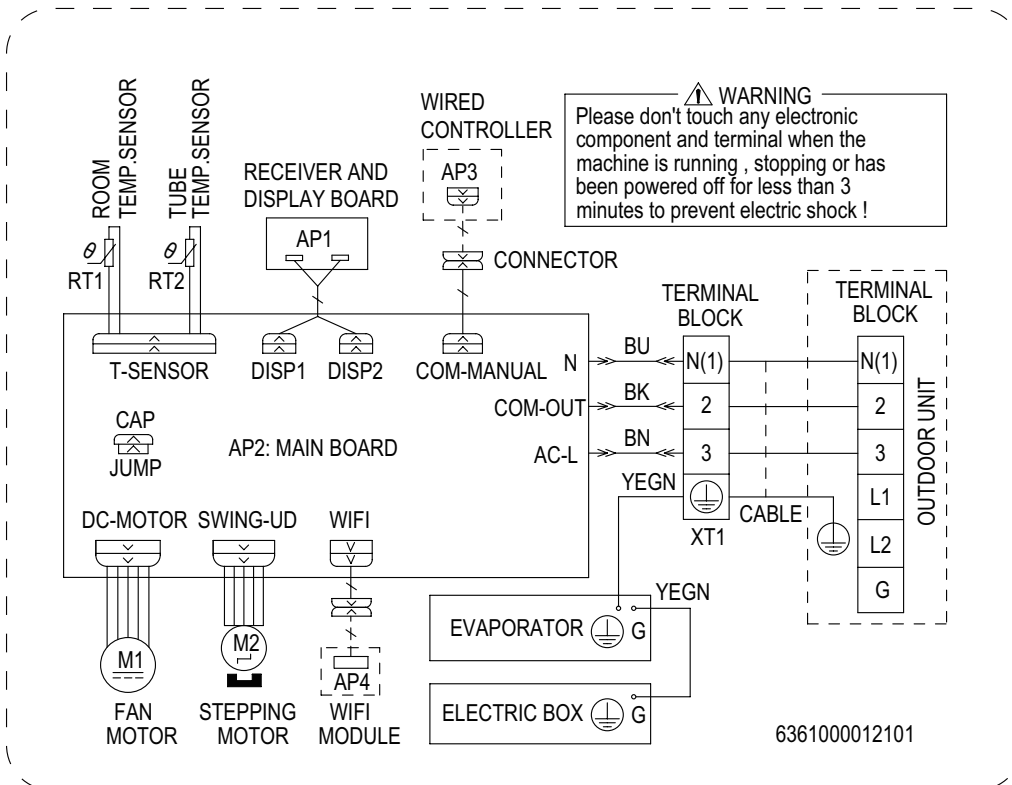


● Outdoor Unit

KW09HQ2B8DO KW12HQ2B8DO

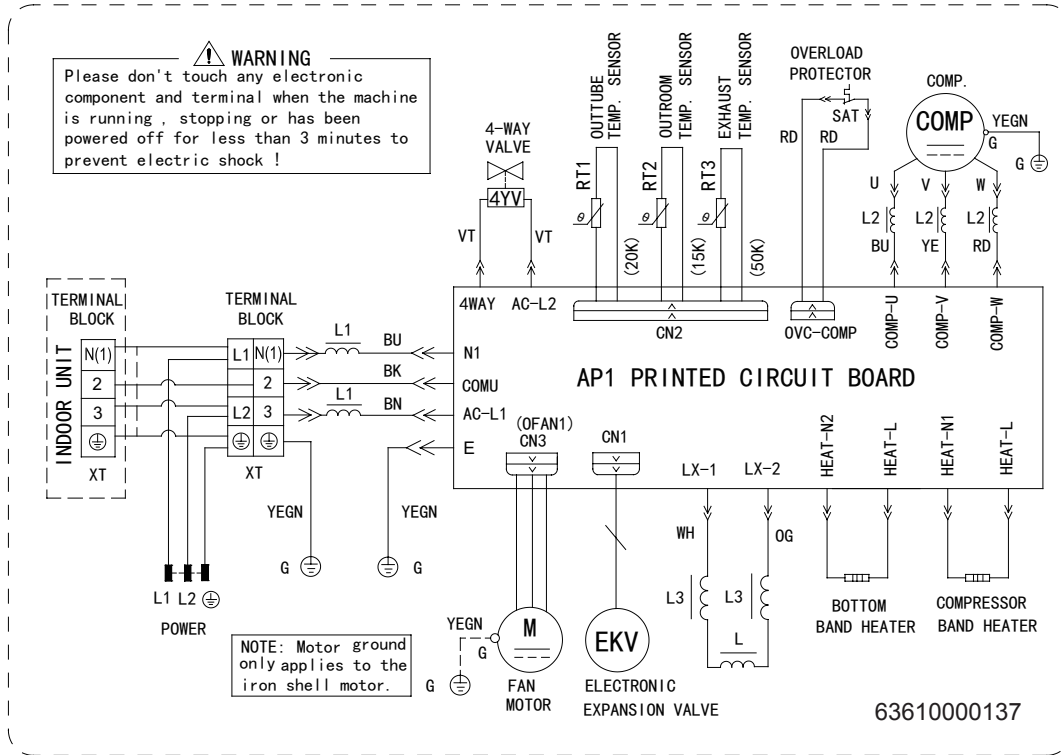


KW09HQ1B8AO KW12HQ1B8AO

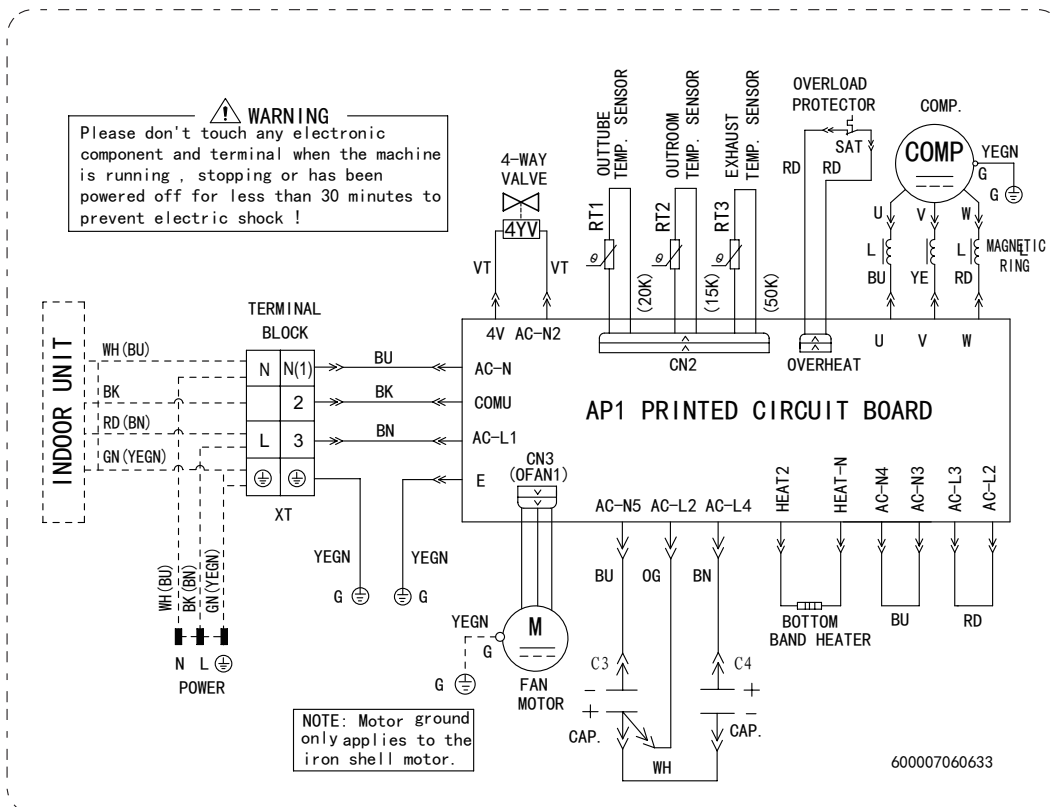





KW09HQ2B8AO KW12HQ2B8AO

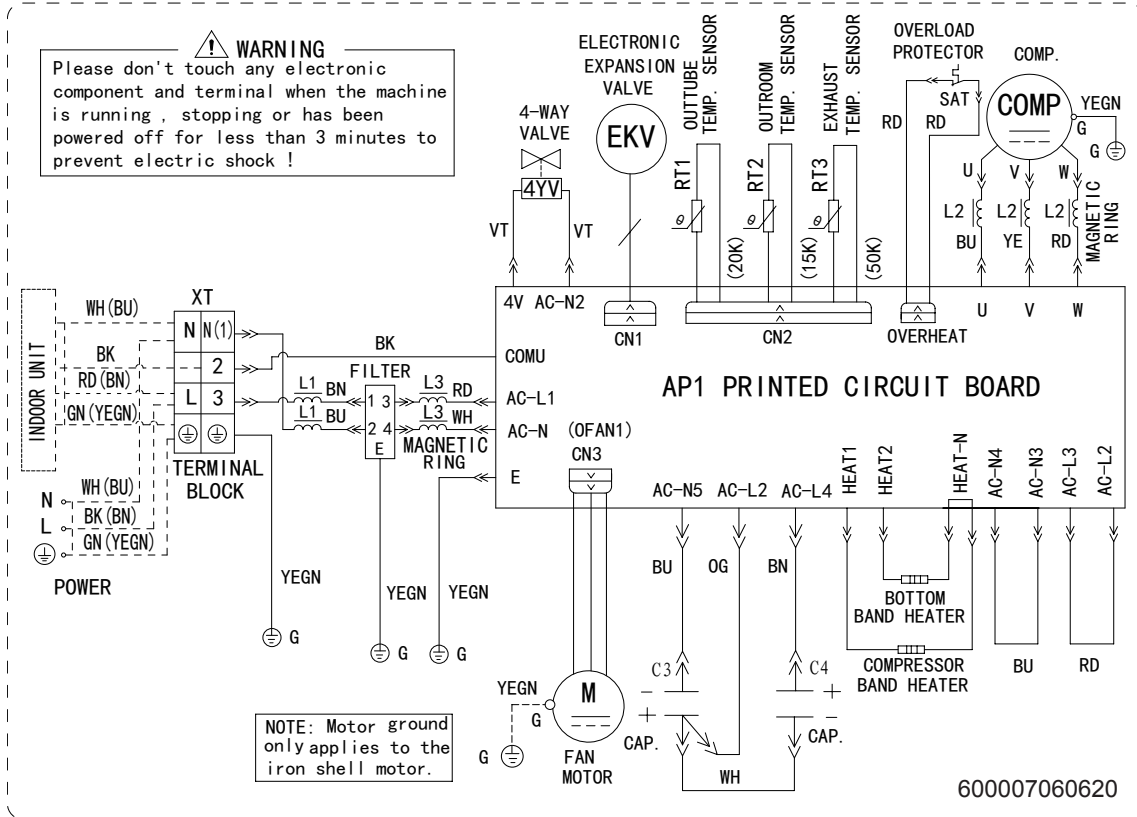


KW09HQ1B8DO KW12HQ1B8DO

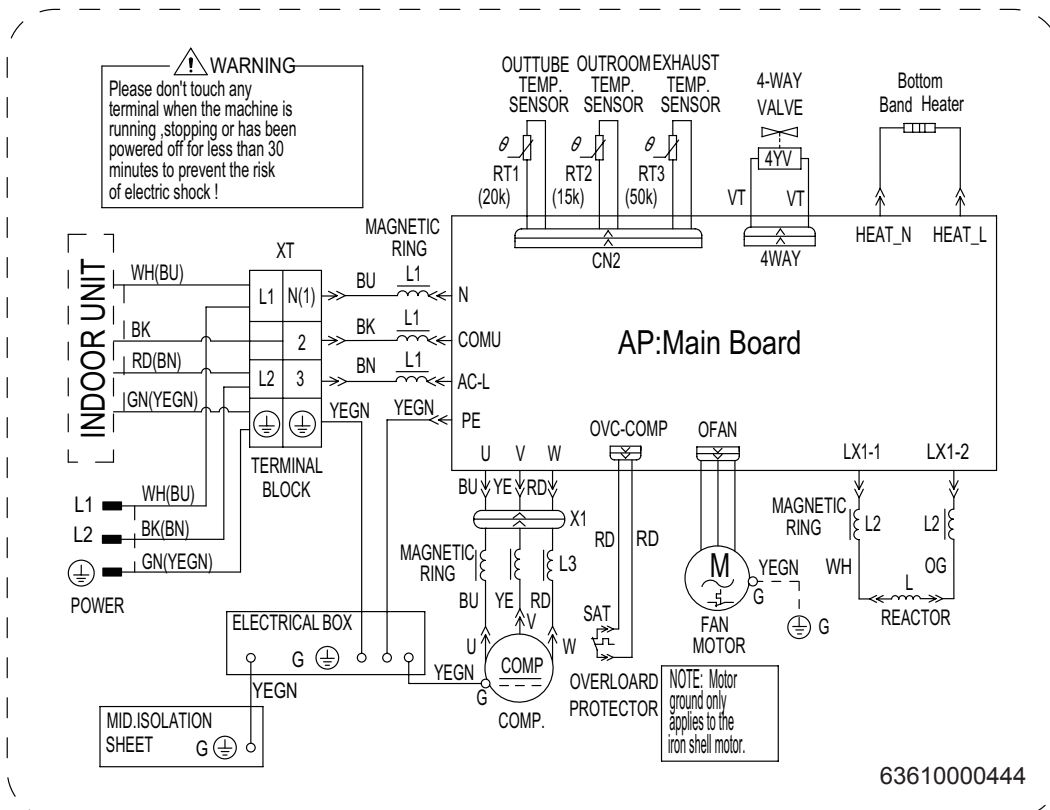


KW09HQ3B8DO KW12HQ3B8DO

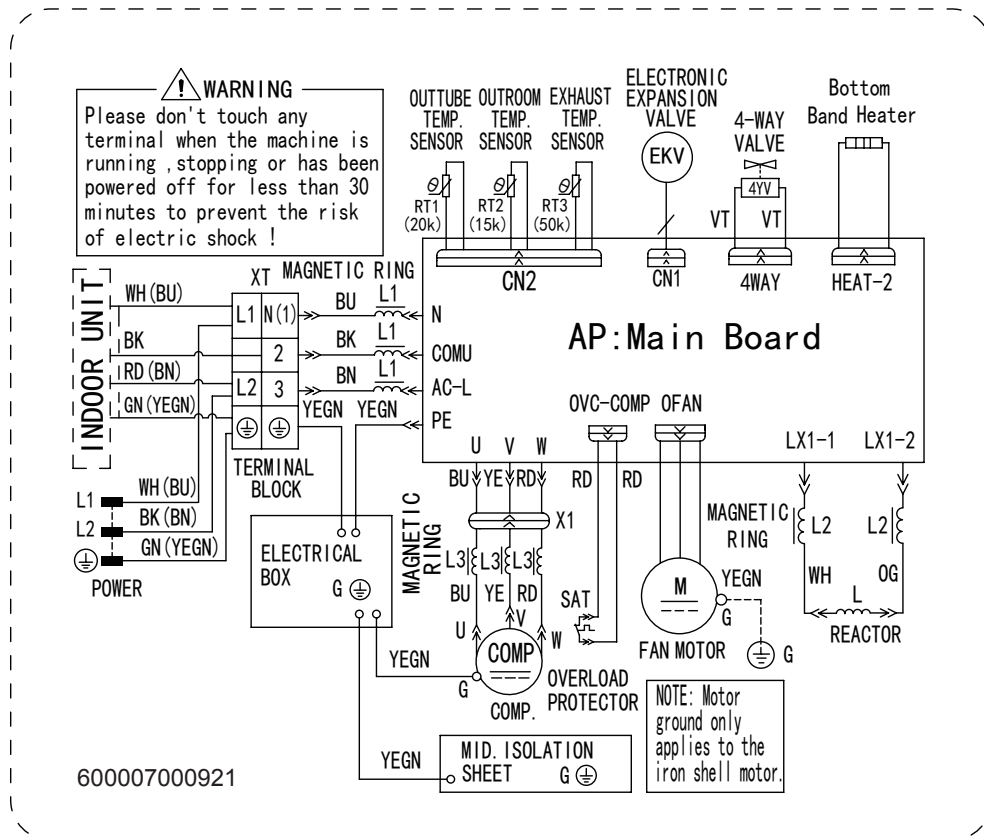


KW12CQ1B8DO

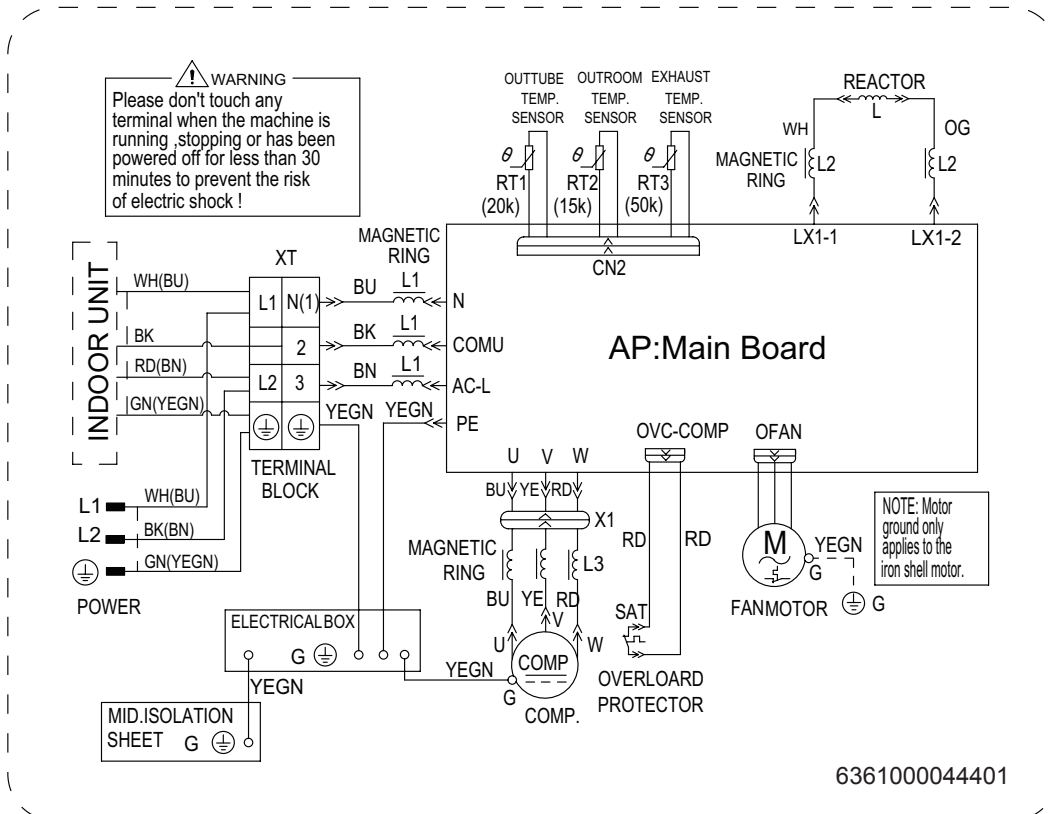


KW09CQ2B8AO KW12CQ2B8AO

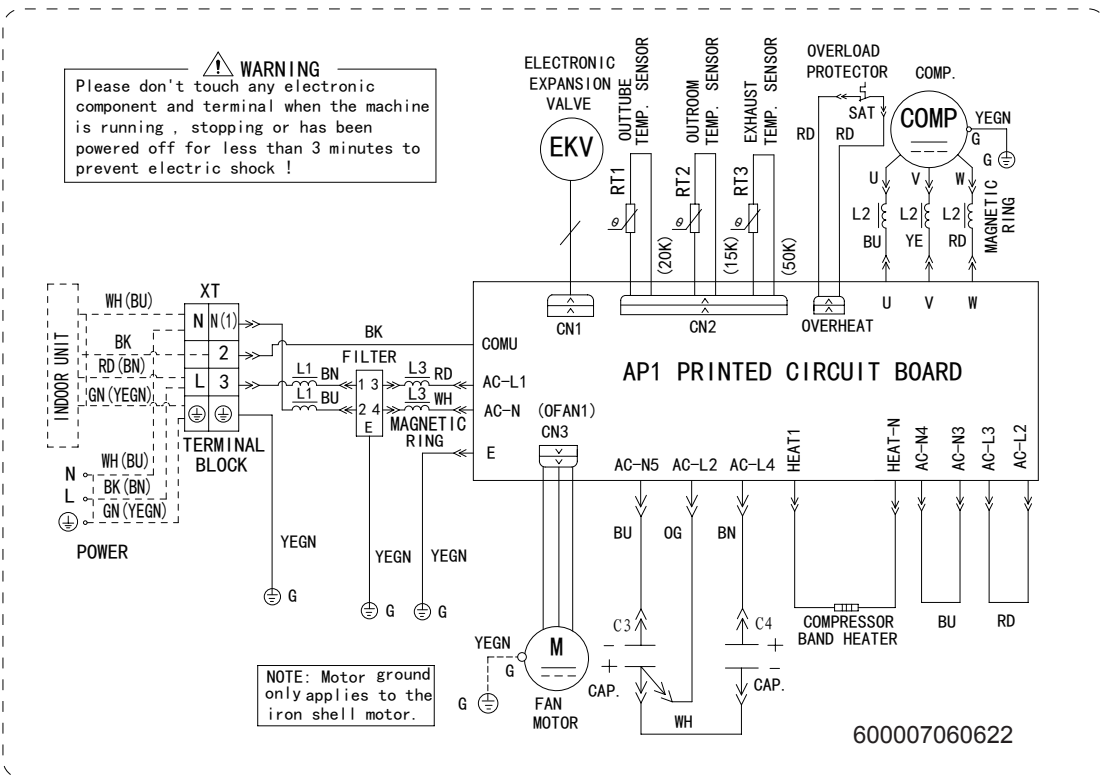


KW09CQ2B8DO KW12CQ2B8DO

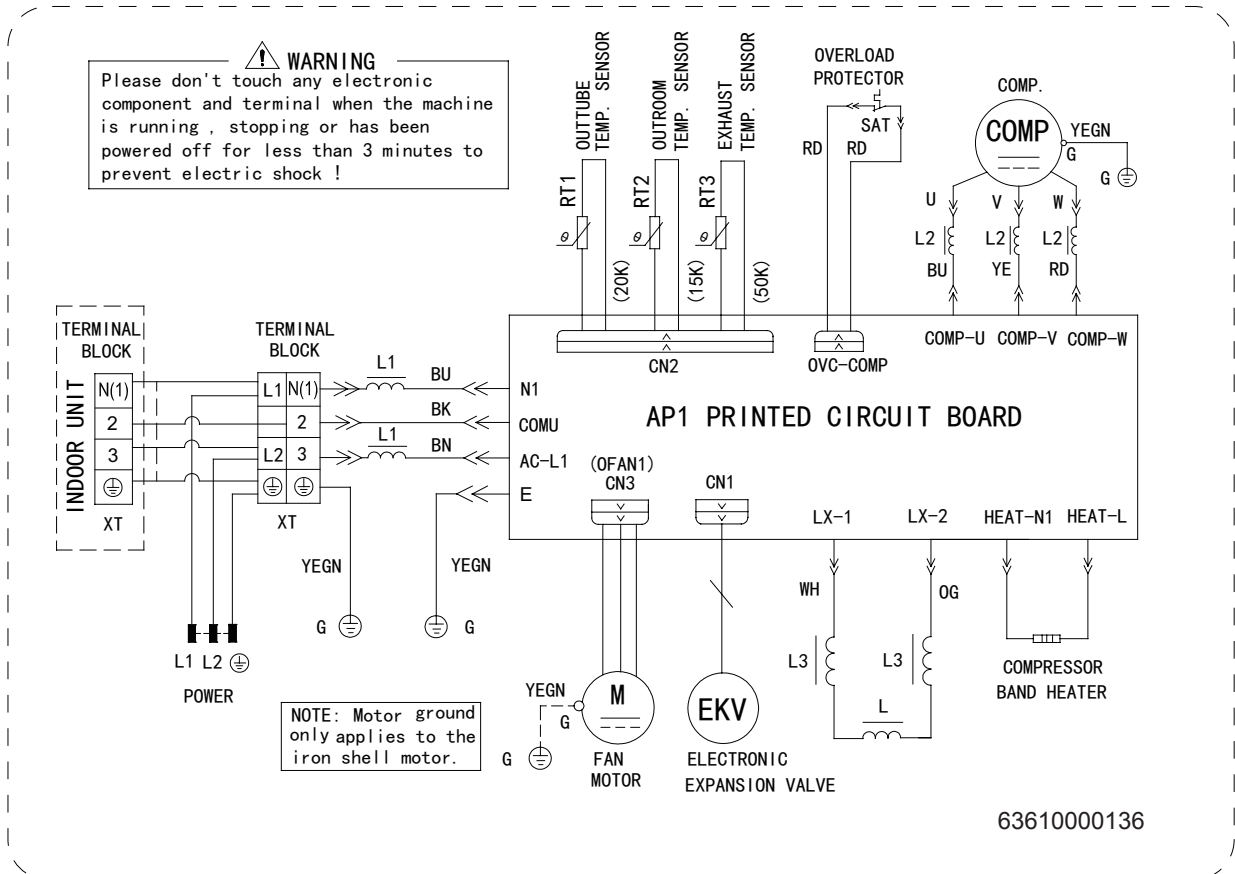


KW18HQ3B8DO

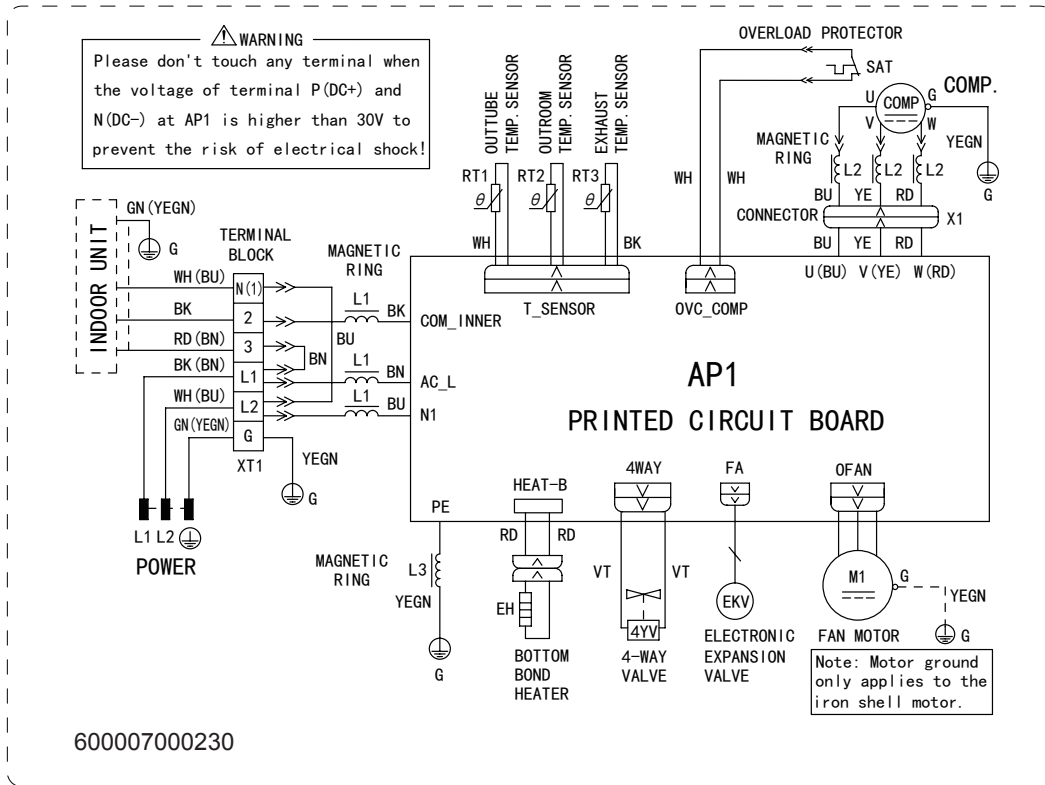


KW09HQ3B8AO KW12HQ3B8AO

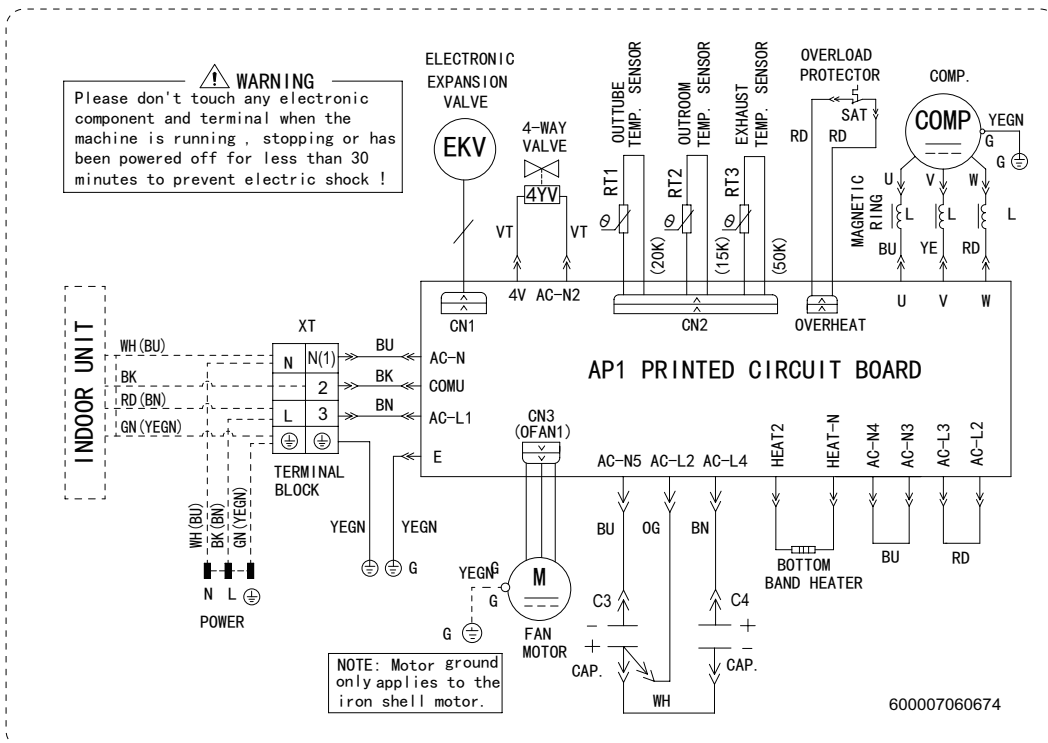


KW18CQ1B8DO KW24CQ1B8DO

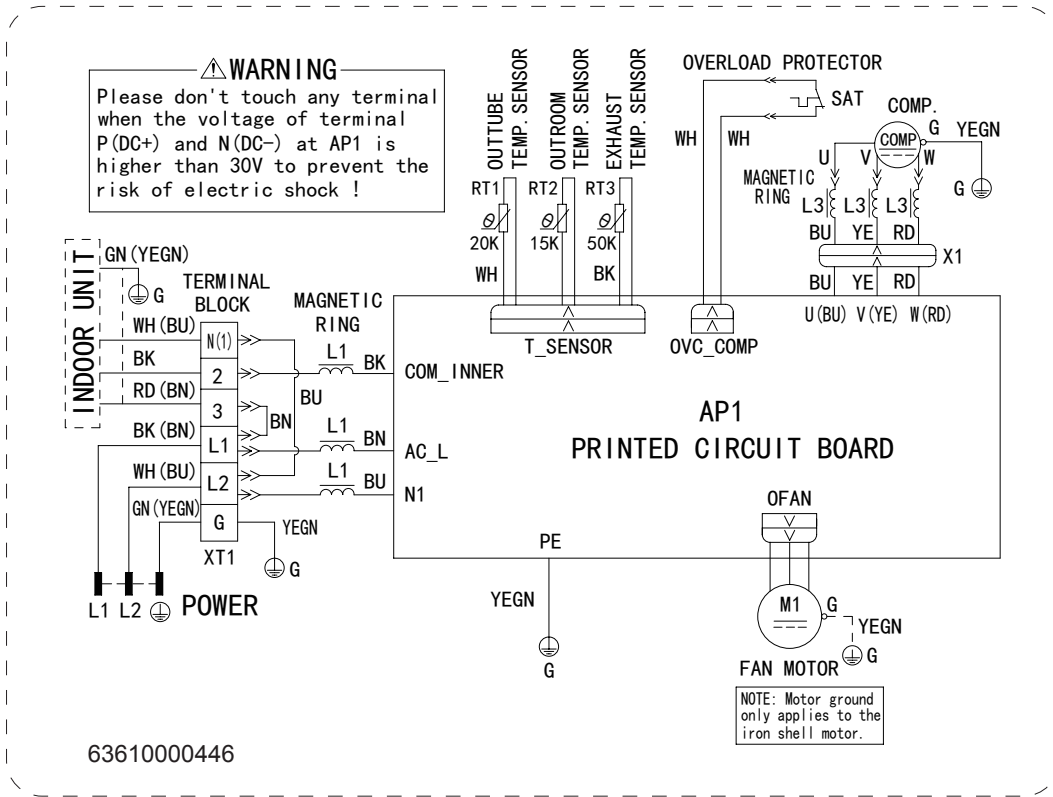


KW18HQ1B8DO KW24HQ1B8DO

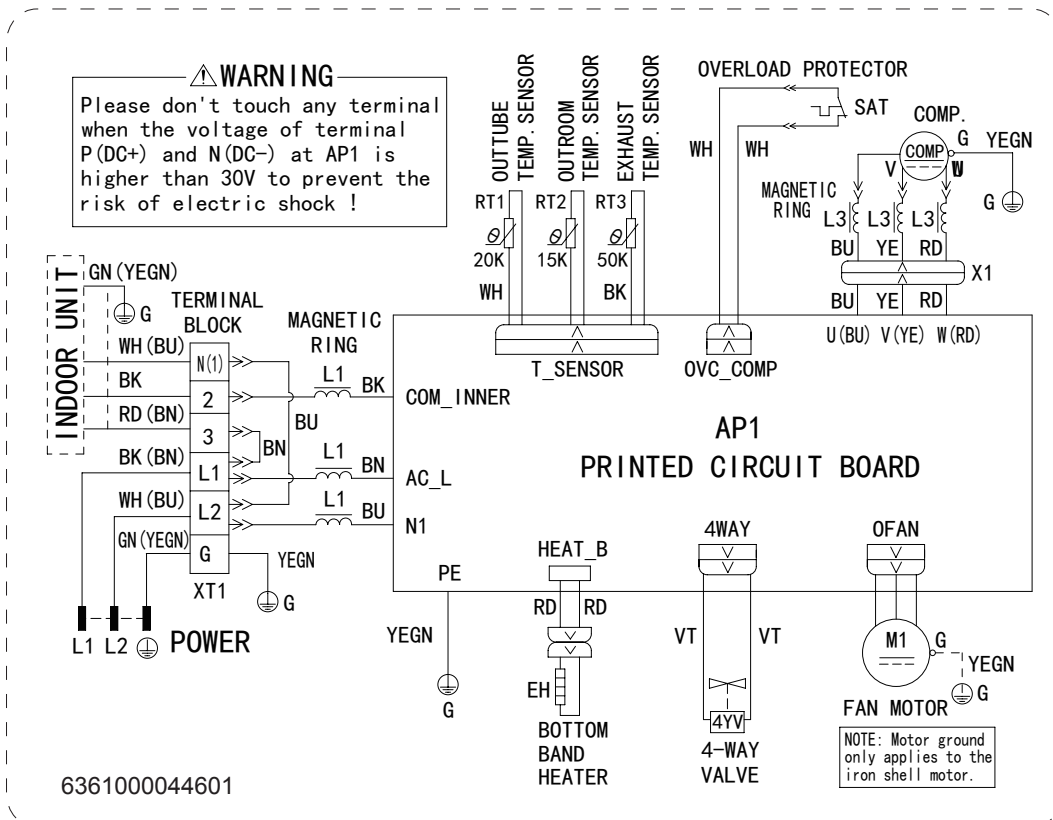


KW18CQ2B8DO

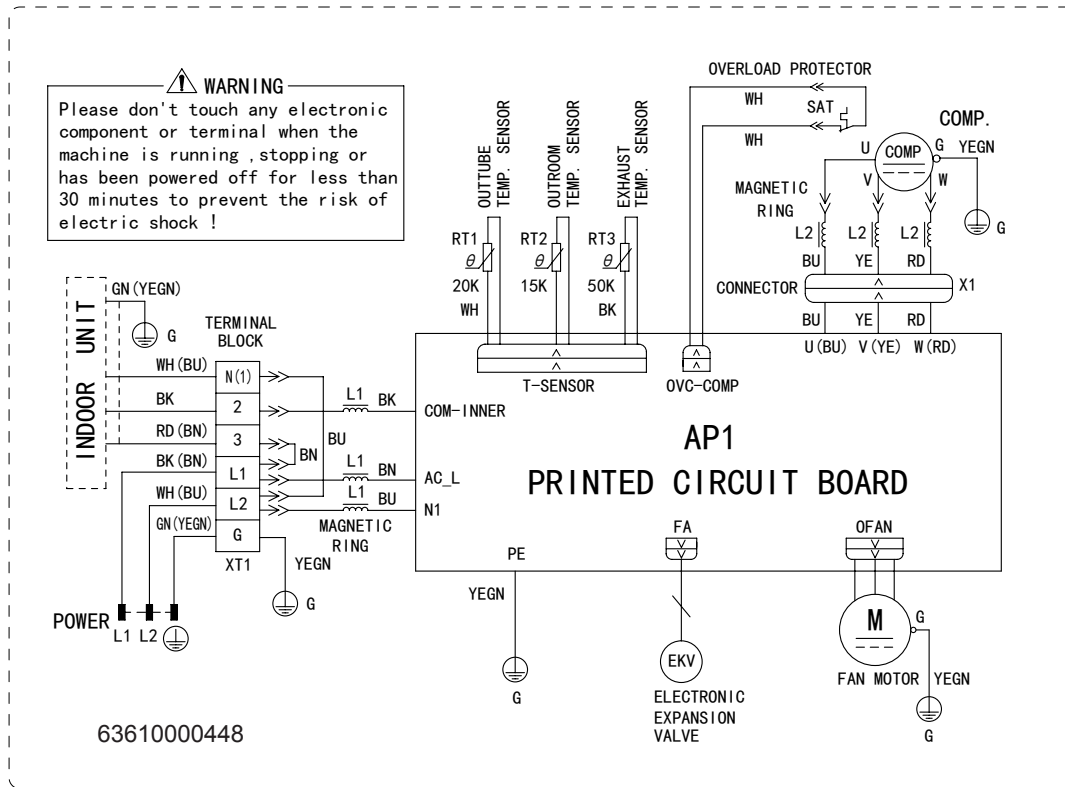


KW24HQ2B8DO

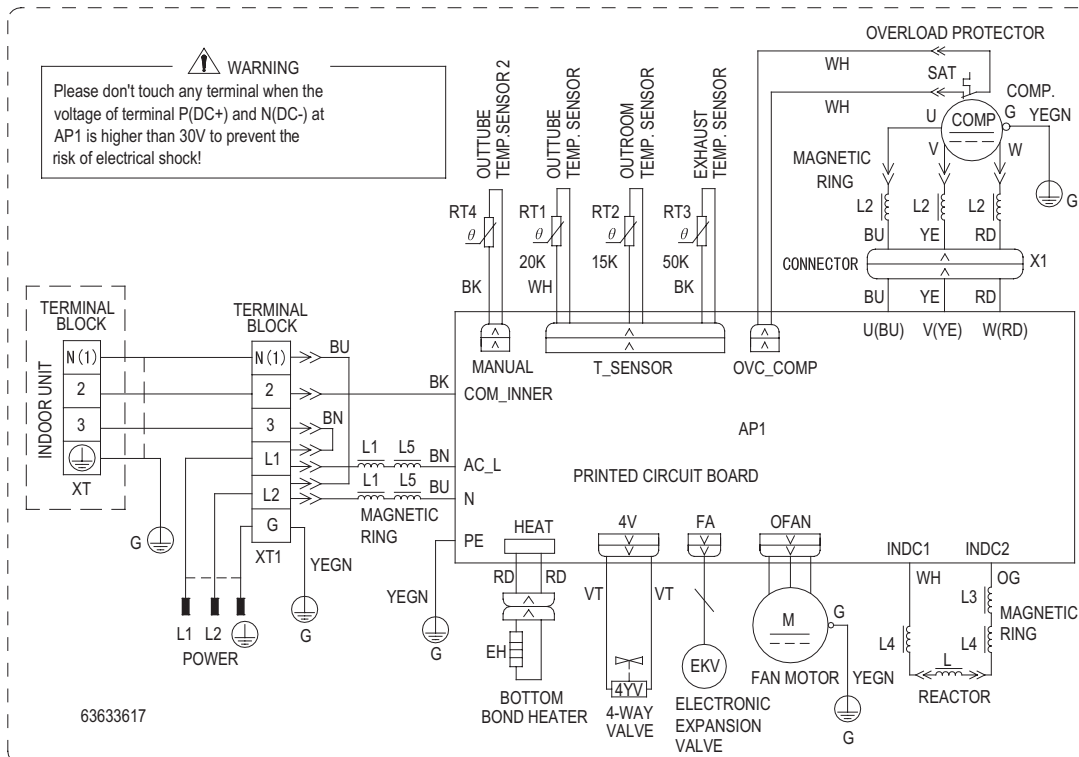


KW18HQ2B8DO

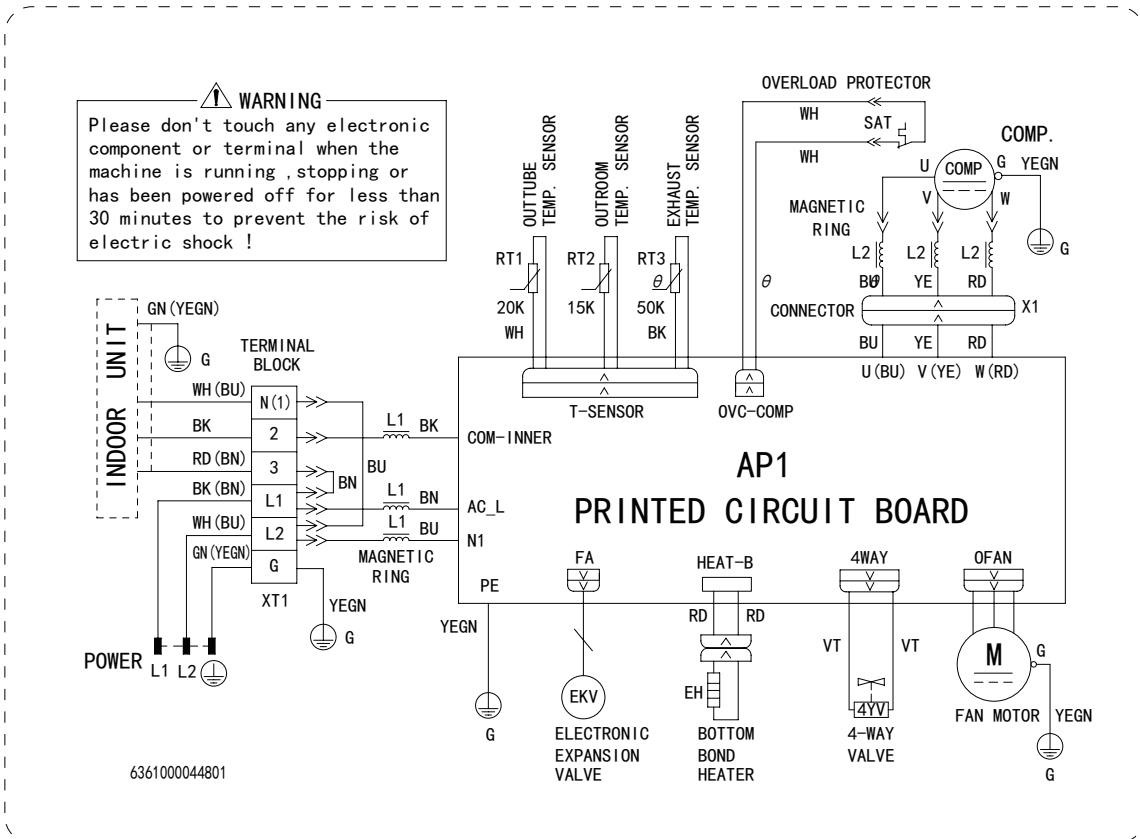

KW24CQ2B8DO

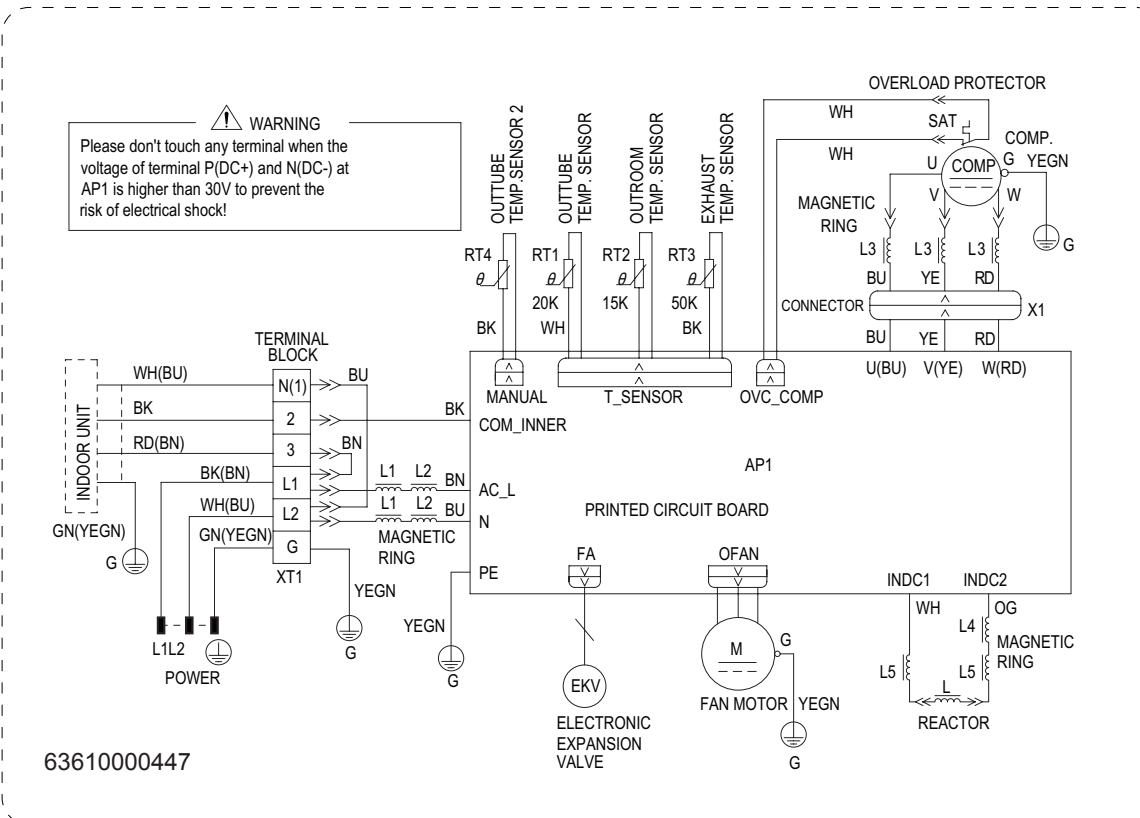

KW24HQ3B8DO

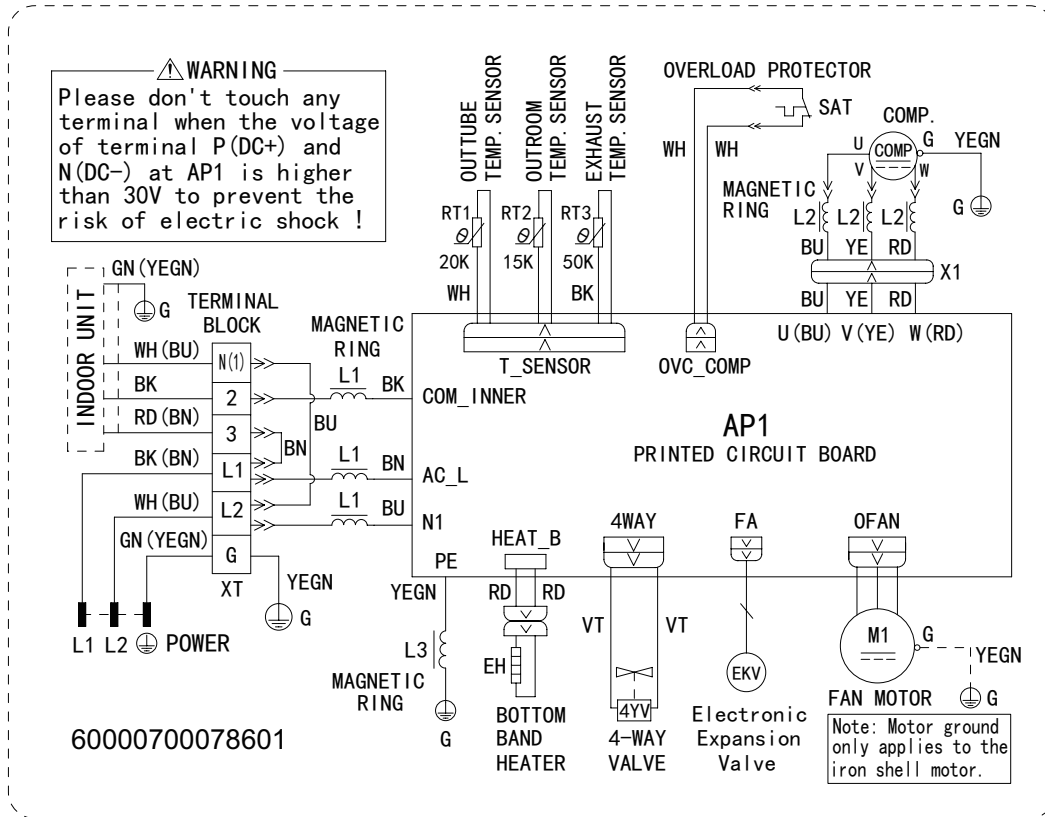


These circuit diagrams are subject to change without notice, please refer to the one supplied with the unit.






KW09HQ2B8AI KW12HQ2B8AI KW09HQ2B8DI KW12HQ2B8DI KW24HQ2B8DI KW18CQ2B8DI KW18HQ2B8DI KW24CQ2B8DI

● Top view

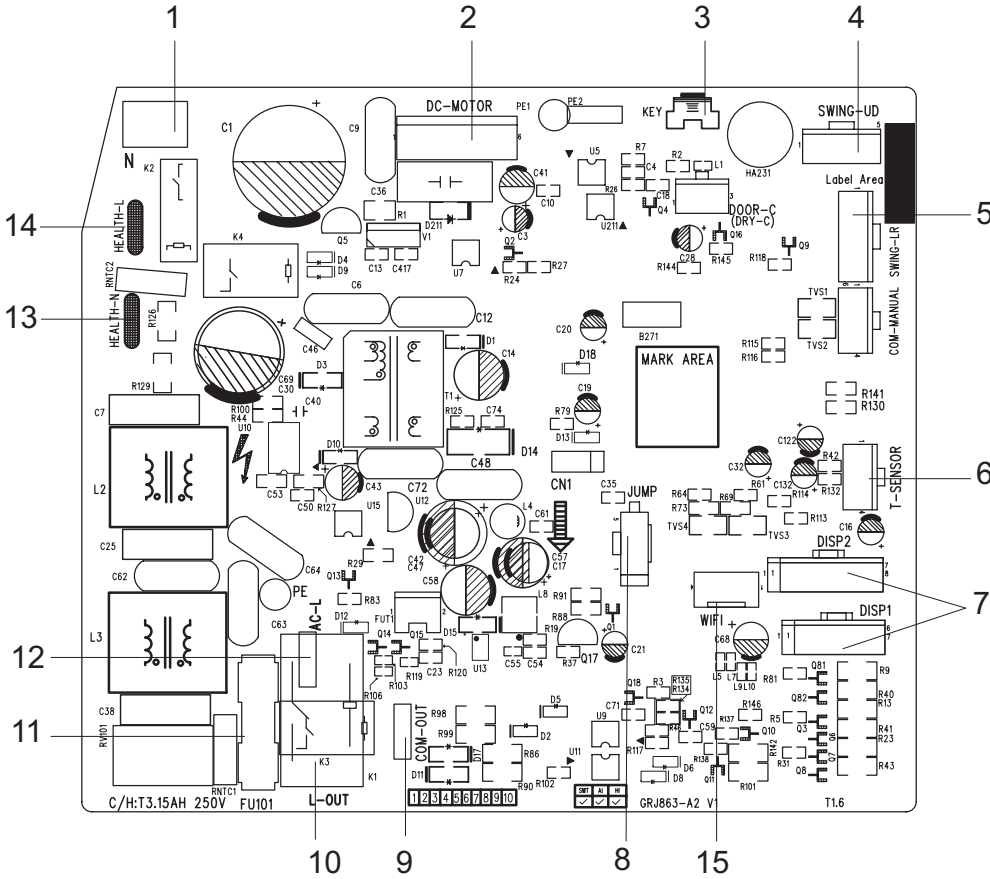


No.	Name
1	Neutral wire
2	Needle stand for indoor fan
3	Auto button
4	Up&down swing motor
5	left&right swing motor
6	Interface of temperature sensor
7	Terminal for display board connection
8	Terminal of jumper cap
9	Communication wire
10	Live wire interface of outdoor Power Supply
11	Fuse
12	Live wire interface
13	Interface of health function neutral wire
14	Interface of health function live wire
15	Detecting plate(WIFI )

● Bottom view

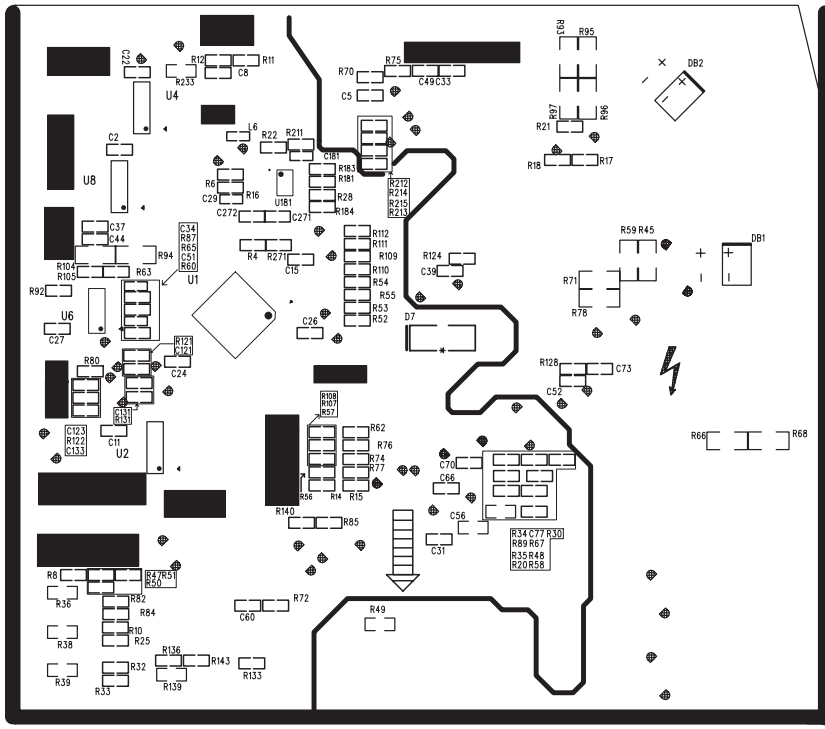


KW09CQ2B8AI KW12CQ2B8AI KW09CQ2B8DI KW12CQ2B8DI

• Top view

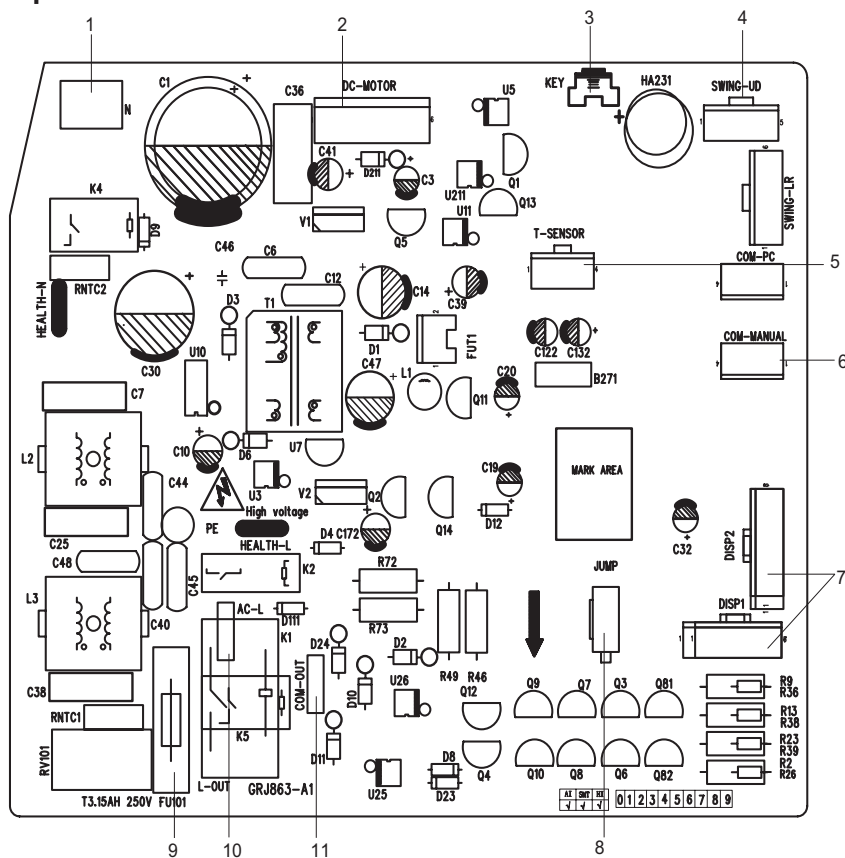

1	Neutral wire
2	DC fan
3	Auto button
4	Up&down swing
5	Interface of temperature sensor
6	Interface of wired controller
7	Display interface
8	Jumper interface
9	Fuse
10	Interface of live wire
11	Terminal with outdoor unit communication wire


• Bottom view

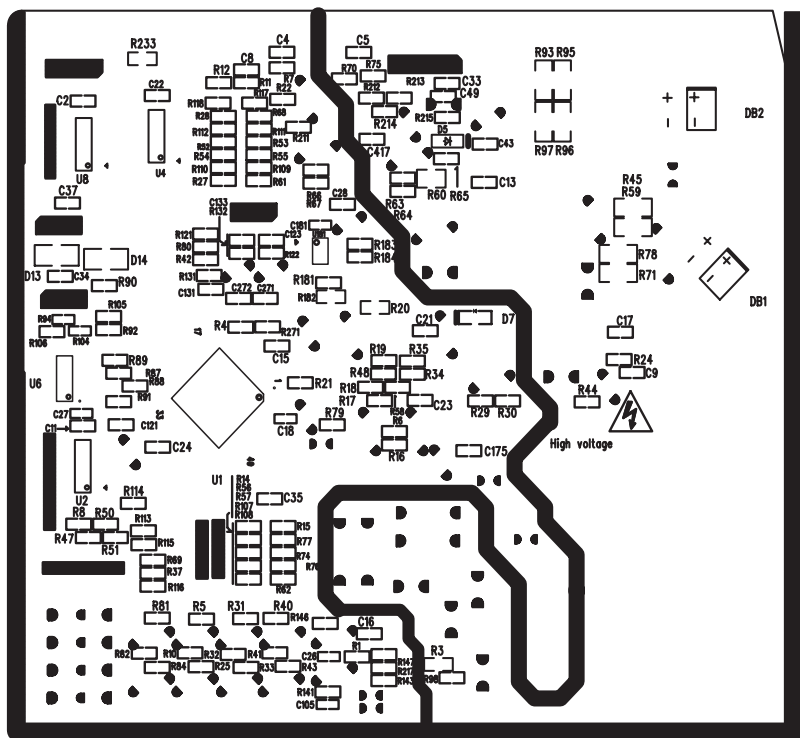

### Outdoor Unit


KW09HQ1B8AO KW12HQ1B8AO KW09HQ3B8AO KW12HQ3B8AO

#### ● Top view

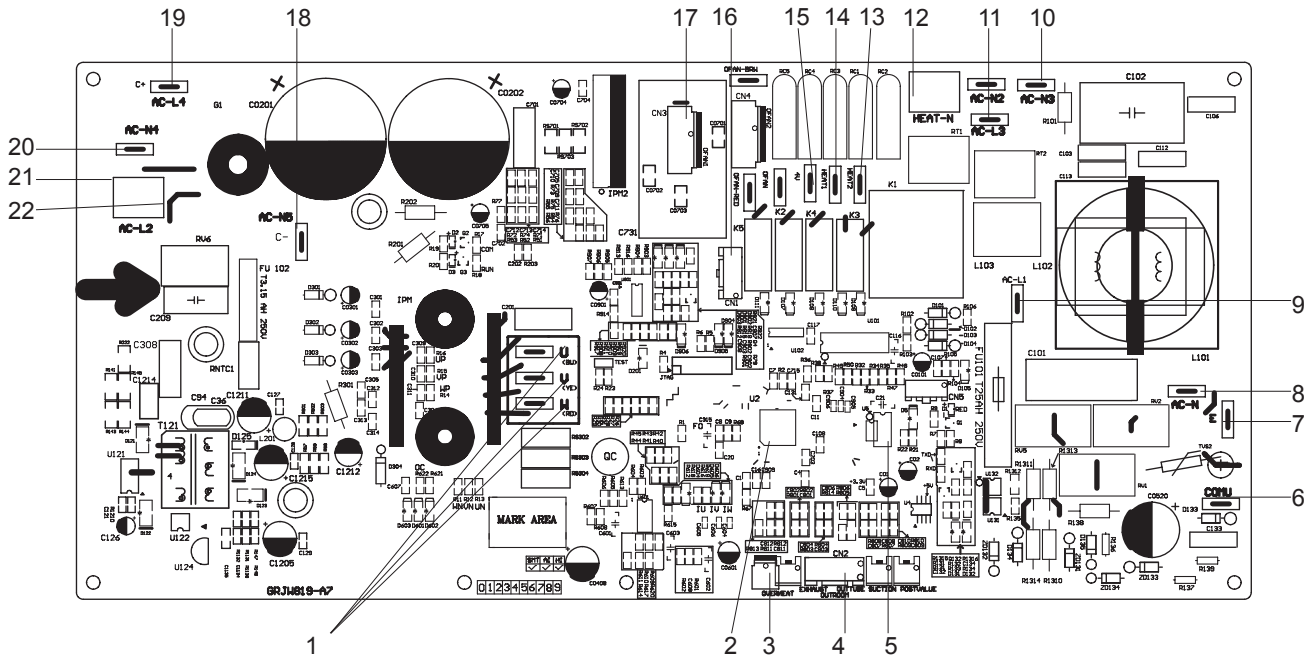


NO.	Name	NO.	Name	NO.	Name
1	Compressor output port	9	Live wire	17	Terminal of outdoor fan
2	Master control chip	10	Connection wire between boards of neutral wire connects AC-N4	18	Connect the negative pole of external big electrolytic capacitor
3	Overload temperature of compressor	11	Connection wire between boards of live wire connects AC-L2	19	Connect the positive pole of external big electrolytic capacitor
4	Temperature of temperature sensor	12	Neutral wire terminal for electric heating	20	Wire connection terminal between boards of neutral wire connects AC-N3
5	EEPROM	13	Live wire terminal for chassis electric heater	21	Connection wire between boards of live wire connects AC-L3
6	Communication wire port	14	Live wire terminal for compressor electric heater	22	Connect the middle position of external big electrolytic capacitor
7	Earthing wire port	15	4-way valve wiring terminal	/	
8	Port of power neutral wire	16	Terminal of electronic expansion valve	/	

#### ● Bottom view

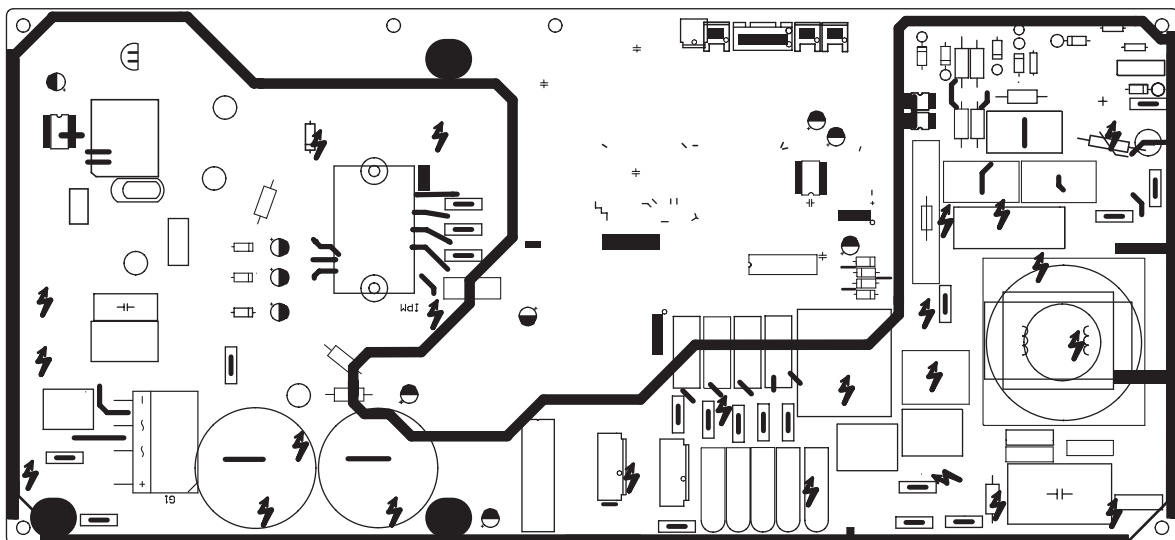


KW09HQ2B8AO KW12HQ2B8AO KW09CQ2B8AO KW12CQ2B8AO

• Top view

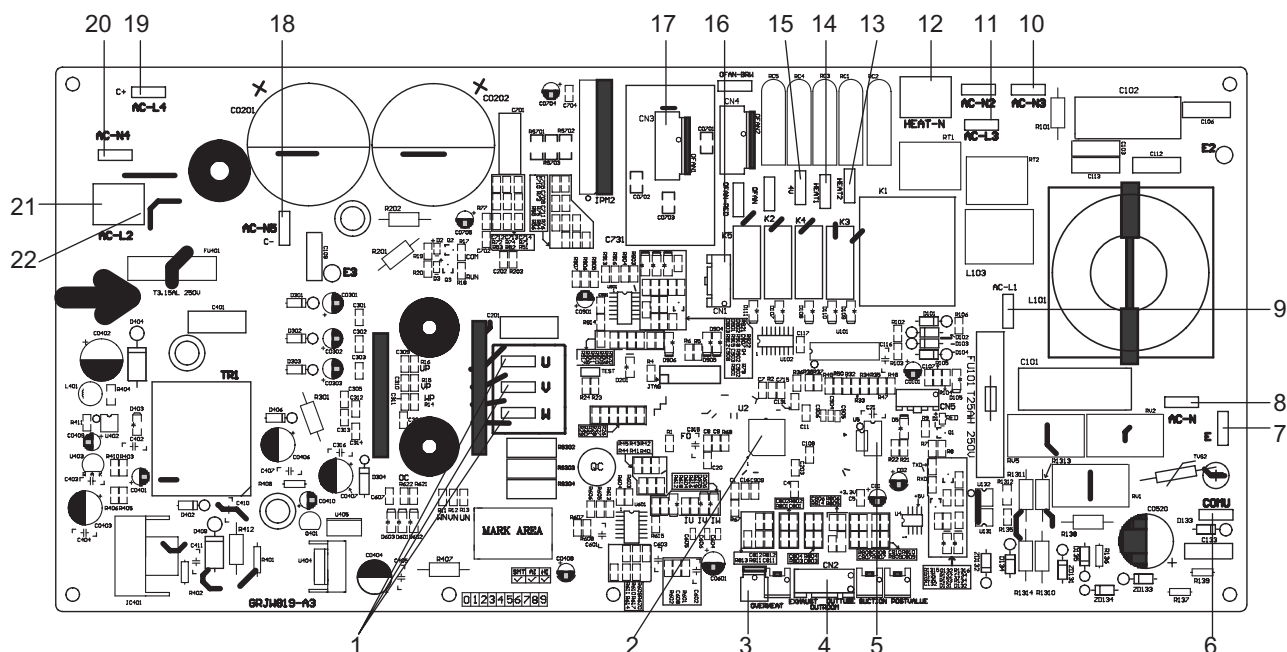


NO.	Name	NO.	Name	NO.	Name
1	Compressor output port	9	Live wire	17	Terminal of outdoor fan
2	Master control chip	10	Connection wire between boards of neutral wire connects AC-N4	18	Connect the negative pole of external big electrolytic capacitor
3	Overload temperature of compressor	11	Connection wire between boards of live wire connects AC-L2	19	Connect the positive pole of external big electrolytic capacitor
4	Temperature of temperature sensor	12	Neutral wire terminal for electric heating	20	Wire connection terminal between boards of neutral wire connects AC-N3
5	EEPROM	13	Live wire terminal for chassis electric heater	21	Connection wire between boards of live wire connects AC-L3
6	Communication wire port	14	Live wire terminal for compressor electric heater	22	Connect the middle position of external big electrolytic capacitor
7	Earthing wire port	15	4-way valve wiring terminal	/	
8	Port of power neutral wire	16	Terminal of electronic expansion valve	/	

• Bottom view

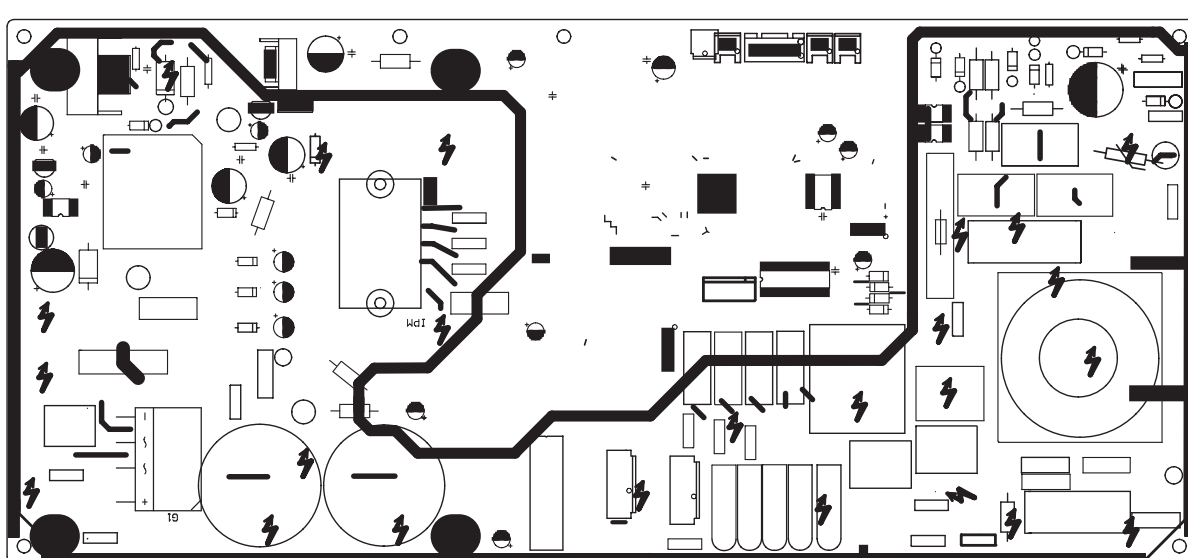


• Top view

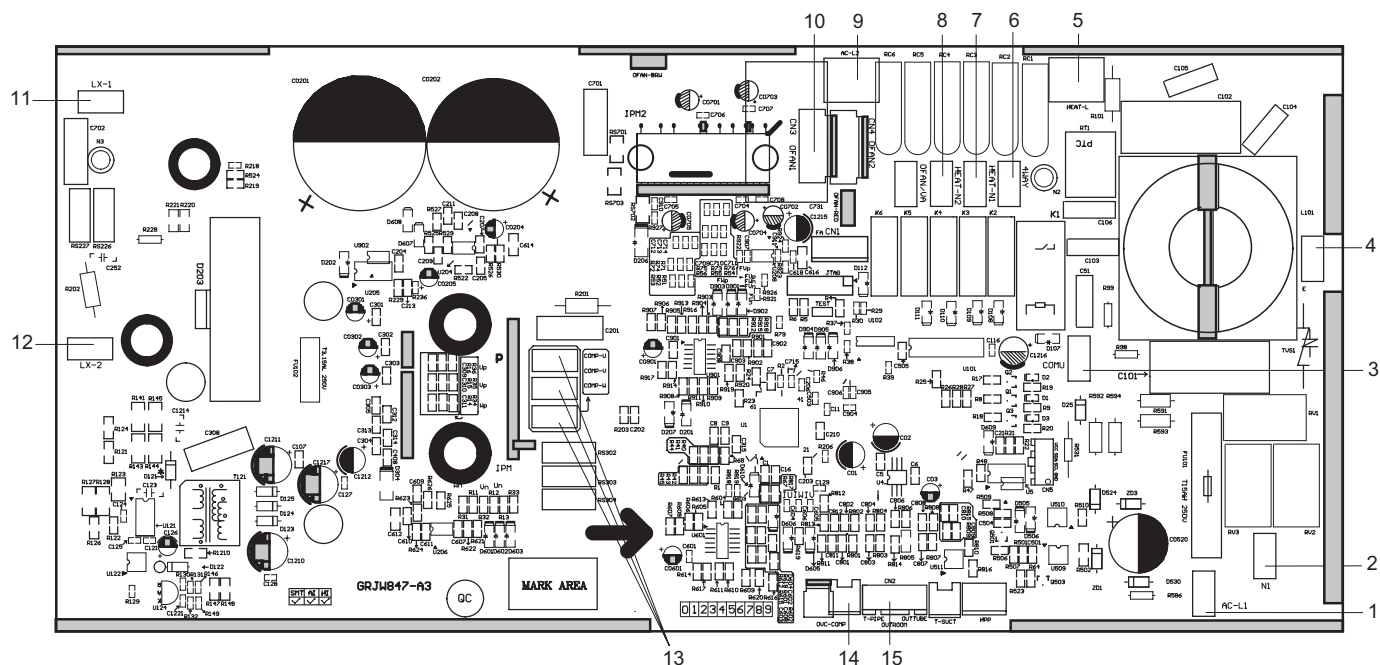


1	Input of live wire of power	4	Input of ground wire of power	7	Neutral wire of electric heater of compressor	10	Interface of fan	13	U, V, W three phases of compressor
2	Input of neutral wire of power	5	Live wire of electric heater	8	Neutral wire of electric heater of chassis	11	Interface 1 of electric reactor	14	Input of overload
3	Communication interface	6	Neutral wire of 4-way valve	9	Live wire of 4-way valve	12	Interface 2 of electric reactor	15	Temp. sensor

• Bottom view

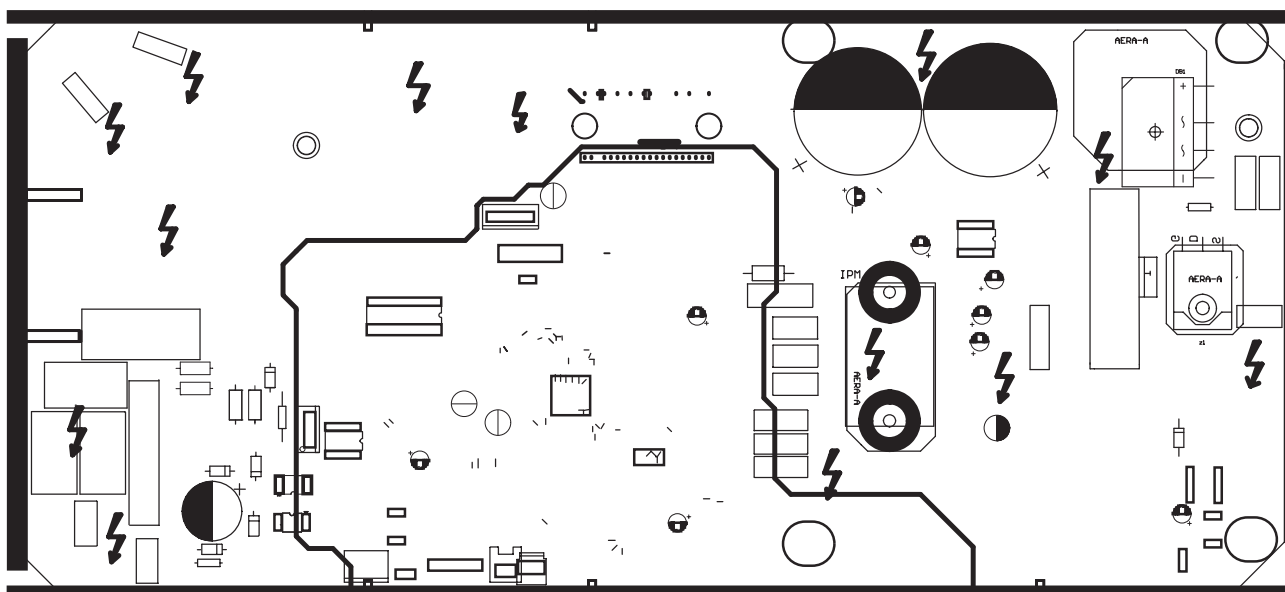


KW09HQ1B8DO KW12HQ1B8DO

• Top view

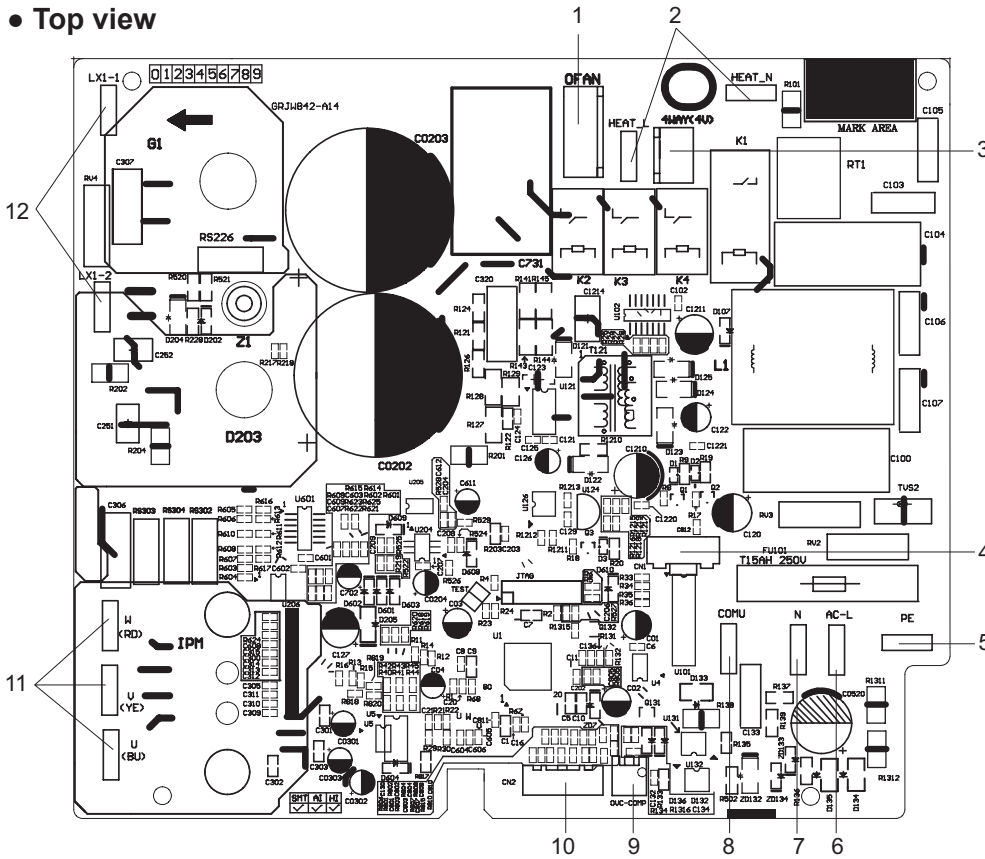


1	Interface of indoor fan
2	Interface of electric heating belt
3	Interface of 4-way valve
4	Interface of electronic expansion valve
5	Interface of earthing wire
6	Interface of live wire
7	Interface of neutral wire
8	Interface of communication wire for indoor fan and outdoor fan
9	Overload interface of compressor
10	Interface of temperature sensor wire
11	Interface of compressor wire
12	Interface of PFC wire

• Bottom view

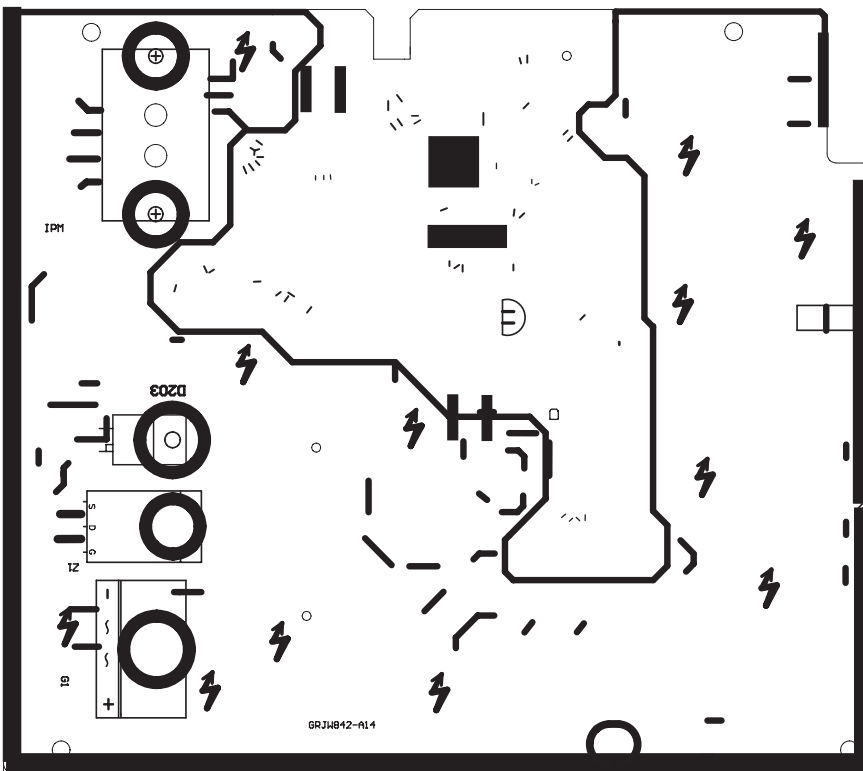


KW09HQ3B8DO KW12HQ3B8DO

• Top view

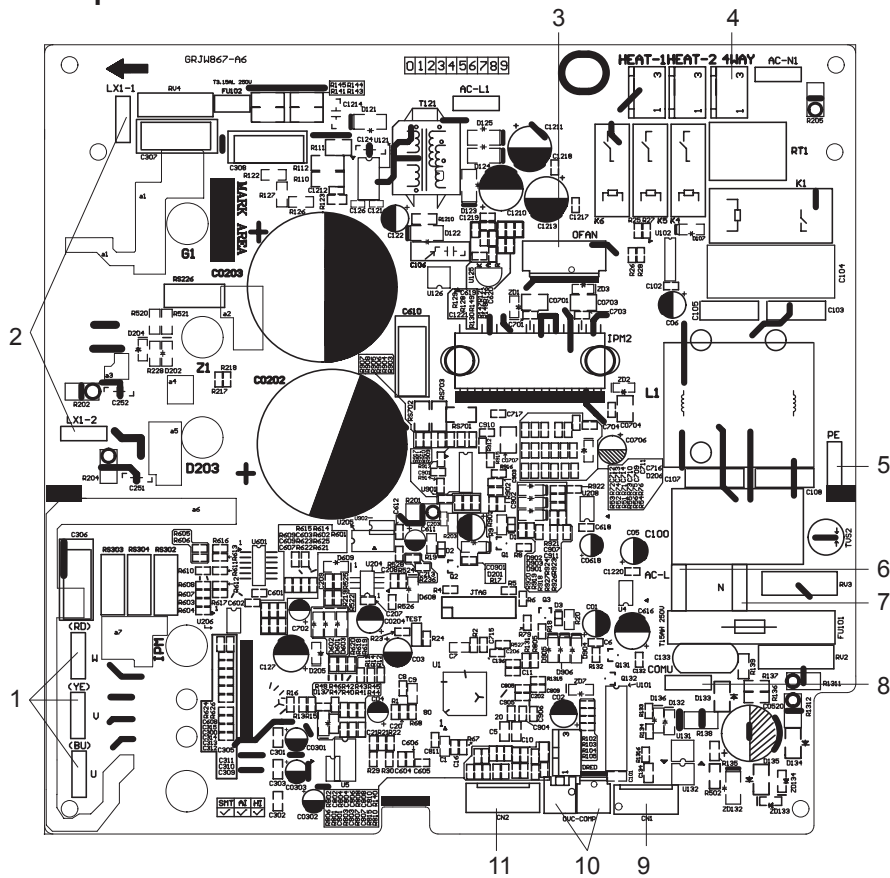

1	Compressor UVW three phase input interface
2	Interface of reactor
3	Interface of fan
4	4-way valve
5	Interface of earthing wire
6	Interface of live wire
7	Interface of netural wire
8	Interface of communication
9	Interface of electronic expansion valve
10	Overload interface of compressor
11	Interface of temperature sensor

• Bottom view

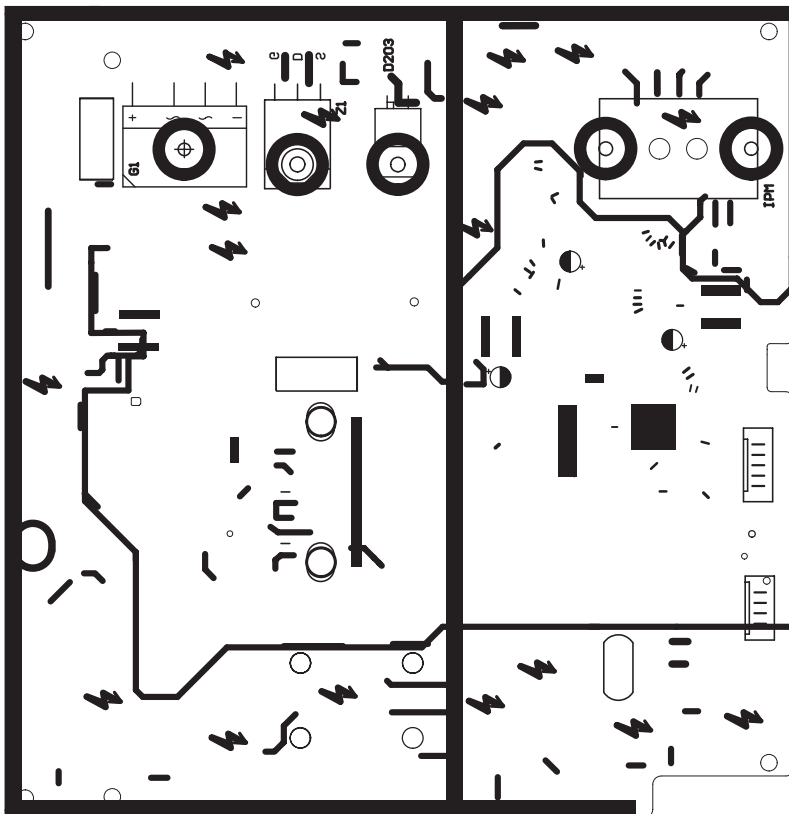









## 6. Function and Control


### 6.1 Remote Controller Introduction

YAN1F1F



- 1 ON/OFF button
- 2 MODE button
- 3 FAN button
- 4 SWING button
- 5 TURBO button
- 6 ▲/ ▼ button
- 7 SLEEP button
- 8 TEMP button
- 9 I FEEL button
- 10 LIGHT button
- 11 CLOCK button
- 12 TIMER ON / TIMER OFF button

#### Introduction for icons on display screen

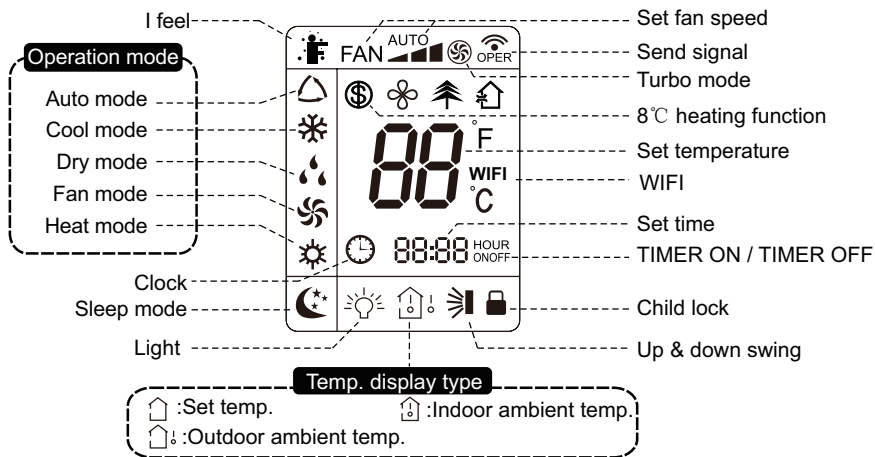

#### Introduction for buttons on remote controller

**Note:**

- This is a general use remote controller, it could be used for the air conditioners with multifunction; For some function, which the model doesn't have, if press the corresponding button on the remote controller that the unit will keep the original running status.
- After putting through the power, the air conditioner will give out a sound. Operation indicator "⏻" is ON (red indicator). After that, you can operate the air conditioner by using remote controller.
- Under on status, pressing the button on the remote controller, the signal icon "📶" on the display of remote controller will blink once and the air conditioner will give out a "de" sound, which means the signal has been sent to the air conditioner.
- Under off status, set temperature and clock icon will be displayed on the display of remote controller (If timer on, timer off and light functions are set, the corresponding icons will be displayed on the display of remote controller at the same time); Under on status, the display will show the corresponding set function icons.

### 1. ON/OFF button

Press this button to turn on the unit. Press this button again to turn off the unit.

### 2. MODE button

Press this button to select your required operation mode.




- When selecting auto mode, air conditioner will operate automatically according to ex-factory setting. Set temperature cant be adjusted and will not be displayed as well. Press "FAN" button can adjust fan speed. Press "SWING" button can adjust fan blowing angle.
- After selecting cool mode, air conditioner will operate under cool mode. Cool indicator "❄️" on indoor unit is ON(This indicator is not available for some models). Press "▲" or "▼" button to adjust set temperature.Press "FAN" button to adjust fan speed.Press "SWING" button to adjust fan blowing angle.
- When selecting dry mode, the air conditioner operates at low speed under dry mode. Dry indicator "💧" on indoor unit is ON(This indicator is not available for some models).Under dry mode, fan speed cant be adjusted. Press "SWING" button to adjust fan blowing angle.
- When selecting fan mode, the air conditioner will only blow fan, no cooling and no heating. All indicators are OFF. Press "FAN" button to adjust fan speed. Press "SWING" button to adjust fan blowing angle.
- When selecting heating mode, the air conditioner operates under heat mode. Heat indicator "☀️" on indoor unit is ON(This indicator is not available for some models).Press "▲" or "▼" button to adjust set temperature. Press "FAN" button to adjust fan speed. Press "SWING" button to adjust fan blowing angle. (Cooling only unit wont receive heating mode signal. If setting heat mode with remote controller , press ON/OFF button cant start up the unit).

#### Note:

- For preventing cold air, after starting up heating mode, indoor unit will delay 1~5 minutes to blow air (actual delay time is depend on indoor ambient temperature).
- Set temperature range from remote controller: 16~30℃ (60.8~86.0°F); Fan speed: auto, low speed, medium speed, high speed.

### 3. FAN button

Pressing this button can set fan speed circularly as: auto (AUTO), low( 🏠 ),medium( 🏠🏠 ), high( 🏠🏠🏠 ).




#### Caution:

- Under AUTO speed, air conditioner will select proper fan speed automatically according to ex-factory setting.
- Fan speed under dry mode is low speed.

### 4. SWING button

Press this button can select up&down swing angle. Fan blow angle can be selected circularly as below:



- When selecting "🏠", air conditioner is blowing fan automatically. Horizontal louver will automatically swing up & down at maximum angle.
- When selecting "🏠", "🏠", "🏠", "🏠", "🏠", air conditioner is blowing fan at fixed position. Horizontal louver will stop at the fixed position.
- When selecting "🏠", "🏠", "🏠", air conditioner is blowing fan at fixed angle. Horizontal louver will send air at the fixed angle.
- Hold "🏠" button above 2s to set your required swing angle. When reaching your required angle, release the button.

#### Note:

- "🏠", "🏠", "🏠" may not be available. When air conditioner receives this signal, the air conditioner will blow fan automatically.

### 5. TURBO button

Under COOL or HEAT mode, press this button to turn to quick COOL or quick HEAT mode. "🌀" icon is displayed on remote controller. Press this button again to exit turbo function and "🌀" icon will disappear.

### 6. ▲/▼ button

- Press "▲" or "▼" button once increase or decrease set temperature 1℃ (33.8°F). Holding "▲" or "▼" button, 2s later, set temperature on remote controller will change quickly. On releasing button after setting is finished, temperature indicator on indoor unit will change accordingly. (Temperature cant be adjusted under auto mode)
- When setting TIMER ON, TIMER OFF or CLOCK, press "▲" or "▼" button to adjust time. (Refer to CLOCK, TIMER ON, TIMER OFF buttons)



## Function introduction for combination buttons

### 1. Energy-saving function

Under cooling mode, press "TEMP" and "CLOCK" buttons simultaneously to start up or turn off energy-saving function. When energy-saving function is started up, "SE" will be shown on remote controller, and air conditioner will adjust the set temperature automatically according to ex-factory setting to reach to the best energy-saving effect. Press "TEMP" and "CLOCK" buttons simultaneously again to exit energy-saving function.

#### Note:

- Under energy-saving function, fan speed is defaulted at auto speed and it can't be adjusted.
- Under energy-saving function, set temperature can't be adjusted. Press "TURBO" button and the remote controller won't send signal.
- Sleep function and energy-saving function can't operate at the same time. If energy-saving function has been set under cooling mode, press sleep button will cancel energy-saving function. If sleep function has been set under cooling mode, start up the energy-saving function will cancel sleep function.

### 2. 8℃ heating function

Under heating mode, press "TEMP" and "CLOCK" buttons simultaneously to start up or turn off 8℃ heating function. When this function is started up, "8" and "8℃" will be shown on remote controller, and the air conditioner keep the heating status at 8℃. Press "TEMP" and "CLOCK" buttons simultaneously again to exit 8℃ heating function.

#### Note:

- Under 8℃ heating function, fan speed is defaulted at auto speed and it can't be adjusted.
- Under 8℃ heating function, set temperature can't be adjusted. Press "TURBO" button and the remote controller won't send signal.
- Sleep function and 8℃ heating function can't operate at the same time. If 8℃ heating function has been set under cooling mode, press sleep button will cancel 8℃ heating function. If sleep function has been set under cooling mode, start up the 8℃ heating function will cancel sleep function.
- Under ℉ temperature display, the remote controller will display 46 ℉ heating.

### 3. Child lock function

Press "▲" and "▼" simultaneously to turn on or turn off child lock function. When child lock function is on, "🔒" icon is displayed on remote controller. If you operate the remote controller, the "🔒" icon will blink three times without sending signal to the unit.

### 4. Temperature display switchover function

Under OFF status, press "▼" and "MODE" buttons simultaneously to switch temperature display between ℃ and ℉.

### 5. WIFI function

Under ON status, press "Mode" and "Turbo" button simultaneously, the "WiFi" icon will be displayed on remote controller. Press "Mode" and "Turbo" button simultaneously, the "WiFi" icon will disappear.

If "H1" is displayed on the remote controller while it's not operated by the professional person/after-sales person, it belongs to the misoperation. Please operate it as below to cancel it. Under the OFF status of remote controller, hold the Mode button for 5s to cancel "H1" display.

#### Note:

- If remote controller displays "H1", it belongs to the normal function reminder. If the unit is defrosting under heating mode, it operates according to H1 defrosting mode. "H1" won't be displayed on the panel of indoor unit;
- Once you set H1 mode, if you turn off unit by remote controller, H1 will display 3 times on the remote controller and then disappear;
- Also, when you set H1 mode, when you change to heating mode, H1 will display 3 times on the remote controller and then disappear.

## Operation guide


1. After putting through the power, press "ON/OFF" button on remote controller to turn on the air conditioner.
2. Press "MODE" button to select your required mode: AUTO, COOL, DRY, FAN, HEAT.
3. Press "▲" or "▼" button to set your required temperature. (Temperature can't be adjusted under auto mode).
4. Press "FAN" button to set your required fan speed: auto, low, medium and high speed.
5. Press "SWING" button to select fan blowing angle.

## Replacement of batteries in remote controller

1. Press the back side of remote controller marked with "🔓", as shown in the fig, and then push out the cover of battery box along the arrow direction.
2. Replace two 7# (AAA 1.5V) dry batteries, and make sure the position of "+" polar and "-" polar are correct.
3. Reinstall the cover of battery box.

#### Note:

- During operation, point the remote control signal sender at the receiving window on indoor unit.
- The distance between signal sender and receiving window should be no more than 8m, and there should be no obstacles between them.
- Signal may be interfered easily in the room where there is fluorescent lamp or wireless telephone; remote controller should be close to indoor unit during operation.
- Replace new batteries of the same model when replacement is required.
- When you don't use remote controller for a long time, please take out the batteries.
- If the display on remote controller is fuzzy or there's no display, please replace batteries.

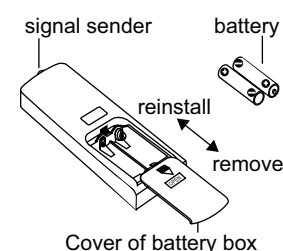





### 1. ON/OFF button

Press this button to turn on the unit. Press this button again to turn off the unit.

### 2. MODE button

Press this button to select your required operation mode.




- When selecting auto mode, air conditioner will operate automatically according to ex-factory setting. Set temperature cant be adjusted and will not be displayed as well. Press "FAN" button can adjust fan speed. Press "SWING" button can adjust fan blowing angle.
- After selecting cool mode, air conditioner will operate under cool mode. Cool indicator on indoor unit is ON(This indicator is not available for some models). Press "▲" or "▼" button to adjust set temperature. Press "FAN" button to adjust fan speed. Press "SWING" button to adjust fan blowing angle.
- When selecting dry mode, the air conditioner operates at low speed under dry mode. Dry indicator on indoor unit is ON(This indicator is not available for some models). Under dry mode, fan speed cant be adjusted. Press "SWING" button to adjust fan blowing angle.
- When selecting fan mode, the air conditioner will only blow fan, no cooling and no heating. All indicators are OFF. Press "FAN" button to adjust fan speed. Press "SWING" button to adjust fan blowing angle.
- When selecting heating mode, the air conditioner operates under heat mode. Heat indicator on indoor unit is ON(This indicator is not available for some models). Press "▲" or "▼" button to adjust set temperature. Press "FAN" button to adjust fan speed. Press "SWING" button to adjust fan blowing angle. (Cooling only unit wont receive heating mode signal. If setting heat mode with remote controller, press ON/OFF button cant start up the unit).

#### Note:

- For preventing cold air, after starting up heating mode, indoor unit will delay 1~5 minutes to blow air (actual delay time is depend on indoor ambient temperature).
- Set temperature range from remote controller: 16~30℃ ; Fan speed: auto, low speed, medium speed, high speed.

### 3. FAN button

Pressing this button can set fan speed circularly as: auto (AUTO), low(▲), medium(▲▲), high(▲▲▲).

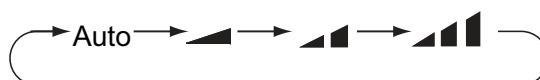

#### Note:


- Under AUTO speed, air conditioner will select proper fan speed automatically according to ex-factory setting.
- Fan speed under dry mode is low speed.
- X-FAN function: Hold fan speed button for 2s in COOL or DRY mode, the icon "☼" is displayed and the indoor fan will continue operation for a few minutes in order to dry the indoor unit even though you have turned off the unit. After energization, X-FAN OFF is defaulted. X-FAN is not available in AUTO, FAN or HEAT mode.

This function indicates that moisture on evaporator of indoor unit will be blown after the unit is stopped to avoid mould.

- Having set X-FAN function on: After turning off the unit by pressing ON/OFF button indoor fan will continue running for a few minutes. at low speed. In this period, Hold fan speed button for 2s to stop indoor fan directly.
- Having set X-FAN function off: After turning off the unit by pressing ON/OFF button, the complete unit will be off directly.

### 4. SWING button

Press this button can select up&down swing angle. Fan blow angle can be selected circularly as below:



- When selecting "☼", air conditioner is blowing fan automatically. Horizontal louver will automatically swing up & down at maximum angle.
- When selecting "↑", "↓", "←", "→", air conditioner is blowing fan at fixed position. Horizontal louver will stop at the fixed position.
- When selecting "↗", "↘", "↙", "↚", air conditioner is blowing fan at fixed angle. Horizontal louver will send air at the fixed angle.
- Hold "☼" button above 2s to set your required swing angle. When reaching your required angle, release the button.

#### Note:

- "↗", "↘", "↙", "↚" may not be available. When air conditioner receives this signal, the air conditioner will blow fan automatically.

### 5. TURBO button

Under COOL or HEAT mode, press this button to turn to quick COOL or quick HEAT mode. "⚡" icon is displayed on remote controller. Press this button again to exit turbo function and "⚡" icon will disappear.

## 6. ▲/▼ button


- Press "▲" or "▼" button once increase or decrease set temperature 1°C (1°F). . Holding "▲" or "▼" button, 2s later, set temperature on remote controller will change quickly. On releasing button after setting is finished, temperature indicator on indoor unit will change accordingly. (Temperature can't be adjusted under auto mode)
- When setting TIMER ON, TIMER OFF or CLOCK, press "▲" or "▼" button to adjust time. (Refer to CLOCK, TIMER ON, TIMER OFF buttons)

## 7. SLEEP button

Under COOL, HEAT mode, press this button to start up sleep function. "☾" icon is displayed on remote controller. Press this button again to cancel sleep function and "☾" icon will disappear.

## 8. TEMP button

By pressing this button, you can see indoor set temperature, indoor ambient temperature or outdoor ambient temperature on indoor units display. The setting on remote controller is selected circularly as below:



- When selecting "no display" or no display with remote controller, temperature indicator on indoor unit displays set temperature.
- When selecting "Indoor Unit Icon" with remote controller, temperature indicator on indoor unit displays indoor ambient temperature.
- When selecting "Outdoor Unit Icon" with remote controller, temperature indicator on indoor unit displays outdoor ambient temperature.

### Note:

- Outdoor temperature display is not available for some models. At that time, indoor unit receives "Outdoor Unit Icon" signal, while it displays indoor set temperature.
- Its defaulted to display set temperature when turning on the unit. There is no display in the remote controller.
- Only for the models whose indoor unit has dual-8 display.
- When selecting displaying of indoor or outdoor ambient temperature, indoor temperature indicator displays corresponding temperature and automatically turn to display set temperature after three or five seconds.

## 9. WIFI button

Press "WiFi" button to turn on or turn off WiFi function. When WiFi function is turned on, the "WiFi" icon will be displayed on remote controller; Under status of remote controller off, press "MODE" and "WiFi" buttons simultaneously for 1s, WiFi module will restore to factory default setting.

## 10. LIGHT button

Press this button to turn off display light on indoor unit. "☺" icon on remote controller disappears. Press this button again to turn on display light. "☺" icon is displayed.

## 11. CLOCK button

Press this button to set clock time. "🕒" icon on remote controller will blink. Press "▲" or "▼" button within 5s to set clock time. Each pressing of "▲" or "▼" button, clock time will increase or decrease 1 minute. If hold "▲" or "▼" button, 2s later, time will change quickly. Release this button when reaching your required time. Press "CLOCK" button to confirm the time. "🕒" icon stops blinking.

### Note:

- Clock time adopts 24-hour mode.
- The interval between two operation can't exceed 5s. Otherwise, remote controller will quit setting status. Operation for TIMER ON/TIMER OFF is the same.

## 12. TIMER ON / TIMER OFF button

### • TIMER ON button

"TIMER ON" button can set the time for timer on. After pressing this button, "🕒" icon disappears and the word "ON" on remote controller blinks. Press "▲" or "▼" button to adjust TIMER ON setting. After each pressing "▲" or "▼" button, TIMER ON setting will increase or decrease 1min. Hold "▲" or "▼" button, 2s later, the time will change quickly until reaching your required time. Press "TIMER ON" to confirm it. The word "ON" will stop blinking. "🕒" icon resumes displaying. Cancel TIMER ON: Under the condition that TIMER ON is started up, press "TIMER ON" button to cancel it.

### • TIMER OFF button

"TIMER OFF" button can set the time for timer off. After pressing this button, "🕒" icon disappears and the word "OFF" on remote controller blinks. Press "▲" or "▼" button to adjust TIMER OFF setting. After each pressing "▲" or "▼" button, TIMER OFF setting will increase or decrease 1min. Hold "▲" or "▼" button, 2s later, the time will change quickly until reaching your required time. Press "TIMER OFF" word "OFF" will stop blinking. "🕒" icon resumes displaying. Cancel TIMER OFF. Under the condition that TIMER OFF is started up, press "TIMER OFF" button to cancel it.

**Note:**

- Under on and off status, you can set TIMER OFF or TIMER ON simultaneously.
- Before setting TIMER ON or TIMER OFF, please adjust the clock time.
- After starting up TIMER ON or TIMER OFF, set the constant circulating valid. After that, air conditioner will be turned on or turned off according to setting time. ON/OFF button has no effect on setting. If you don't need this function, please use remote controller to cancel it.

If "H1" is displayed on the remote controller while it's not operated by the professional person/after-sales person, it belongs to the misoperation. Please operate it as below to cancel it. Under the OFF status of remote controller, hold the Mode button for 5s to cancel "H1" display.

**Note:**

- If remote controller displays "H1", it belongs to the normal function reminder. If the unit is defrosting under heating mode, it operates according to H1 defrosting mode. "H1" won't be displayed on the panel of indoor unit;
- Once you set H1 mode, if you turn off unit by remote controller, H1 will display 3 times on the remote controller and then disappear;
- Also, when you set H1 mode, when you change to heating mode, H1 will display 3 times on the remote controller and then disappear.

**Function introduction for combination buttons****1. Energy-saving function**

Under cooling mode, press "TEMP" and "CLOCK" buttons simultaneously to start up or turn off energy-saving function. When energy-saving function is started up, "SE" will be shown on remote controller, and air conditioner will adjust the set temperature automatically according to ex-factory setting to reach to the best energy-saving effect. Press "TEMP" and "CLOCK" buttons simultaneously again to exit energy-saving function.

**Note:**

- Under energy-saving function, fan speed is defaulted at auto speed and it can't be adjusted.
- Under energy-saving function, set temperature can't be adjusted. Press "TURBO" button and the remote controller won't send signal.
- Sleep function and energy-saving function can't operate at the same time. If energy-saving function has been set under cooling mode, press sleep button will cancel energy-saving function. If sleep function has been set under cooling mode, start up the energy-saving function will cancel sleep function.

**2. 8 °C heating function**

Under heating mode, press "TEMP" and "CLOCK" buttons simultaneously to start up or turn off 8 °C heating function. When this function is started up, "8°C" and "8°C" will be shown on remote controller, and the air conditioner keep the heating status at 8 °C. Press "TEMP" and "CLOCK" buttons simultaneously again to exit 8 °C heating function.

**Note:**

- Under 8 °C heating function, fan speed is defaulted at auto speed and it can't be adjusted.
- Under 8 °C heating function, set temperature can't be adjusted. Press "TURBO" button and the remote controller won't send signal.
- Sleep function and 8 °C heating function can't operate at the same time. If 8 °C heating function has been set under cooling mode, press sleep button will cancel 8 °C heating function. If sleep function has been set under cooling mode, start up the 8 °C heating function will cancel sleep function.
- Under °F temperature display, the remote controller will display 46 °F heating.

**3. Child lock function**

Press "▲" and "▼" simultaneously to turn on or turn off child lock function. When child lock function is on, "🔒" icon is displayed on remote controller. If you operate the remote controller, the "🔒" icon will blink three times without sending signal to the unit.

**4. Temperature display switchover function**

Under OFF status, press "▼" and "MODE" buttons simultaneously to switch temperature display between °C and °F.

**5. I FEEL Function**


Press "▲" and "MODE" buttons simultaneously to start I FEEL function and "🌡️" will be displayed on the remote controller. After this function is set, the remote controller will send the detected ambient temperature to the controller and the unit will automatically adjust the indoor temperature according to the detected temperature. Press this two buttons simultaneously again to close I FEEL function and "🌡️" will disappear.

- Please put the remote controller near user when this function is set. Do not put the remote controller near the object of high temperature or low temperature in order to avoid detecting inaccurate ambient temperature. When I FEEL function is turned on, the remote controller should be put within the area where indoor unit can receive the signal sent by the remote controller.

**Operation guide**


1. After putting through the power, press "ON/OFF" button on remote controller to turn on the air conditioner.
2. Press "MODE" button to select your required mode: AUTO, COOL, DRY, FAN, HEAT.
3. Press "▲" or "▼" button to set your required temperature. (Temperature can't be adjusted under auto mode).
4. Press "FAN" button to set your required fan speed: auto, low, medium and high speed.
5. Press "SWING" button to select fan blowing angle.

## Replacement of batteries in remote controller

1. Press the back side of remote controller marked with "  ", as shown in the fig, and then push out the cover of battery box along the arrow direction.
2. Replace two 7# (AAA 1.5V) dry batteries, and make sure the position of "+" polar and "-" polar are correct.
3. Reinstall the cover of battery box.

### Note:

- During operation, point the remote control signal sender at the receiving window on indoor unit.
- The distance between signal sender and receiving window should be no more than 8m, and there should be no obstacles between them.
- Signal may be interfered easily in the room where there is fluorescent lamp or wireless telephone; remote controller should be close to indoor unit during operation.
- Replace new batteries of the same model when replacement is required.
- When you dont use remote controller for a long time, please take out the batteries.
- If the display on remote controller is fuzzy or theres no display, please replace batteries.

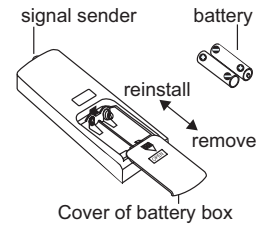


YV1FB7F



- 1 ON/OFF button
- 2 ▲ button
- 3 MODE button
- 4 SWING button
- 5 ▼ button
- 6 FAN button
- 7 TIMER OFF button
- 8 CLOCK button
- 9 TIMER ON button
- 10 SLEEP button
- 11 TEMP button
- 12 TURBO button
- 13 X-FAN | ☀️ button
- 14 I FEEL button
- 15 ↑/↓ button

### Introduction for icons on display screen

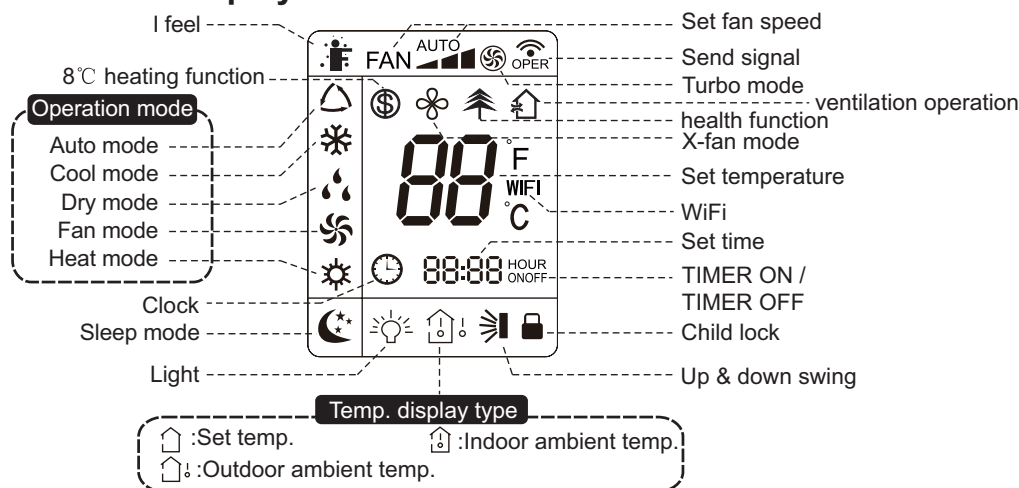

### Introduction for buttons on remote controller

**Note:**

- After putting through the power, the air conditioner will give out a sound. Operation indicator "⏻" is ON (red indicator, the colour is different for different models).After that, you can operate the air conditioner by using remote controller.
- Under on status, pressing the button on the remote controller, the signal icon "📶" on the display of remote controller will blink once and the air conditioner will give out a "de" sound, which means the signal has been sent to the air conditioner.
- Under off status, set temperature and clock icon will be displayed on the display of remote controller (If timer on, timer off and light functions are set, the corre-sponding icons will be displayed on the display of remote controller at the same time); Under on status, the display will show the corresponding set function icons.

**1. ON/OFF button**

Press this button to turn on the unit. Press this button again to turn off the unit.

**2. ▲ button**

Press this button to increase set temperature. Holding it down above 2 seconds rapidly increases set temperature. In AUTO mode, set temperature is not adjustable.

### 3. MODE button

Each time you press this button, a mode is selected in a sequence that goes from AUTO, COOL, DRY, FAN, and HEAT \*, as the following:

AUTO ► COOL ► DRY ► FAN ► HEAT\*




\* Note: Only for models with heating function.

After energization, AUTO mode is defaulted. In AUTO mode, the set temperature will not be displayed on the LCD, and the unit will automatically select the suitable operation mode in accordance with the room temperature to make indoor room comfortable.

### 4. SWING button

Press this button to set up & down swing angle, which circularly changes as below:



This remote controller is universal. If any command is sent out, the unit will carry out the command as indicated by the remote controller icon.


indicates the guide louver swings as: [diagram of louver positions]

### 5. ▼ button

Press this button to decrease set temperature. Holding it down above 2 seconds rapidly decreases set temperature. In AUTO mode, set temperature is not adjustable.

### 6. FAN button

This button is used for setting Fan Speed in the sequence that goes from AUTO, Low speed, Medium speed, High speed, then back to Auto.



### 7. TIMER OFF button

Press this button to initiate the auto-off timer. To cancel the auto-timer program, simply press the button again. TIMER OFF setting is the same as TIMER ON.

### 8. CLOCK button

Press CLOCK button, [clock icon] blinking. Within 5 seconds, pressing ▲ or ▼ button adjusts the present time. Holding down either button above 2 seconds increases or decreases the time by 1 minute every 0.5 second and then by 10 minutes every 0.5 second. During blinking after setting, press CLOCK button again to confirm the setting, and then [clock icon] will be constantly displayed.

### 9. TIMER ON button


Press this button to initiate the auto-ON timer. To cancel the auto-timer program, simply press this button again. After press of this button, [clock icon] disappears and "ON" blinks. 0 0:00 is displayed for ON time setting. Within 5 seconds, press ▲ or ▼ button to adjust the time value. Every press of either button changes the time setting by 1 minute. Holding down either button rapidly changes the time setting by 1 minute and then 10 minutes. Within 5 Seconds after setting, press TIMER ON button to confirm.

### 10. SLEEP button

Press this button to go into the SLEEP operation mode. Press it again to cancel this function. This function is available in COOL, HEAT (Only for models with heating function) to maintain the most comfortable temperature for you.

### 11. TEMP button

Press this button, you can see indoor set temperature, indoor ambient temperature on indoor unit's display. The setting on remote controller is selected circularly as below:



When selecting "no display" with remote controller or no display, temperature indicator on indoor unit displays set temperature; When selecting "indoor set temperature" with remote controller, temperature indicator on indoor unit displays indoor ambient temperature; 3s later or within 3s it receives other remote controller signal that will return to display the setting temperature.


Caution:




- This model hasn't outdoor ambient temperature display function. While remote controller can operate "indoor ambient temperature" and indoor unit displays set temperature.
- It's defaulted to display set temperature when turning on the unit.
- Only for the models with temperature indicator on indoor unit.

### 12. TURBO button

Press this button to activate / deactivate the Turbo function which enables the unit to reach the preset temperature in the shortest time. In COOL mode, the unit will blow strong cooling air at super high fan speed. In HEAT mode, the unit will blow strong heating air at super high fan speed.

### 13. X-FAN | button

X-FAN function: In COOL or DRY mode, the icon  is displayed and the indoor fan will continue operation for 2 minutes in order to dry the indoor unit even though you have turned off the unit. After energization, X-FAN OFF is defaulted. X-FAN is not available in AUTO, FAN or HEAT mode.





 function: turn on the display's light and press this button again to turn off the display's light. If the light is turned on,  is displayed. If the light is turned off,  disappears.

### 14. I FEEL button

Press this button to turn on I FEEL function. The unit automatically adjust temperature according to the sensed temperature. Press this button again to cancel I FEEL function.



When I FEEL function is turned on, the remote controller should be put within the area where indoor unit can receive the signal sent by the remote controller.

### 15. button

Press this button to achieve the on and off of healthy and scavenging functions in operation status. Press this button for the first time to start scavenging function; LCD displays "". Press the button for the second time to start healthy and scavenging functions simultaneously; LCD displays "" and "". Press this button for the third time to quit healthy and scavenging functions simultaneously. Press the button for the fourth time to start healthy function; LCD display "". Press this button again to repeat the operation above. (This function is applicable to partial of models)

## Function introduction for combination buttons

### Combination of "▲" and "▼" buttons: About lock

Press "▲" and "▼" buttons simultaneously to lock or unlock the keypad. If the remote controller is locked,  is displayed. In this case, pressing any button,  blinks three times.

### Combination of "MODE" and "▼" buttons:

#### About switch between Fahrenheit and centigrade

At unit OFF, press "MODE" and "▼" buttons simultaneously to switch between °C and °F .


### Combination of "TEMP" and "CLOCK" buttons:

#### About Energy-saving Function

Press "TEMP" and "CLOCK" simultaneously in COOL mode to start energy-saving function. Nixie tube on the remote controller displays "SE". Repeat the operation to quit the function.

### Combination of "TEMP" and "CLOCK" buttons:

#### About 8°C Heating Function

Press "TEMP" and "CLOCK" simultaneously in HEAT mode to start 8°C Heating Function Nixie tube on the remote controller displays "" and a selected temperature of "8°C ".(46 °F if Fahrenheit is adopted). Repeat the operation to quit the function.

### About Back-lighting Function

The unit lights for 4s when energizing for the first time, and 3s for later press.

### Combination "MODE" and "TURBO" buttons: About WIFI function

Press "MODE" and "TURBO" button simultaneously to turn on or turn off WIFI function. When WIFI function is turned on, the "WIFI" icon will be displayed on remote controller; Long press "MODE" and "TURBO" buttons simultaneously for 10s, remote controller will send WIFI reset code and then the WIFI function will be turned on. WIFI function is defaulted ON after energization of the remote controller.

If "H1" is displayed on the remote controller while it's not operated by the professional person/after-sales person, it belongs to the misoperation. Please operate it as below to cancel it. Under the OFF status of remote controller, hold the "MODE" button and "X-FAN" buttons simultaneously for 5s to cancel "H1" display.


#### Note:


- If remote controller displays "H1", it belongs to the normal function reminder. If the unit is defrosting under heating mode, it operates according to H1 defrosting mode. "H1" won't be displayed on the panel of indoor unit;
- Once you set H1 mode, if you turn off unit by remote controller, H1 will display 3 times on the remote controller and then disappear;
- Also, when you set H1 mode, when you change to heating mode, H1 will display 3 times on the remote controller and then disappear.

## Operation guide

1. After putting through the power, press "ON/OFF" button on remote controller to turn on the air conditioner.
2. Press "MODE" button to select your required mode: AUTO, COOL, DRY, FAN,HEAT.
3. Press "▲" or "▼" button to set your required temperature. (Temperature can't be adjusted under auto mode).
4. Press "FAN" button to set your required fan speed: auto, low, medium and high speed.
5. Press "SWING" button to select fan blowing angle.

## Replacement of batteries in remote controller

1. Press the back side of remote controller marked with  , as show in the fig, and then push out the cover of battery box along the arrow direction.
2. Replace two 7# (AAA 1.5V) dry batteries, and make sure the position of "▲" polar and "▼" polar are correct.
3. Reinstall the cover of battery box.

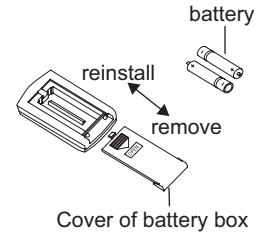

### Note:


- During operation, point the remote control signal sender at the receiving window on indoor unit.
- The distance between signal sender and receiving window should be no more than 8m, and there should be no obstacles between them.
- Signal may be interfered easily in the room where there is fluorescent lamp or wireless telephone; remote controller should be close to indoor unit during operation.
- Replace new batteries of the same model when replacement is required.
- When you don't use remote controller for a long time, please take out the batteries.
- If the display on remote controller is fuzzy or there's no display, please replace batteries.



## 6.2 Ewpe Smart App Operation Manual

**Note:** (only for the mode with this function)

### Control Flow Chart

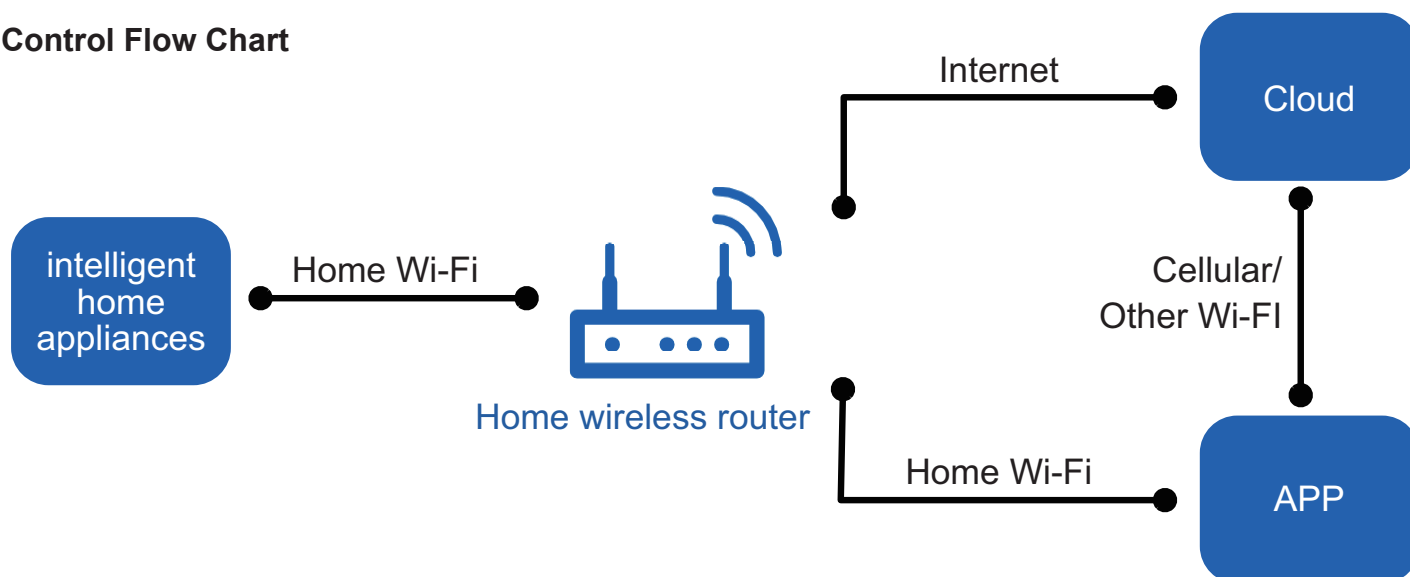

### Operating Systems

Requirement for User's smart phone:



iOS system  
Support iOS7.0 and  
above version



Android system  
Support Android 4.4 and  
above version

### Download and installation



App Download Linkage

Scan the QR code or search "Ewpe Smart" in the application market to download and install it. When "Ewpe Smart" App is installed, register the account and add the device to achieve long-distance control and LAN control of smart home appliances. For more information, please refer to "Help" in App.

## 6.3 Brief Description of Modes and Functions

### ● Indoor Unit

#### 1. Basic function of system

##### (1) Cooling mode

- (1) Under this mode, fan and swing operates at setting status. Temperature setting range is 60.8~86.0°F.
- (2) During malfunction of outdoor unit or the unit is stopped because of protection, indoor unit keeps original operation status.

##### (2) Drying mode

- (1) Under this mode, fan operates at low speed and swing operates at setting status. Temperature setting range is 60.8~86.0°F.
- (2) During malfunction of outdoor unit or the unit is stopped because of protection, indoor unit keeps original operation status.
- (3) Protection status is same as that under cooling mode.
- (4) Sleep function is not available for drying mode.

##### (3) Heating mode

- (1) Under this mode, Temperature setting range is 60.8~86.0°F.
- (2) Working condition and process for heating mode:

When turn on the unit under heating mode, indoor unit enters into cold air prevention status. When the unit is stopped or at OFF status, and indoor unit has been started up just now, the unit enters into residual heat-blowing status.

##### (4) Working method for AUTO mode:

1. Working condition and process for AUTO mode:

a. Under AUTO mode, standard heating  $T_{\text{preset}}=68.0^{\circ}\text{F}$  and standard cooling  $T_{\text{preset}}=77.0^{\circ}\text{F}$ . The unit will switch mode automatically according to ambient temperature.

2. Protection function

- a. During cooling operation, protection function is same as that under cooling mode.
- b. During heating operation, protection function is same as that under heating mode.

3. Display: Set temperature is the set value under each condition. Ambient temperature is ( $T_{\text{amb.}}-T_{\text{compensation}}$ ) for heat pump unit and  $T_{\text{amb.}}$  for cooling only unit.

4. If there's I feel function,  $T_{\text{compensation}}$  is 0. Others are same as above.

##### (5) Fan mode

Under this mode, indoor fan operates at set fan speed. Compressor, outdoor fan, 4-way valve and electric heating tube stop operation. Indoor fan can select to operate at high, medium, low or auto fan speed. Temperature setting range is 60.8~86.0°F.

#### 2. Other control

##### (1) Buzzer

Upon energization or availably operating the unit or remote controller, the buzzer will give out a beep.

##### (2) Auto button

If press this auto button when turning off the unit, the complete unit will operate at auto mode. Indoor fan operates at auto fan speed and swing function is turned on. Press this auto button at ON status to turn off the unit.

##### (3) Auto fan

Heating mode: During auto heating mode or normal heating mode, auto fan speed will adjust the fan speed automatically according to ambient temperature and set temperature.

##### (4) Sleep

After setting sleep function for a period of time, system will adjust set temperature automatically.

##### (5) Timer function:

General timer and clock timer functions are compatible by equipping remote controller with different functions.

##### (6) Memory function

memorize compensation temperature, off-peak energization value.

Memory content: mode, up&down swing, light, set temperature, set fan speed, general timer (clock timer can't be memorized).

After power recovery, the unit will be turned on automatically according to memory content.

##### (7) Health function

During operation of indoor fan, set health function by remote controller. Turn off the unit will also turn off health function.

Turn on the unit by pressing auto button, and the health is defaulted ON.

**(8) I feel control mode**

After controller received I feel control signal and ambient temperature sent by remote controller, controller will work according to the ambient temperature sent by remote controller.

**(9) Compulsory defrosting function**

(1) Start up compulsory defrosting function

Under ON status, set heating mode with remote controller and adjust the temperature to 60.8°F. Press “+, -, +, -, +,-” button successively within 5s and the complete unit will enter into compulsory defrosting status. Meanwhile, heating indicator on indoor unit will ON 10s and OFF 0.5s successively. (Note: If complete unit has malfunction or stops operation due to protection, compulsory defrosting function can be started up after malfunction or protection is resumed.)

(2) Exit compulsory defrosting mode

After compulsory defrosting is started up, the complete unit will exit defrosting operation according to the actual defrosting result, and the complete unit will resume normal heating operation.

**(10) Refrigerant recovery function:**

(1) Enter refrigerant recycling function

Within 5min after energizing (unit ON or OFF status is ok), continuously press LIGHT button for 3 times within 3s to enter refrigerant recycling mode; Fo is displayed and refrigerant recycling function is started. At this moment, the maintenance people closes liquid valve. After 5min, stick the thimble of maintenance valve with a tool. If there is no refrigerant spraying out, close the gas valve immediately and then turn off the unit to remove the connection pipe.

(2) Exit refrigerant recycling function

After entering refrigerant recycling mode, when receive any remote control signal or enter refrigerant recycling mode for 25min, the unit will exit refrigerant recycling mode automatically. If the unit is in standby mode before refrigerant recycling, it will be still in standby mode after finishing refrigerant recycling; if the unit is in ON status before refrigerant recycling, it will still run in original operation mode.

**(11) Ambient temperature display control mode**

1. When user set the remote controller to display set temperature (corresponding remote control code: 01), current set temperature will be displayed.

2. Only when remote control signal is switched to indoor ambient temperature display status (corresponding remote control code: 10) from other display status (corresponding remote control code: 00, 01, 11), controller will display indoor ambient temperature for 3s and then turn back to display set temperature.

Under this mode, indoor fan operates at set fan speed. Compressor, outdoor fan, 4-way valve and electric heating tube stop operation. Indoor fan can select to operate at high, medium, low or auto fan speed. Temperature setting range is 60.8~86.0°F.

**(12) Off-peak energization function:**

Adjust compressors minimum stop time. The original minimum stop time is 180s and then we change to:

The time interval between two start-ups of compressor can't be less than  $180+T$  s ( $0 \leq T \leq 15$ ). T is the variable of controller. That's to say the minimum stop time of compressor is 180s~195s. Read-in T into memory chip when refurbish the memory chip each time. After power recovery, compressor can only be started up after  $180+T$  s at least.

**(13) SE control mode**

The unit operates at SE status.

**(14) X-fan mode**

When X-fan function is turned on, after turn off the unit, indoor fan will still operate at low speed for 2min and then the complete unit will be turned off. When x-fan function is turned off, after turn off the unit, the complete unit will be turned off directly.

**(15) 8° heating function**

Under heating mode, you can set 8° heating function by remote controller. The system will operate at 8° set temperature.

**(16) Turbo fan control function**

Set turbo function under cooling or heating mode to enter into turbo fan speed. Press fan speed button to cancel turbo wind.

No turbo function under auto, dry or fan mode.

## Outdoor Units

### 1. Input Parameter Compensation and Calibration

#### (1) Check the ambient temperature compensation function Indoor ambient temperature compensation function.

a. In cooling mode, the indoor ambient temperature participating in computing control = ( $T_{\text{indoor ambient temperature}} - \Delta T_{\text{cooling indoor ambient temperature compensation}}$ )

b. In heating mode, the indoor ambient temperature participating in computing control = ( $T_{\text{indoor ambient temperature}} - \Delta T_{\text{heating indoor ambient temperature compensation}}$ )

#### (2) Check effective judgment controls of parameters

Effective judgment function of the outdoor exhaust temperature thermo-bulb When conditions a and b are satisfied, the outdoor exhaust temperature thermo-bulb is judged not to be connected into place, the mainboard of outer units will display failure of the outdoor exhaust temperature thermo-bulb (not connected into place), stop the machine for repairing, and resume the machine by remote controls of ON/OFF.

a. Judgment of exhaust detection temperature change:

After the compressor starts up and runs for 10 minutes, if the compressor frequency  $f \geq 40\text{Hz}$ , and the rising value  $T_{\text{exhaust}}$  ( $T_{\text{exhaust (after start-up for 10 minutes)}} - T_{\text{exhaust (before start-up)}}$ )  $< 35.6^\circ\text{F}$ , the outdoor exhaust temperature thermo-bulb can be judged not to be connected into place (judging once when the power is on the first time).

b. Comparative judgment of exhaust detection temperature and condenser detection temperature ( $T_{\text{pipe temperature}} = T_{\text{outdoor pipe temperature in cooling mode}}$ ,  $T_{\text{pipe temperature}} = T_{\text{indoor pipe temperature in heating mode}}$ ): After the compressor starts up and runs for 10 minutes, if the compressor frequency  $f \geq 40\text{Hz}$ , and  $T_{\text{pipe temperature}} \geq (T_{\text{exhaust}} + 37.4)$ , the outdoor exhaust temperature thermobulb can be judged not to be connected into place (judging once when power is on the first time).

### 2. Basic Functions

#### (1) Cooling Mode

##### 1. Conditions and processes of cooling operation:

(1) If the compressor is shut down, and  $[T_{\text{setup}} - (T_{\text{indoor ambient temperature}} - \Delta T_{\text{cooling indoor ambient temperature compensation}})] \leq 32.9^\circ\text{F}$ , start up the machine for cooling, the cooling operation will start;

(2) During operations of cooling, if  $32^\circ\text{F} \leq [T_{\text{setup}} - (T_{\text{indoor ambient temperature}} - \Delta T_{\text{cooling indoor ambient temperature compensation}})] < 35.6^\circ\text{F}$ , the cooling operation will be still running;

(3) During operations of cooling, if  $35.6^\circ\text{F} \leq [T_{\text{setup}} - (T_{\text{indoor ambient temperature}} - \Delta T_{\text{cooling indoor ambient temperature compensation}})]$ , the cooling operation will stop after reaching the temperature point.

##### 2. Temperature setting range

(1) If  $T_{\text{outdoor ambient temperature}} \geq [T_{\text{low-temperature cooling temperature}}]$ , the temperature can be set at:  $61\sim 86^\circ\text{F}$  (Cooling at room temperature);

(2) If  $T_{\text{outdoor ambient temperature}} < [T_{\text{low-temperature cooling temperature}}]$ , the temperature can be set at:  $77\sim 86^\circ\text{F}$  (Cooling at low temperature), that is, the minimum setting temperature for outer units judgment is  $77^\circ\text{F}$ .

#### (2) Dehumidifying Mode

1. Conditions and processes of dehumidifying operations: Same as the cooling mode;

2. The temperature setting range is:  $61\sim 86^\circ\text{F}$ ;

#### (3) Air-supplying Mode

1. The compressor, outdoor fans and four-way valves are switched off;

2. The temperature setting range is:  $61\sim 86^\circ\text{F}$ .

#### (4) Heating Mode

1. Conditions and processes of heating operations: ( $T_{\text{indoor ambient temperature}}$  is the actual detection temperature of indoor environment thermo-bulb,  $T_{\text{heating indoor ambient temperature compensation}}$  is the indoor ambient temperature compensation during heating operations)

(1) If the compressor is shut down, and  $[(T_{\text{indoor ambient temperature}} - \Delta T_{\text{heating indoor ambient temperature compensation}}) - T_{\text{setup}}] \leq 32.9^\circ\text{F}$ , start the machine to enter into heating operations for heating;

(2) During operations of heating, if  $32^\circ\text{F} \leq [(T_{\text{indoor ambient temperature}} - \Delta T_{\text{heating indoor ambient temperature compensation}}) - T_{\text{setup}}] < 35.6^\circ\text{F}$ , the heating operation will be still running;

(3) During operations of heating, if  $35.6^\circ\text{F} \leq [(T_{\text{indoor ambient temperature}} - \Delta T_{\text{heating indoor ambient temperature compensation}}) - T_{\text{setup}}]$ , the heating operation will stop after reaching the temperature point.

2. The temperature setting range in this mode is:  $61\sim 86^\circ\text{F}$ .

### 3. Special Functions

#### Defrosting Control

##### ① Conditions for starting defrosting

After the time for defrosting is judged to be satisfied, if the temperature for defrosting is satisfied after detections for continuous 3minutes, the defrosting operation will start.

##### ② Conditions of finishing defrosting

The defrosting operation can exit when any of the conditions below is satisfied:

##### ③ $T_{\text{outdoor pipe temperature}} \geq (T_{\text{outdoor ambient temperature}} - [T_{\text{temperature 1 of finishing defrosting}}])$ ;

##### ④ The continuous running time of defrosting reaches [tmax. defrosting time].

### 4. Control Logic

#### (1) Compressor Control

Start the compressor after starting cooling, heating, dehumidifying operations, and the outer fans start for 5s; When the machine is shutdown, in safety stops and when switching to air-supplying mode, the compressor will stop immediately. In all modes: once the compressor starts up, it will not be allowed to stop until having run for the [tmin. compressor running time] (Note: including cases of shutdown when the temperature point is reached; except the cases requiring stopping the compressor such as fault protection, remote shutdown, mode switching etc.); In all modes: once the compressor stops, it will be allowed be restart after 3-minute delay (Note: The indoor units have a function of power memory, the machine can be restarted after remote shutdown and powering up again without delay).

##### 1. Cooling mode

Start the machine to enter into cooling operation for cooling, the compressor is switched on.

##### 2. Dehumidifying mode

Same as the cooling mode.

##### 3. Air-supplying mode

The compressor is switched off.

##### 4. Heating mode

(1) Start the machine to enter into heating operation for heating, the compressor is switched on.

(2) Defrosting:

a. Defrosting starts: the compressor is shut down, and restarts it after 55-second delay.

b. Defrosting ends: the compressor stops, then starts it after 55-second delay.

#### (2) Outer Fans Control

Notes:

Only the outer fans run for at least 80s in each air flow speed can the air flow be switched;

After the outer fans run compulsively in high speed for 80s when the machine starts up, control the air flow according to the logic.

After remote shutdown, safety stops, and when the machine stops after reaching the temperature point, as well as after the compressor stops, extend 1 minute, the outer fans will stop (During the period in the 1 minute, the air flow of outer fans can be changed according to the outdoor ambient temperature changes); When running with force, the outdoor fans shall run in the highest air flow.

#### (3) 4-way valve control

1. The 4-way valve control under the modes of Cooling, dehumidification and supplying air: closing;

2. The status of 4-way valve control under the heating mode: getting power;

(1) 4-way valve power control under heating mode

a. Starts the machine under heating mode, the 4-way valve will get power immediately.

(2) 4-way valve power turn-off control under heating mode

a. When you should turn off the power or switch to other mode under heating mode, the power of 4-way valve will be cut after 2 minutes of the compressor stopped.

b. When all kinds of protection stops, the power of 4-way valve will be cut after delaying 4 minutes.

(3) Defrosting control under heating mode:

a. Defrosting begins: The power of 4-way valve will be cut after 50s of entering into the defrosting compressor.

b. Defrosting stops: The 4-way valve will get power after 50s of exiting the defrosting compressor.

#### (4) Evaporator frozen-preventing protection function

At the mode of Cooling, dehumidifying:

Evaporator frozen-preventing protection function is allowed to begin after 6 min of starting the compressor.

**1. Starting estimation:**

After the compressor stopped working for 180s, if  $T_{\text{inner pipe}} > [T_{\text{frozen-preventing frequency-limited temperature}}$  (the temperature of hysteresis is 35.6°F ), the machine is only allowed to start for operating, otherwise it should not be started, and should be stopped to treat according to the frozen-preventing protection: Clear the trouble under the mode of power turn-off / heating, and the protection times are not counted.

**2. Frequency limited**

$[T_{\text{frozen-preventing normal speed frequency-reducing temperature}}] \leq [T_{\text{inner pipe}} T_{\text{frozen-preventing frequency-limited temperature}}]$  , you should limit the frequency raising of compressor.

**3. Reducing frequency at normal speed:**

If  $[T_{\text{frozen-preventing high speed frequency-reducing temperature}}] \leq [T_{\text{inner pipe}} T_{\text{frozen-preventing normal speed frequency-reducing temperature}}]$ , you should adjust the compressor frequency by reducing 8Hz/90s till the lower limit;

**4. Reducing frequency at high speed:**

If  $[T_{\text{frozen-preventing power turn-off temperature}}] \leq T_{\text{inner pipe}} [T_{\text{frozen-preventing high speed frequency-reducing temperature}}]$  you should adjust the compressor frequency by reducing 30Hz/90s till the lower limit;

**5. Power turn-off:**

If the  $T_{\text{inner pipe}} < [T_{\text{frozen-preventing power turn-off temperature}}]$ , then frozen-preventing protect to stop the machine; If  $[T_{\text{frozen-preventing frequency-limited temperature}}] < T_{\text{inner pipe}}$  , and the compressor has stopped working for 3 minutes, the whole machine should be allowed to operate.

6. If the frozen-preventing protection power turn-off continuously occurs for six times, it should not be resumed automatically, and you should press the ON/OFF button to resume if the fault keeps on. During the process of running, if the running time of compressor exceeds the t evaporator frozen-preventing protection times zero clearing time , the times of frozen-preventing power turn-off should be cleared to recount. The mode of stopping the machine or transferring to supply air will clear the trouble times immediately (if the trouble can not be resumed, mode transferring will not clear it).

**(5) Overload protection function**

Overload protection function at the mode of Cooling and dehumidifying

**1. Starting estimation:**

After the compressor stopped working for 180s, if  $T_{\text{outer pipe}} < [T_{\text{Cooling overload frequency-limited temperature}}]$  (the temperature of hysteresis is 35.6°F ), the machine is allowed to start, otherwise it should not be started, and should be stopped to treat according to the overload protection: Clear the trouble at the mode of power turn-off / heating, and the protection times are not counted.

**2. Frequency limited**

If  $[T_{\text{Cooling overload frequency-limited temperature}}] \leq [T_{\text{outer pipe}} T_{\text{Cooling overload frequency reducing temperature at normal speed}}]$ , you should limit the frequency raising of compressor.

**3. Reducing frequency at normal speed and power turn-off:**

If  $[T_{\text{Cooling overload frequency reducing temperature at high speed}}] \leq T_{\text{outer pipe}} < [T_{\text{Cooling overload power turn-off temperature}}]$  , you should adjust the compressor frequency by reducing 8Hz/90s till the lower limit; After it was running 90s at the lower limit, if  $[T_{\text{Cooling overload frequency reducing temperature at normal speed}}] \leq T_{\text{outer pipe}}$ , then Cooling overload protects machine stopping;

**4. Reducing frequency at high speed and stop machine:**

If  $[T_{\text{Cooling overload frequency reducing temperature at high speed}}] \leq T_{\text{outer pipe}} [T_{\text{Cooling overload power turn-off temperature}}]$ , you should adjust the compressor frequency by reducing 30Hz/90s till the lower limit; After it was running 90s at the lower limit, if  $[T_{\text{Cooling overload frequency reducing temperature at normal speed}}] \leq [T_{\text{outer pipe}}]$ , then Cooling overload protects machine stopping;

**5. Power turn-off:**

If the  $[T_{\text{Cooling overload power turn-off temperature}}] \leq T_{\text{outer pipe}}$ , then Cooling overload protects machine stopping; If  $[T_{\text{outer pipe}}] < [T_{\text{Cooling overload frequency-limited temperature}}]$  and the compressor has been stopped working for 3 minutes, the machine should be allowed to operate.

6. If the Cooling overload protection power turn-off continuously occurs for six times, it should not be resumed automatically, and you should press the ON/OFF button to resume if the fault keeps on. During the process of running, if the running time of compressor exceeds the t overload protection times zero clearing time , the times of overload protection power turn-off should be cleared to recount. The mode of stopping the machine or transferring to supply air will clear the trouble times immediately (if the trouble can not be resumed, transferring mode will not clear it).

**Overload protection function at the mode of heating**

**Starting estimation :**

After the compressor stopped working for 180s, if  $T_{\text{inner pipe}} T_{\text{heating overload frequency-limited temperature}}$  (the temperature of hysteresis is 35.6°F ), the machine is allowed to start, otherwise it should not be started, and should be stopped to treat according to the overload protection:

Clear the trouble at the mode of power turn-off / heating, and the protection times are not counted.

### 1. Frequency limited

If  $[T_{\text{heating overload frequency-limited temperature}}] \leq T_{\text{inner pipe}} < [T_{\text{heating overload frequency reducing temperature at normal speed}}]$  , you should limit the frequency raising of compressor.

### 2. Reducing frequency at normal speed and stopping machine:

If  $[T_{\text{heating overload frequency reducing temperature at normal speed}}] \leq T_{\text{inner pipe}} < [T_{\text{heating overload frequency reducing temperature at high speed}}]$ , you should adjust the compressor frequency by reducing 8Hz/90s till the lower limit; After it was running 90s at the lower limit, if  $T_{\text{heating overload frequency reducing temperature at normal speed}} \leq T_{\text{inner pipe}}$ , then overload protects machine stopping;

### 3. Reducing frequency at high speed and power turn-off:

If  $[T_{\text{heating overload frequency reducing temperature at high speed}}] \leq T_{\text{inner pipe}} < [T_{\text{heating overload power turn-off temperature}}]$ , you should adjust the compressor frequency by reducing 30Hz/90s till the lower limit; After it was running 90s at the lower limit, if  $T_{\text{heating overload frequency reducing temperature at normal speed}} \leq T_{\text{outer pipe}}$ , then Cooling overload protects machine stopping;

### 4. Power turn-off:

If the  $[T_{\text{heating overload power turn-off temperature}}] \leq T_{\text{inner pipe}}$ , then overload protects machine stopping; If  $T_{\text{inner pipe}} > T_{\text{heating overload frequency-limited temperature}}$  and the compressor has been stopped working for 3 minutes, the machine should be allowed to operate.

5. If the overload protection power turn-off continuously occurs for six times, it should not be resumed automatically, and you should press the ON/OFF button to resume if the fault keeps on. During the process of running, if the running time of compressor exceeds the  $t_{\text{overload protection times zero clearing time}}$  , the times of overload protection power turn-off should be cleared to recount. The mode of stopping the machine or transferring to supply air will clear the trouble times immediately (if the trouble can not be resumed, transferring mode will not clear it). Protective function for discharge temperature of compressor

### 1. Starting estimation:

After the compressor stopped working for 180s, if  $T_{\text{Discharge}} < T_{\text{Discharge limited temperature}}$  (the temperature of hysteresis is 35.6°F ), the machine is allowed to start, otherwise it should not be started, and should be stopped to treat according to the discharge temperature:

The machine should be stopped or transferred to supply air, the trouble should be cleared immediately, and the protection times are not counted.

### 2. Frequency limited

If  $[T_{\text{Limited frequency temperature during discharging}}] \leq T_{\text{Discharge}} < [T_{\text{frequency reducing temperature at normal speed during discharging}}]$  , you should limit the frequency raising of compressor.

### 3. Reducing frequency at normal speed and stopping machine:

If  $[T_{\text{frequency reducing temperature at normal speed during discharging}}] \leq T_{\text{Discharge}} < [T_{\text{frequency reducing temperature at high speed during discharging}}]$ , you should adjust the compressor frequency by reducing 8Hz/90s till the lower limit; After it was running 90s at the lower limit, if  $[T_{\text{frequency reducing temperature at normal speed during discharging}}] \leq T_{\text{Discharge}}$ , you should discharge to protect machine stopping;

### 4. Reducing frequency at high speed and power turn-off:

If  $[T_{\text{frequency reducing temperature at high speed during discharging}}] \leq T_{\text{Discharge}} < [T_{\text{Stop temperature during discharging}}]$ , you should adjust the compressor frequency by reducing 30Hz/90s till the lower limit; After it was running 90s at the lower limit, if  $[T_{\text{frequency reducing temperature at normal speed during discharging}}] \leq T_{\text{Discharge}}$ , you should discharge to protect machine stopping;

### 5. Power turn-off:

If the  $[T_{\text{Power turn-off temperature during discharging}}] \leq T_{\text{Discharge}}$ , you should discharge to protect machine stopping; If  $[T_{\text{Discharge}}] < [T_{\text{Limited frequency temperature during discharging}}]$  and the compressor has been stopped for 3 minutes, the machine should be allowed to operate.

6. If the discharging temperature protection of compressor continuously occurs for six times, it should not be resumed automatically, and you should press the ON/OFF button to resume. During the process of running, if the running time of compressor exceeds the  $t_{\text{Protection times clearing of discharge}}$  , the discharge protection is cleared to recount. Stopped or transferred to supply air mode will clear the trouble times immediately (if the trouble can not be resumed, mode transferring also will not clear it).

### 7. Frequency limited

If  $[I_{\text{Limited frequency when overcurrent}}] \leq I_{\text{AC Electric current}} < [I_{\text{frequency reducing when overcurrent}}]$ , you should limit the frequency raising of compressor.

### 8. Reducing frequency:

If  $[I_{\text{Frequency reducing when overcurrent}}] \leq [I_{\text{AC Electric current}}]$  , you should reduce the compressor frequency till the lower limit or exit the frequency reducing condition;

### 9. Power turn-off:

If  $[I_{\text{Power turn-off machine when overcurrent}}] \leq [I_{\text{AC Electric current}}]$  , you should carry out the overcurrent stopping protection; If  $I_{\text{AC Electric current}} < [I_{\text{Limited frequency when overcurrent}}]$  and the compressor has been stopped for 3 minutes, the machine should be allowed to operate.

10. If the overcurrent protection continuously occurs for six times, it should not be resumed automatically, and you should press the ON/OFF button to resume. During the process of running, if the running time of compressor exceeds the  $[t_{\text{Protection times clearing of over current}}]$  , the discharge protection is cleared to recount.

**(6)Voltage sag protection**

After start the compressor, if the time of DC link Voltage sag [ $U_{\text{Sagging protection voltage}}$ ] is measured to be less than t Voltage sag protection time , the machine should be stop at once, hand on the voltage sag trouble, reboot automatically after 30 minutes.

**(7)Communication fault**

When you have not received any correct signal from the inner machine in three minutes, the machine will stop for communication fault. When you have not received any correct signal from driver IC (aim to the controller for the separating of main control IC and driver IC), and the machine will stop for communication fault. If the communication is resumed, the machine will be allowed to operate.

**(8)Module protection**

Testing the module protective signal immediately after started, once the module protective signal is measured, stop the machine with module protection immediately. If the module protection is resumed, the machine will be allowed to operate. If the module protection continuously occurs for three times, it should not be resumed automatically, and you should press the ON/OFF button to resume. If the running time of compressor exceeds the [ $t_{\text{Protection times clearing of module}}$ ] , the module protection is cleared to recount.

**(9)Module overheating protection****1. Starting estimation:**

After the compressor stopped working for 180s, if  $T_{\text{Module}} < [T_{\text{Module frequency limited temperature}}]$  (the temperature of hysteresis is 35.6°F ), the machine is allowed to start, otherwise it should not be started, and should be stopped to treat according to the module overheating protection: The machine should be stopped or transferred to supply air, the trouble should be cleared immediately, and the protection times are not counted.

**2. Frequency limited**

If  $[T_{\text{Limited frequency temperature of module}}] \leq T_{\text{Module}} < [T_{\text{frequency reducing temperature at normal speed of module}}]$  , you should limit the frequency raising of compressor.

**3. Reducing frequency at normal speed and power turn-off:**

If  $[T_{\text{frequency reducing temperature at normal speed of module}}] \leq T_{\text{Module}} < [T_{\text{frequency reducing temperature at high speed of module}}]$ , you should adjust the compressor frequency by reducing 8Hz/90s till the lower limit; After it was running 90s at the lower limit, if  $[T_{\text{frequency reducing temperature at normal speed of module}}] \leq T_{\text{Module}}$ , you should stop the machine for module overheating protection;

**4. Reducing frequency at high speed and power turn-off:**

If  $[T_{\text{frequency reducing temperature at high speed of module}}] \leq T_{\text{Module}} < [T_{\text{Power turn-off temperature of module}}]$  you should adjust the compressor frequency by reducing 30Hz/90s till the lower limit; After it was running 90s at the lower limit, if  $[T_{\text{frequency reducing temperature at normal speed of module}}] \leq T_{\text{Module}}$ , you should stop the machine for module overheating protection;

**5. Power turn-off:**

If the  $[T_{\text{Power turn-off temperature of module}}] \leq T_{\text{Module}}$ , you should stop the machine for module overheating protection; If  $T_{\text{Module}} < [T_{\text{Limited frequency temperature of module}}]$  and the compressor has been stopped for 3 minutes, the machine should be allowed to operate.

6. If protection continuously occurs for six times, it should not be resumed automatically, and you should press the ON/OFF button to resume. During the process of running, if the running time of compressor exceeds the [ $t_{\text{Protection times clearing of module}}$ ] , the discharge protection is cleared to recount. Stopped or transferred to supply air mode will clear the trouble times immediately (if the trouble can not be resumed, mode transferring also will not clear it).

**(10)Compressor overloads protection**

If you measure the compressor overload switch action in 3s, the compressor should be stopped for overloading. The machine should be allowed to operate after overload protection was measured to resume. If the overloading protection continuously occurs for three times, it should not be resumed automatically, and you should press the ON/OFF button to resume. The protection times of compressor is allowed to clear after the compressor run [ $t_{\text{Protection times clearing of compressor overloading}}$ ] 30 minutes.

**(11)Phase current overcurrent protection of compressor**

During the running process of compressor, you could measure the phase current of the compressor, and control it according to the following steps:

**1. Frequency limited**

If  $[I_{\text{Limited frequency phase current}}] \leq [I_{\text{Phase current T frequency reducing phase current}}]$  , you should limit the frequency raising of compressor.

**2. Reducing Frequency**

If  $[I_{\text{Frequency Reducing Phase Current}}] \leq I_{\text{Phase Current}} < [I_{\text{Power Turn-Off Phase Current}}]$ , the compressor shall continue to reduce frequency till the lowest frequency limit or out of the condition of reducing frequency;

**3. Power turn-off**

If  $[I_{\text{Phase Current}}] \geq [I_{\text{Power Turn-Off Phase Current}}]$ , the compressor phase current shall stop working for overcurrent protection; if  $[I_{\text{Phase Current}}] \leq [I_{\text{Frequency Reducing Phase Current}}]$ , and the compressor have stopped working for 3 min, the machine shall be allowed to operate;

4. If the overcurrent protection of compressor phase current continuously occurs for six times, it should not be resumed automatically, and you should press the ON/OFF button to resume. During the process of running, if the running time of compressor exceeds the [ $t_{\text{Clearing Time of Compressor Phase Current Times}}$ ] , the overcurrent protection is cleared to recount.



**(12) Starting-up Failure Protection for Compressor**

Stop the compressor after its starting-up fails, restart it after 20s if the fault doesn't shows, and if they are all failing for the successive start 3 times, it shall be reported as Starting-up Failure, and then restart up it after 3 min. When it still not be able to operate through carry out the above process for 5 times, it is available if press ON/OFF. And the compressor should be cleared the times after it run 2 min.

**(13) Out-of-Step Protection for Compressor**

The out-of-step protection signal should be detected immediately after starting-up compressor, and once find the out-of-step protection signal, the out-of-step protection shall be stopped; if it can run for lasting power turn-off 3 min, the machine shall be allowed to operate. If it still can't run automatically when the out-of-step protection for compressor happens to stop working for 6 times in succession, it needs to press ON/OFF to operate. And if the running time is more than 10 min, the power turn-off times for out-of-step protection shall be cleared and recounted.

**(14) Voltage Abnormity Protection for DC Bus**

To detect voltage abnormity protection for dc bus after completing the pre-charge:

**1.Over-High Voltage Protection for DC Bus:**

If it found the DCbus voltage  $U_{DC} > [U_{DC \text{ Jiekuangchun Protection}}]$ , turn off PFC and stop the compressor at once, and it shall show the DC over-high voltage failure; it should clear out the failure when the voltage dropped to  $U_{DC} < [U_{DC \text{ Jiekuangchun Recovery}}]$  and the compressor stopped for 3 min.

**2.Over-Low Voltage Protection for DC Bus:**

If it found the DC bus voltage  $U_{DC} < [U_{DC \text{ Wantuochun Protection}}]$ , turn off PFC and stop the compressor at once, and it shall show the DC over-low voltage; and it should clear out the failure when the voltage raised to  $U_{DC} > [U_{DC \text{ Wantuochun Recovery}}]$  and the compressor stopped for 3 min.

**3.To detect voltage abnormity protect for DC bus when getting electricity:**

If it found the DC bus voltage  $U_{DC} > [U_{DC \text{-Over-High Voltage}}]$ , turn off the relay at once, and shows voltage abnormity failure for DC Bus. And the failure can't recover except to break off and get the electricity.

**(15)Abnormity Protection for Four-way Valve**

Under the model of heating operation in good condition: the compressor is detected  $[T_{\text{Inner Tube}} < (T_{\text{Inner Ring}} - T_{\text{Abnormity Temperature Difference For Four-Way Valve Reversion}})]$ , during the running, it should be regarded as four-way valve reversion abnormity. And then it can run if stop the reversion abnormity protection for four-way valve 3 min; and if it still can't run when the reversion abnormity protection for four-way valve happens to stop working for 3 times in succession, it is available if presses ON/OFF.

Attention: the protection shall be shielded during the testing mode and defrosting process, and it shall be cleared out the failure and its times immediately when turning off or delivering wind / cooling / dehumidifying mode conversed (the inverted mode Don't clear out the failure when it can't recover to operate).

**(16) PFC Protection**

1. After start up the PFC, it should detect the protection signal of PFC immediately; under the condition of PFC protection, it should turn off the PFC and compressor at one time;
2. It shows the failure is cleared out if PFC Protection stopped working 3 min and recovers to run automatically;
3. If it still can't run when it occurs PFC protection for 3 times in succession, it is available if presses ON/OFF; and clear the PFC Protection times when start up PFC for 10min.

**(17) Failure Detection for Sensor**

1. Outdoor Ambient Sensor: detect the failure of sensor at all times.
2. Outdoor Tube Sensor: You should not detect the failure of outdoor tube sensor within 10 minutes heating operation compressor except the defrosting, and you could detect it at other time.
3. Outdoor Exhaust Sensor:
  - (a) The compressor only detect the sensor failure after it start up 3 min in normal mode;
  - (b) It should detect the exhaust sensor failure immediately in the testing mode.
4. Module Temperature Sensor:
  - (a) Short-Circuit Detection: the compressor should be detected immediately when the module temperature sensor occurs short-circuits;
  - (b) Open-Circuit Detection: the compressor should be detected on open-circuit when it runs 3min (it neednt 30s avoiding the module over-heated).
  - (c) Detect the sensor failure at all times in the testing mode.
5. Disposal for Sensor Protection
  - (1) When the short-circuit of sensor is detected within 30s, It is regarded as the temperature of sensor over-high (or infinitely high), and now according to the over-high sensor, the machine should carry out the corresponding protection to stop working, and show the corresponding temperature shutdown protection and sensor failure at the same time (for example: the compressor stops immediately when the outdoor tube sensor short-circuit, and the machine shall show the overload protection and outdoor tube sensor failure).
  - (2) When the open-circuit of sensor is detected within 30s, The protection shall be stopped and it shall show the corresponding sensor failure.

6. Electric Heating Function of Chassis

- (1) When  $T_{\text{outdoor amb.}} \leq 32^{\circ}\text{F}$  , the electric heating of chassis will operate;
- (2) When  $T_{\text{outdoor amb.}} > 35.6^{\circ}\text{F}$  , the electric heating of chassis will stop operation;
- (3) When  $32^{\circ}\text{F} < T_{\text{outdoor amb.}} \leq 35.6^{\circ}\text{F}$ , the electric heating of chassis will keep original status.

7. Electric Heating Function of Compressor

- (1) When  $T_{\text{outdoor amb.}} \leq 23^{\circ}\text{F}$  , compressor stops operation, while the electric heating of compressor starts operation;
- (2) When  $T_{\text{outdoor amb.}} > 28.4^{\circ}\text{F}$  , the electric heating of compressor stops operation;
- (3) When  $23^{\circ}\text{F} < T_{\text{outdoor amb.}} \leq 28.4^{\circ}\text{F}$  , the electric heating of compressor will keep original status.

# Part II : Installation and Maintenance

## 7. Notes for Installation and Maintenance

### Safety Precautions: Important!

Please read the safety precautions carefully before installation and maintenance.

The following contents are very important for installation and maintenance.

Please follow the instructions below.

- The installation or maintenance must accord with the instructions.
- Comply with all national electrical codes and local electrical codes.
- Pay attention to the warnings and cautions in this manual.
- All installation and maintenance shall be performed by distributor or qualified person.
- All electric work must be performed by a licensed technician according to local regulations and the instructions given in this manual.
- Be caution during installation and maintenance. Prohibit incorrect operation to prevent electric shock, casualty and other accidents.



### Warnings

#### Electrical Safety Precautions:

1. Cut off the power supply of air conditioner before checking and maintenance.
2. The air condition must apply specialized circuit and prohibit share the same circuit with other appliances.
3. The air conditioner should be installed in suitable location and ensure the power plug is touchable.
4. Make sure each wiring terminal is connected firmly during installation and maintenance.
5. Have the unit adequately grounded. The grounding wire can't be used for other purposes.
6. Must apply protective accessories such as protective boards, cable-cross loop and wire clip.
7. The live wire, neutral wire and grounding wire of power supply must be corresponding to the live wire, neutral wire and grounding wire of the air conditioner.
8. The power cord and power connection wires can't be pressed by hard objects.
9. If power cord or connection wire is broken, it must be replaced by a qualified person.

10. If the power cord or connection wire is not long enough, please get the specialized power cord or connection wire from the manufacture or distributor. Prohibit prolong the wire by yourself.

11. For the air conditioner without plug, an air switch must be installed in the circuit. The air switch should be all-pole parting and the contact parting distance should be more than 1/8 inch.

12. Make sure all wires and pipes are connected properly and the valves are opened before energizing.

13. Check if there is electric leakage on the unit body. If yes, please eliminate the electric leakage.

14. Replace the fuse with a new one of the same specification if it is burnt down; Don't replace it with a cooper wire or conducting wire.

15. If the unit is to be installed in a humid place, the circuit breaker must be installed.

#### Installation Safety Precautions:

1. Select the installation location according to the requirement of this manual.(See the requirements in installation part)
2. Handle unit transportation with care; the unit should not be carried by only one person if it is more than 44.09lb.
3. When installing the indoor unit and outdoor unit, a sufficient fixing bolt must be installed; make sure the installation support is firm.
4. Ware safety belt if the height of working is above 78 3/4 inch.
5. Use equipped components or appointed components during installation.
6. Make sure no foreign objects are left in the unit after finishing installation.

#### Refrigerant Safety Precautions:

1. Avoid contact between refrigerant and fire as it generates poisonous gas; Prohibit prolong the connection pipe by welding.
2. Apply specified refrigerant only. Never have it mixed with any other refrigerant. Never have air remain in the refrigerant line as it may lead to rupture or other hazards.
3. Make sure no refrigerant gas is leaking out when installation is completed.
4. If there is refrigerant leakage, please take sufficient measure to minimize the density of refrigerant.
5. Never touch the refrigerant piping or compressor without wearing glove to avoid scald or frostbite.

Improper installation may lead to fire hazard, explosion, electric shock or injury.

# Safety Precautions for Installing and Relocating the Unit:

To ensure safety, please be mindful of the following precautions.



## Warnings

**1. When installing or relocating the unit, be sure to keep the refrigerant circuit free from air or substances other than the specified refrigerant.**

Any presence of air or other foreign substance in the refrigerant circuit will cause system pressure rise or compressor rupture, resulting in injury.

**2. When installing or moving this unit, do not charge the refrigerant which is not comply with that on the nameplate or unqualified refrigerant.**

Otherwise, it may cause abnormal operation, wrong action, mechanical malfunction or even series safety accident.

**3. When refrigerant needs to be recovered during relocating or repairing the unit, be sure that the unit is running in cooling mode. Then, fully close the valve at high pressure side (liquid valve). About 30-40 seconds later, fully close the valve at low pressure side (gas valve), immediately stop the unit and disconnect power. Please note that the time for refrigerant recovery should not exceed 1 minute.**

If refrigerant recovery takes too much time, air may be sucked in and cause pressure rise or compressor rupture, resulting in injury.

**4. During refrigerant recovery, make sure that liquid valve and gas valve are fully closed and power is disconnected before detaching the connection pipe.**

If compressor starts running when stop valve is open and connection pipe is not yet connected, air will be sucked in and cause pressure rise or compressor rupture, resulting in injury.

**5. When installing the unit, make sure that connection pipe is securely connected before the compressor starts running.**

If compressor starts running when stop valve is open and connection pipe is not yet connected, air will be sucked in and cause pressure rise or compressor rupture, resulting in injury.

**6. Prohibit installing the unit at the place where there may be leaked corrosive gas or flammable gas.**

If there leaked gas around the unit, it may cause explosion and other accidents.

**7. Do not use extension cords for electrical connections. If the electric wire is not long enough, please contact a local service center authorized and ask for a proper electric wire.**

Poor connections may lead to electric shock or fire.

**8. Use the specified types of wires for electrical connections between the indoor and outdoor units. Firmly clamp the wires so that their terminals receive no external stresses.**


Electric wires with insufficient capacity, wrong wire connections and insecure wire terminals may cause electric shock or fire.


## Main Tools for Installation and Maintenance

<p>1. Level meter, measuring tape</p> 	<p>2. Screw driver</p> 	<p>3. Impact drill, drill head, electric drill</p> 
<p>4. Electroprobe</p> 	<p>5. Universal meter</p> 	<p>6. Torque wrench, open-end wrench, inner hexagon spanner</p> 
<p>7. Electronic leakage detector</p> 	<p>8. Vacuum pump</p> 	<p>9. Pressure meter</p> 
<p>10. Pipe pliers, pipe cutter</p> 	<p>11. Pipe expander, pipe bender</p> 	<p>12. Soldering appliance, refrigerant container</p> 

# 8. Installation

## 8.1 Installation Dimension Diagram

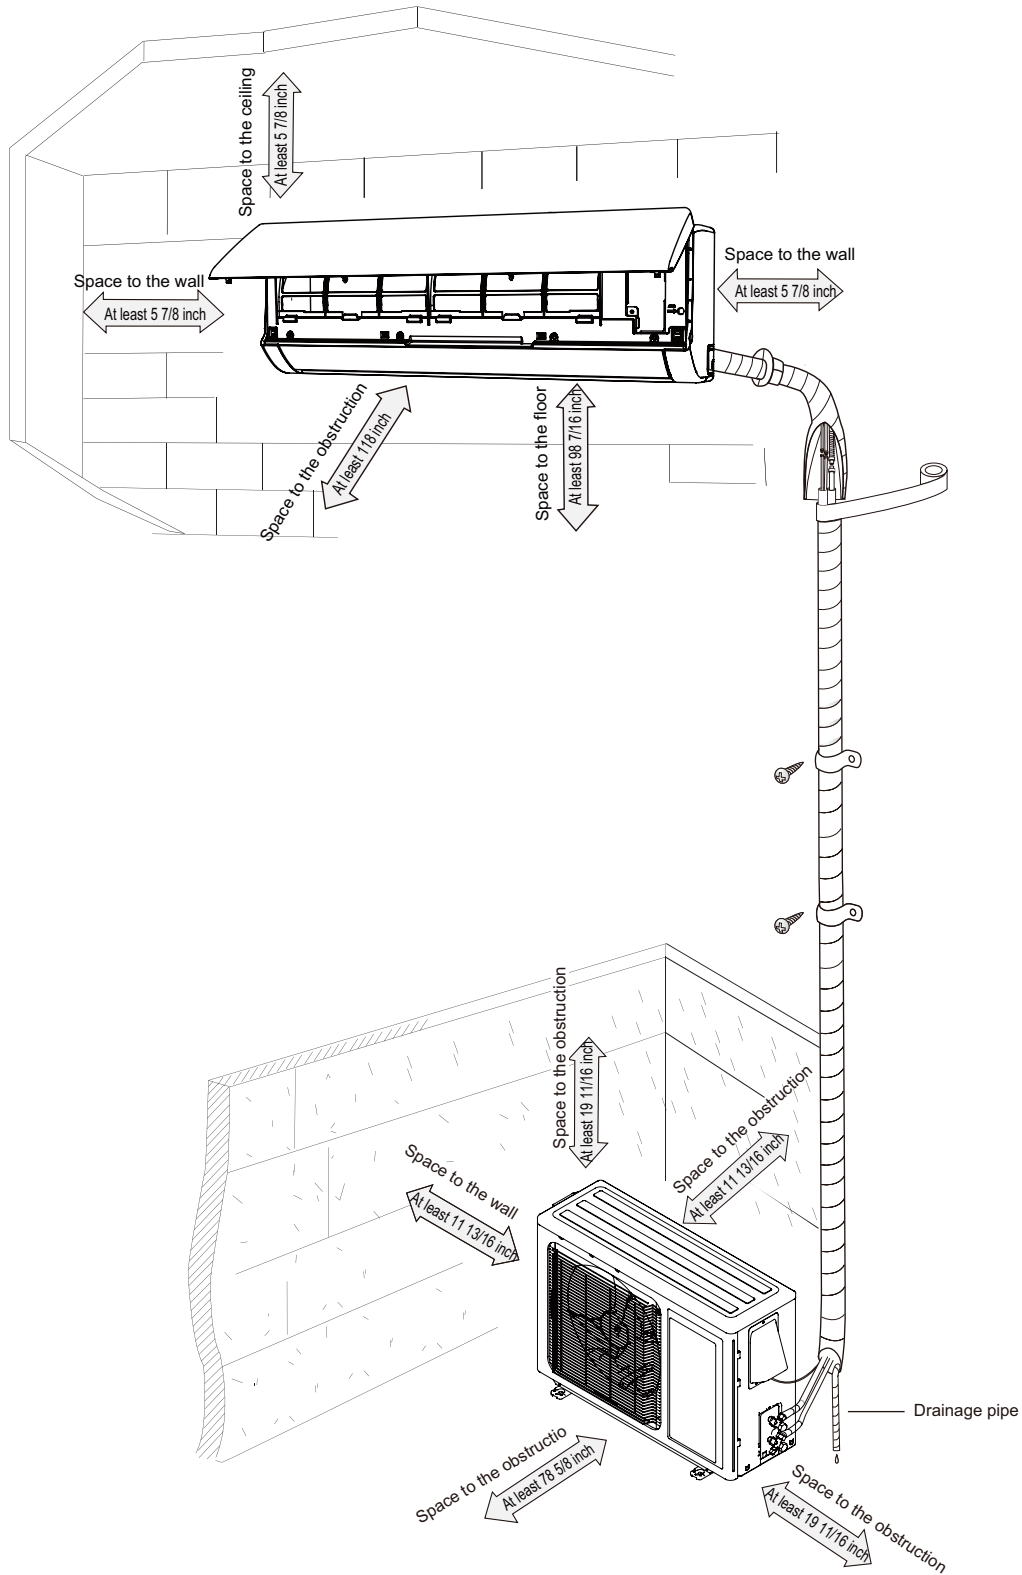

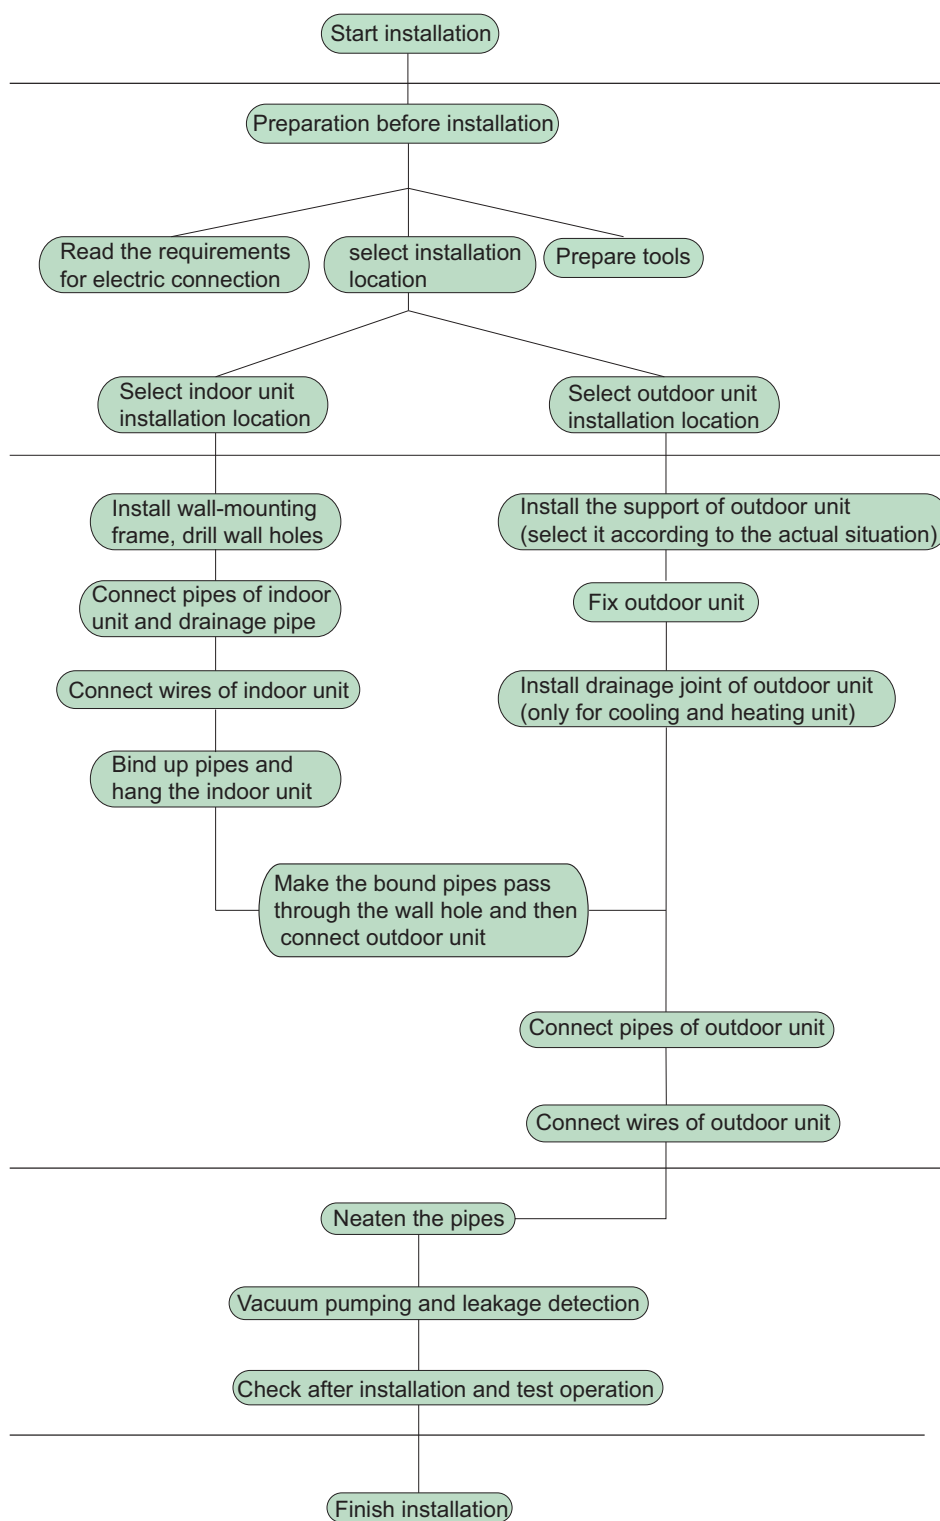

Note: this flow is only for reference; please find the more detailed installation steps in this section.

## 8.2 Installation Parts-checking

NO.	Name	NO.	Name
1	Indoor unit	8	Sealing gum
2	Outdoor unit	9	Wrapping tape
3	Connection pipe	10	Support of outdoor unit
4	Drainage pipe	11	Fixing screw
5	Wall-mounting frame	12	Drainage plug(cooling and heating unit)
6	Connecting cable(power cord)	13	Owners manual, remote controller
7	Wall pipe		

**⚠ Note:**

- 1.Please contact the local agent for installation.
- 2.Don't use unqualified power cord.

## 8.3 Selection of Installation Location

### 1. Basic Requirement:

Installing the unit in the following places may cause malfunction. If it is unavoidable, please consult the local dealer:

- (1) The place with strong heat sources, vapors, flammable or explosive gas, or volatile objects spread in the air.
- (2) The place with high-frequency devices (such as welding machine, medical equipment).
- (3) The place near coast area.
- (4) The place with oil or fumes in the air.
- (5) The place with sulfureted gas.
- (6) Other places with special circumstances.
- (7) The appliance shall not be installed in the laundry.
- (8) It's not allowed to be installed on the unstable or motive base structure(such as truck) or in the corrosive environment (such as chemical factory).

### 2. Indoor Unit:

- (1) There should be no obstruction near air inlet and air outlet.
- (2) Select a location where the condensation water can be dispersed easily and won't affect other people.
- (3) Select a location which is convenient to connect the outdoor unit and near the power socket.
- (4) Select a location which is out of reach for children.
- (5) The location should be able to withstand the weight of indoor unit and won't increase noise and vibration.
- (6) The appliance must be installed 2.5m above floor.
- (7) Don't install the indoor unit right above the electric appliance.
- (8) Please try your best to keep way from fluorescent lamp.

### 3. Outdoor Unit:

- (1) Select a location where the noise and outflow air emitted by the outdoor unit will not affect neighborhood.
- (2) The location should be well ventilated and away from strong wind.
- (3) The location should be able to withstand the weight of outdoor unit.
- (4) Make sure that the installation follows the requirement of installation dimension diagram.
- (5) Select a location which is out of reach for children and far away from animals or plants.If it is unavoidable, please add fence for safety purpose.

## 8.4 Requirements for electric connection

### 1. Safety Precaution

- (1) Must follow the electric safety regulations when installing the unit.
- (2) According to the local safety regulations, use qualified power supply circuit and air switch.
- (3) Make sure the power supply matches with the requirement of air conditioner. Unstable power supply or incorrect wiring may result in electric shock,fire hazard or malfunction. Please install proper power supply cables before using the air conditioner.
- (4) Properly connect the live wire, neutral wire and grounding wire of power socket.
- (5) Be sure to cut off the power supply before proceeding any work related to electricity and safety.
- (6) Do not put through the power before finishing installation.
- (7) If the supply cord is damaged,it must be replaced by the manufacturer,its service agent or similarly qualified persons in order to avoid a hazard.
- (8) The temperature of refrigerant circuit will be high, please keep the interconnection cable away from the copper tube.

### 2. Grounding Requirement:

- (1) The air conditioner is first class electric appliance. It must be properly grounding with specialized grounding device by a professional. Please make sure it is always grounded effectively, otherwise it may cause electric shock.
- (2) The yellow-green wire in air conditioner is grounding wire, which can't be used for other purposes.
- (3) The grounding resistance should comply with national electric safety regulations.
- (4) The appliance must be positioned so that the plug is accessible.
- (5) An all-pole disconnection switch having a contact separation of at least 1/8 inch in all poles should be connected in fixed wiring.
- (6) Including an air switch with suitable capacity, please note the following table. Air switch should be included magnet buckle and heating buckle function, it can protect the circuit-short and overload. (Caution: please do not use the fuse only for protect the circuit)

Air-conditioner	Air switch capacity
09K(115V~ 60Hz)	20A
12K(115V~ 60Hz)	25A
09/12K(208/230V~ 60Hz)	15A
18K	25A
24	30A

## 8.5 Installation of Indoor Unit

### 1. Choosing Installation location

Recommend the installation location to the client and then confirm it with the client.

### 2. Install Wall-mounting Frame

- (1) Hang the wall-mounting frame on the wall; adjust it in horizontal position with the level meter and then point out the screw fixing holes on the wall.
- (2) Drill the screw fixing holes on the wall with impact drill (the specification of drill head should be the same as the plastic expansion particle) and then fill the plastic expansion particles in the holes.



(3) Fix the wall-mounting frame on the wall with tapping screws (ST4.2X25TA) and then check if the frame is firmly installed by pulling the frame. If the plastic expansion particle is loose, please drill another fixing hole nearby.

### 3. Install Wall-mounting Frame

(1) Choose the position of piping hole according to the direction of outlet pipe. The position of piping hole should be a little lower than the wall-mounted frame. (As show in Fig.1)

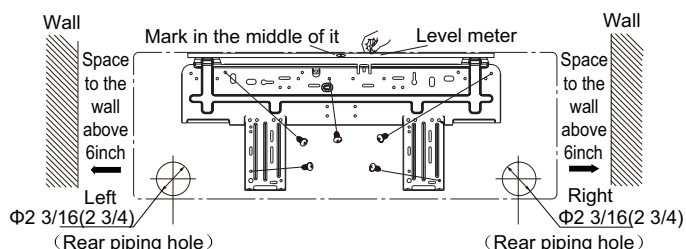


Fig.1

(2) Open a piping hole with the diameter of Φ2 3/16(Φ2 3/4) inch on the selected outlet pipe position. In order to drain smoothly, slant the piping hole on the wall slightly downward to the outdoor side with the gradient of 5-10°. (As show in Fig.2)

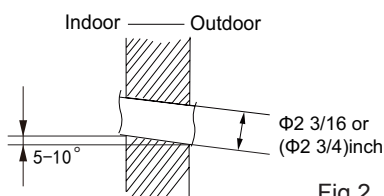


Fig.2

#### ⚠ Note:

- (1) Pay attention to dust prevention and take relevant safety measures when opening the hole.
- (2) The plastic expansion particles are not provided and should be bought locally.

### 4. Outlet Pipe

- (1) The pipe can be led out in the direction of right, rear right, left or rear left. (As show in Fig.3)
- (2) When selecting leading out the pipe from left or right, please cut off the corresponding hole on the bottom case. (As show in Fig.4)

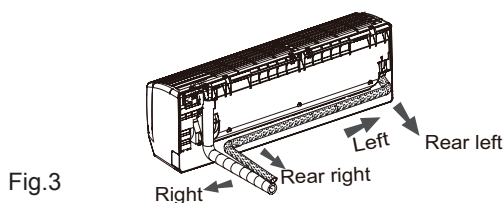


Fig.3



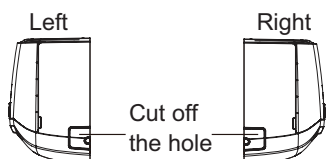


Fig.4

### 5. Connect the Pipe of Indoor Unit

- (1) Aim the pipe joint at the corresponding bellmouth. (As show in Fig.5)
- (2) Pretightening the union nut with hand.
- (3) Adjust the torque force by referring to the following sheet. Place the open-end wrench on the pipe joint and place the torque wrench on the union nut. Tighten the union nut with torque wrench. (As show in Fig.6)
- (4) Wrap the indoor pipe and joint of connection pipe with insulating pipe, and then wrap it with tape. (As show in Fig.7)

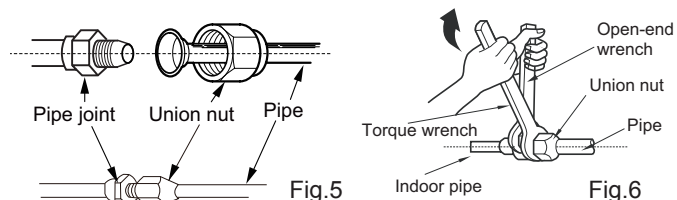

Refer to the following table for wrench moment of force:

Hex nut diameter(inch)	Tightening torque(ft-lbf)
Φ1/4	11.10~14.75
Φ3/8	22.82~29.50
Φ1/2	33.19~40.56
Φ5/8	44.24~47.94
Φ3/4	51.32~55.31

### 6. Install Drain Hose

- (1) Connect the drain hose to the outlet pipe of indoor unit. (As show in Fig.8)
- (2) Bind the joint with tape. (As show in Fig.9)

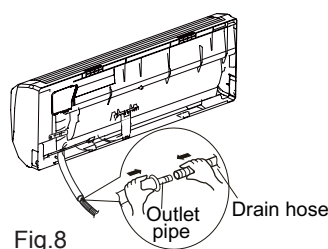


Fig.8

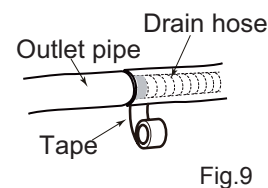


Fig.9

#### ⚠ Note:

- (1) Add insulating pipe in the indoor drain hose in order to prevent condensation.
- (2) The plastic expansion particles are not provided. (As show in Fig.10)


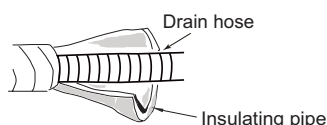



Fig.10

### 7. Connect Wire of Indoor Unit


(1) Open the panel, remove the screw on the wiring cover and then take down the cover.(As show in Fig.11)

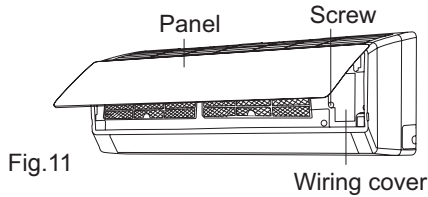

(2) Fix the wire crossing board on connection wire sleeve at the bottom case; let the connection wire sleeve go through the wire crossing hole at the back of indoor unit, and then pull it out from the front.(As show in Fig.12)

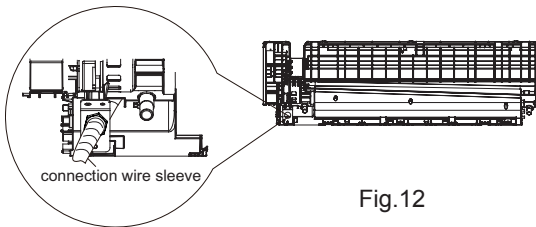

(3) Remove the wire clip; connect the power connection wire to the wiring terminal according to the color; tighten the screw and then fix the power connection wire with wire clip.(As show in Fig.13)

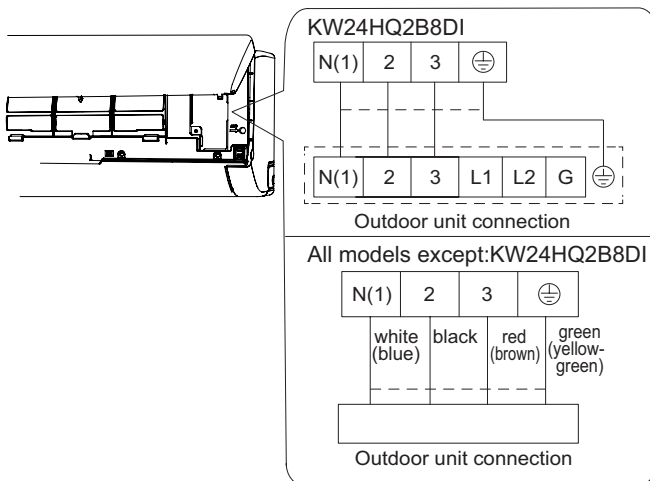

Note: the wiring connect is for reference only, please refer to the actual one.

Fig.13

(4) Put wiring cover back and then tighten the screw.  
(5) Close the panel.

**⚠ Note:**

- (1) All wires of indoor unit and outdoor unit should be connected by a professional.
- (2) If the length of power connection wire is insufficient, please contact the supplier for a new one. Avoid extending the wire by yourself.
- (3) For the air conditioner with plug, the plug should be reachable after finishing installation.
- (4) For the air conditioner without plug, an air switch must be installed in the line. The air switch should be all-pole parting and the contact parting distance should be more than 1/8inch.

### 8. Bind up Pipe

- (1) Bind up the connection pipe, power cord and drain hose with the band.(As show in Fig.14)
- (2) Reserve a certain length of drain hose and power cord for installation when binding to a certain degree, separate the indoor power and then separate the drain hose.(As show in Fig.15)
- (3) Bind them evenly.
- (4) The liquid pipe and gas pipe should be bound separately at the end.

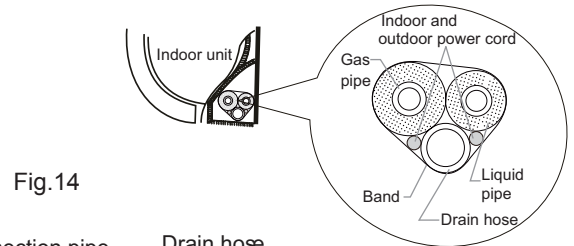


Fig.14

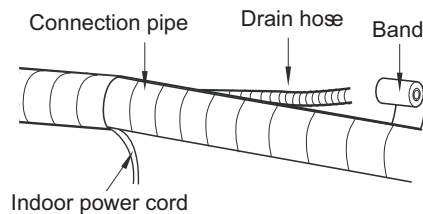


Fig.15

**⚠ Note:**

- (1) The power cord and control wire can't be crossed or winding.
- (2) The drain hose should be bound at the bottom.

### 9. Hang the Indoor Unit

- (1) Put the bound pipes in the wall pipe and then make them pass through the wall hole.
- (2) Hang the indoor unit on the wall-mounting frame.
- (3) Stuff the gap between pipes and wall hole with sealing gum.
- (4) Fix the wall pipe.(As show in Fig.16)
- (5) Check if the indoor unit is installed firmly and closed to the wall.(As show in Fig.17)

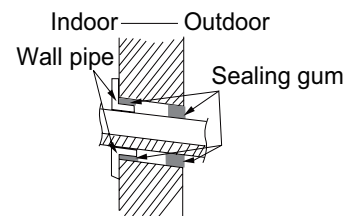


Fig.16

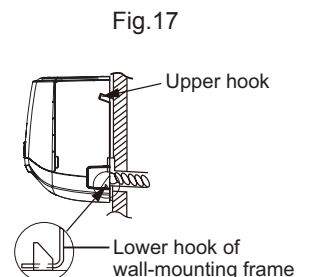


Fig.17

**⚠ Note:**

Do not bend the drain hose too excessively in order to prevent blocking.

## 8.6 Installation of Outdoor Unit

### 1. Fix the Support of Outdoor Unit(Select it according to the actual installation situation)

- (1) Select installation location according to the house structure.
- (2) Fix the support of outdoor unit on the selected location with expansion screws.

**⚠ Note:**

- (1) Take sufficient protective measures when installing the outdoor unit.
- (2) Make sure the support can withstand at least four times the unit weight.
- (3) The outdoor unit should be installed at least 1 1/6inch above the floor in order to install drain joint.(As show in Fig.18)
- (4) For the unit with cooling capacity of 2300W~5000W, 6 expansion screws are needed; for the unit with cooling capacity of 6000W~8000W, 8 expansion screws are needed; for the unit with cooling capacity of 10000W~16000W, 10 expansion screws are needed.

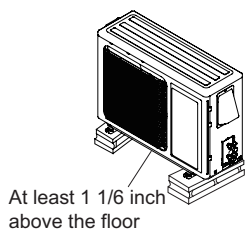


Fig.18

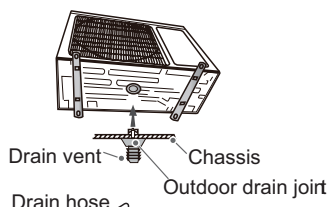


Fig.19

**2. Install Drain Joint(Only for cooling and heating unit)**

- (1) Connect the outdoor drain joint into the hole on the chassis.
  - (2) Connect the drain hose into the drain vent.
- (As show in Fig.19)

**3. Fix Outdoor Unit**

- (1) Place the outdoor unit on the support.
- (2) Fix the foot holes of outdoor unit with bolts.(As show in Fig.20)

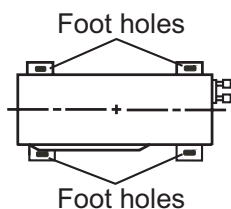


Fig.20

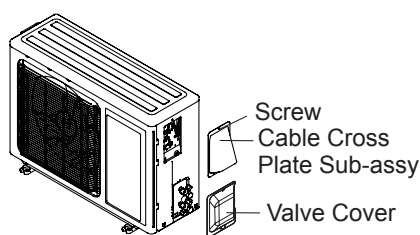


Fig.21

**4. Connect Indoor and Outdoor Pipes**

- (1) Remove the screw on the right cable cross plate sub-assy and valve cover of outdoor unit and then remove the cable cross plate sub-assy and valve cover.(As show in Fig.21)
- (2) Remove the screw cap of valve and aim the pipe joint at the bellmouth of pipe.(As show in Fig.22)

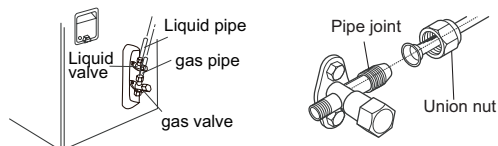


Fig.22


- (3) Pretightening the union nut with hand.
- (4) Tighten the union nut with torque wrench .

Refer to the following table for wrench moment of force :

Hex nut diameter(inch)	Tightening torque(ft-lbf)
Φ1/4	11.10~14.75
Φ3/8	22.82~29.50
Φ1/2	33.19~40.56
Φ5/8	44.24~47.94
Φ3/4	51.32~55.31

**5. Connect Outdoor Electric Wire**

- (1) Put power connection wire and power wire through the wire-passing hole.
- (2) Remove the wire clip; connect the power connection wire and power wire to the wiring terminal; fix them with screws.(As show in Fig.23)
- (3) Fix the power connection wire and power wire with wire clip.
- (4) Install the cable cross plate sub-assy.

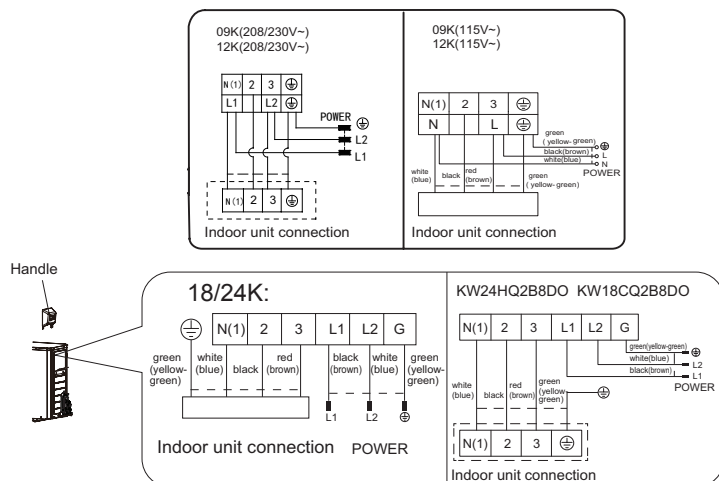


Note: The wiring connect is for reference only, please refer to the actual one.

Fig.23

**⚠ Note:**

- (1) After tightening the screw, pull the power cord slightly to check if it is firm.
- (2) Never cut the power connection wire to prolong or shorten the distance.
- (3) The connecting wire and connection pipe cannot touch each other.
- (4) Top cover of outdoor unit and electric box assembly should be fixed by the screw. Otherwise, it can cause a fire, or short circuit caused by water or dust.

**Install the over line pipe**

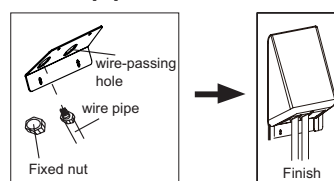

**6. Neaten the Pipes**

- (1) The pipes should be placed along the wall, bent reasonably and hidden possibly. Min. semidiameter of bending the pipe is 4inch.
- (2) If the outdoor unit is higher than the wall hole, you must set a U-shaped curve in the pipe before pipe goes into the room, in order to prevent rain from getting into the room.(As show in Fig.24)

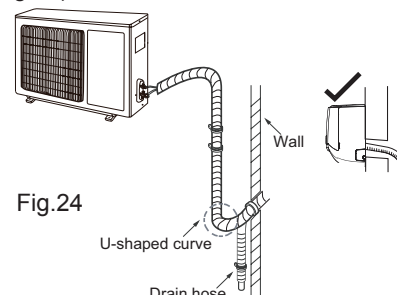


Fig.24


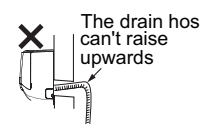


Fig.25

**△ Note:**


- (1) The through-wall height of drain hose shouldn't be higher than the outlet pipe hole of indoor unit.(As show in Fig.25)
- (2) Slant the drain hose slightly downwards. The drain hose can't be curved, raised and fluctuant, etc.(As show in Fig.26)
- (3) The water outlet can't be placed in water in order to drain smoothly.(As show in Fig.27)

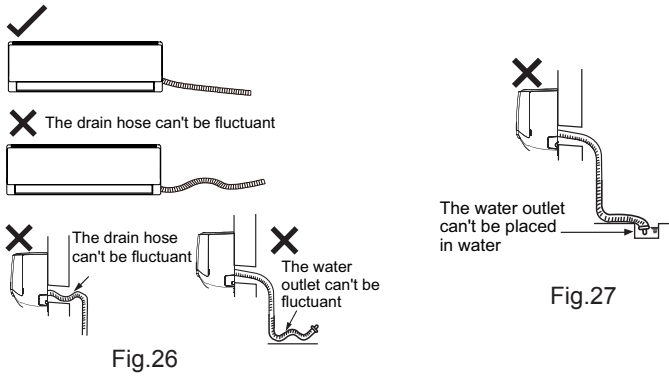

## 8.7 Vacuum Pumping and Leak Detection

### 1. Use Vacuum Pump

- (1) Remove the valve caps on the liquid valve and gas valve and the nut of refrigerant charging vent.
- (2) Connect the charging hose of piezometer to the refrigerant charging vent of gas valve and then connect the other charging hose to the vacuum pump.
- (3) Open the piezometer completely and operate for 10-15min to check if the pressure of piezometer remains in -0.1MPa.
- (4) Close the vacuum pump and maintain this status for 1-2min to check if the pressure of piezometer remains in -0.1MPa. If the pressure decreases, there may be leakage.
- (5) Remove the piezometer, open the valve core of liquid valve and gas valve completely with inner hexagon spanner.
- (6) Tighten the screw caps of valves and refrigerant charging vent.(As show in Fig.28)

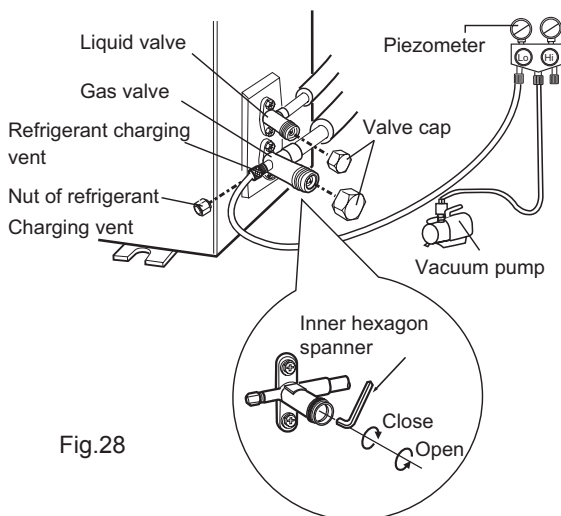

## 2. Leakage Detection

(1) With leakage detector:

Check if there is leakage with leakage detector.

(2) With soap water:

If leakage detector is not available, please use soap water for leakage detection. Apply soap water at the suspected position and keep the soap water for more than 3min. If there are air bubbles coming out of this position, there's a leakage.

## 8.8 Check after Installation and Test Operation

### 1. Check after Installation

Check according to the following requirement after finishing installation.

NO.	Items to be checked	Possible malfunction
1	Has the unit been installed firmly?	The unit may drop, shake or emit noise.
2	Have you done the refrigerant leakage test?	It may cause insufficient cooling (heating) capacity.
3	Is heat insulation of pipeline sufficient?	It may cause condensation and water dripping.
4	Is water drained well?	It may cause condensation and water dripping.
5	Is the voltage of power supply according to the voltage marked on the nameplate?	It may cause malfunction or damage the parts.
6	Is electric wiring and pipeline installed correctly?	It may cause malfunction or damage the parts.
7	Is the unit grounded securely?	It may cause electric leakage.
8	Does the power cord follow the specification?	It may cause malfunction or damage the parts.
9	Is there any obstruction in air inlet and air outlet?	It may cause insufficient cooling (heating) capacity.
10	The dust and sundries caused during installation are removed?	It may cause malfunction or damaging the parts.
11	The gas valve and liquid valve of connection pipe are open completely?	It may cause insufficient cooling (heating) capacity.
12	Is the inlet and outlet of piping hole been covered?	It may cause insufficient cooling (heating) capacity or waster eletricity.

### 2. Test Operation

(1) Preparation of test operation

- The client approves the air conditioner installation.
- Specify the important notes for air conditioner to the client.

(2) Method of test operation

- Put through the power, press ON/OFF button on the remote controller to start operation.
- Press MODE button to select AUTO, COOL, DRY, FAN and HEAT to check whether the operation is normal or not.
- If the ambient temperature is lower than 60.8°F, the air conditioner can't start cooling.

## 9. Maintenance

### 9.1 Error Code List

NO.	Name of malfunction	Indoor unit displaying method				AC status	Malfunctions
		Double 8 code display	Indicator display(LED blinks 0.5s-ON/0.5s-OFF)				
			Running LED	Cooling LED	Heating LED		
1	System high pressure protection	E1	3s off blink once			cooling,dehumidifying,except the indoor fan motor is running,others will stop to run.heating;all stop running	High pressure of system,might be: 1.Refrigerant is too much; 2.Poor heating exchanging for units(including heat exchanger is dirty and unit heating radiating ambient is poor); 3.Ambient temp.is too high.
2	Anti-freezing protection	E2	3s off blink twice			cooling,dehumidifying,compressor,outdoor fan motor will stop running,indoor fan motor will keep running.	1.Poor indoor unit air returning; 2.Indoor fan motor rotating speed abnormal; 3.Evaporator is dirty;
3	Compressor air exhaust high temp. protection	E4	3s off blink four times			cooling,dehumidifying,compressor,outdoor fan motor will stop running,indoor fan motor works. heating:all stop running.	Pls refer to trouble shoot (air exhaust protection,overload)
4	AC overload protection	E5	Off 3s blink 5 times			Cooling,dehumidifying,compressor,outdoor fan motor will stop,indoor fan will work.heating;all will stop	1.power supply is stable,fluctuation is too much 2.Power supply is too low,overload is too much.
5	Indoor and outdoor units communication malfunction	E6	Off 3s blink 6 times			Cooling,compressor will stop,indoor fan motor works,Heating:all will stop	Please refer to troubleshooting
6	Anti-high temp. protection	E8	Off 3s blink 8 times			Cooling,compressor will stop,indoor fan motor works,Heating:all will stop	Please refer to troubleshooting
7	Indoor unit motor no feedback	H6	Off 3s blink 11 times			Whole unit will stop to run	1.Poor insert for GPF 2.Indoor control board AP1 malfunction 3.Indoor motor M1 malfunction
8	Jump wire cap malfunction protection	C5	Off 3s blink 15 times			Whole unit will stop to run	Indoor control board AP1 jump cap poor connected,please reinsert or replace the jump cap.
9	Indoor ambient sensor open circuit,short circuit	F1		Off 3s blink once		Cooling,dehumidifying:indoor fan motor is running,other overloads will stop;Heating,whole unit will stop to run.	1.Room temp.sensor is not connected with the control panel AP1 2.Room temp.sensor is damaged
10	Indoor evaporator sensor circuit open,short circuit	F2		Off 3s blink twice		Cooling,dehumidifying:indoor fan motor running,other overload will stop;Heating,whole unit will stop.	1.Tube temp.sensor is not connected with the control panel AP1 2.Tube temp.sensor is damaged
11	Outdoor ambient sensor circuit open,circuit short	F3		Off 3s blinks three times		Cooling,dehumidifying;compressor will stop,indoor fan motor will work.Heat:all will stop	Outdoorroom temp.sensor hasn't connected well,or damaged,please refer to the sensor resistance value for checking.
12	Outdoor condenser sensor open circuit,short circuit	F4		Off 3s blinks 4 times		Cooling,dehumidifying;compressor will stop,indoor fan motor will work.Heat:all will stop	Outdoorroom temp.sensor hasn't connected well,or damaged,please refer to the sensor resistance value for checking.
13	Malfunction of detecting plate(WIFI )	JF				Loads operate normally, while the unit can't be normally controlled by APP.	1.Main board of indoor unit is damaged 2.Detection board is damaged 3.The connection between indoor unit and detection board is not good

14	Outdoor air exhaust sensor open circuit, short circuit	F5		Off 3s blinks 5 times		Cooling, dehumidifying; after running for 3mins later, the compressor will stop to run, indoor fan motor will start to run. heating: after run 3 mins later, all will stop to run.	1. Exhaust temp sensor hasn't connected well, or damaged, please refer to the sensor resistance value for checking. 2. Sensor head hasn't insert into the copper tube.
15	Overload limit/ descending frequency	F6		Off 3s blinks 6 times		Overload normal operation, compressor is running, frequency descending	Please refer to troubleshooting
16	Over current need frequency descending	F8		Off 3s blinks 8 times		Overload normal operation, compressor is running, frequency descending	1. Input power supply is too low 2. System voltage is too high, over is too much
17	Air exhaust over high need frequency descending	F9		Off 3s blinks 9 times		Overload normal operation, compressor is running, frequency descending	1. Overload is too much, ambient temp. is too high 2. Refrigerant is short 3. Electric expansion malfunction
18	DC generatrix voltage is too high	PH		Off 3s blink 11 times		Cooling, dehumidifying, compressor stop running, Fan motor works. Heating: all will stop	1. Testing wire terminal L and N position. If higher than 265VAC, please cut off the power supply and restart until back to normal 2. If input voltage is normal, testing the voltage of electrolytic capacitor on AP1 after turn on the unit. There may be some problem and replace the AP1 if the electrolytic capacitor voltage range at 200-280V
19	Complete unit current detection malfunction	U5		Off 3s and blink 13 times		Cooling, dehumidifying; compressor stops running, indoor fan motor works. Heating: all will stop running	The circuit on AP1 has malfunction, replace the outdoor unit AP1
20	Compressor current overcurrent protection	P5		Off 3s blink 15 times		Cooling, dehumidifying; compressor stops running, indoor fan motor works. Heating: all will stop running	Please refer to troubleshooting (IPM protection, compressor lose steps, compressor current overcurrent protection)
21	Defrosting			Off 3s and blink once (during blinking, ON 10s and Off 05s)		Not the error code. It's the status code for the operation	
22	Compressor overload protection	H3		Off 3s blink 3 times		Cooling, dehumidifying; compressor stops running, indoor fan motor works. Heating: all will stop running	1. Wire terminal OVCCOMP loosen or circuit, has problem, the resistance of SAT should be lower than 1 ohm. 2. Please refer to troubleshooting (exhaust/ overload protection)
23	IPM protection	H5		Off 3s blink 5 times		Cooling, dehumidifying; compressor stops running, indoor fan motor works. Heating: all will stop running	Pls refer to troubleshooting
24	PFC protection	HC				Cooling, dehumidifying; compressor stops running, indoor fan motor works. Heating: all will stop running	Replace outdoor control panel AP1 or Reactor



25	Compressor lose steps	H7			Off 3s blink 7 times	Cooling, dehumidifying;compressor stops running,indoor fan motor works. Heating: all will stop running	Pls refer to troubleshooting
26	Heating, anti-high temp. declines	H0			Off 3s blink 10 times	Overload normal works,compressor running,frequency declines	Pls refer to troubleshooting
27	Startsup fail	Lc			Off 3s blink 11 times	Cooling, dehumidifying;compressor stops running,indoor fan motor works. Heating: all will stop running	Pls refer to troubleshooting
28	Compressor current testing circuit malfunction	U1			Off 3s blink 13 times		Replace the outdoor control board AP1
29	EEPROM malfunction	EE			Off 3s blink 15 times	Cooling, dehumidifying;compressor stops running,indoor fan motor works. Heating: all will stop running	Replace the outdoor control board AP1
30	Capacitor charge malfunction	PU			Off 3s blink 17 times	Cooling, dehumidifying;compressor stops running,indoor fan motor works. Heating: all will stop running	Pls refer to Part 3 capacitor charging fault of troubleshooting
31	Module sensor circuit diagram	P7			Off 3s blink 18 times	Cooling, dehumidifying;compressor stops running,indoor fan motor works. Heating: all will stop running	Replace the outdoor control board AP1
32	Module temp. over high protection	P8			Off 3s blink 19 times	Cooling, dehumidifying;compressor stops running,indoor fan motor works. Heating: all will stop running	To check whether the ambient Temp. of IPM is too high or the heat-sinhing of IPM is dirty else replace the outdoor baord AP1
33	DC Bus voltage dips	U3			Off 3s blink 20 times	Cooling, dehumidifying;compressor stops running,indoor fan motor works. Heating: all will stop running	Power voltage is not stable
34	Low DC Bus voltage protection	PL			Off 3s blink 21 times	Cooling, dehumidifying;compressor stops running,indoor fan motor works. Heating: all will stop running	1.Check the Input voltage if the Voltage is lower than 150VAC,restart the machine when the power supply is mormal. 2.Checking the reactor L connection.
35	IPM temp.is too high limit/ decrease frequency	EU				Over load normal works,compressor runing frequency declines	Whole unit break for 20 mins and discharge,to check the outdoor control board AP1's IPM module coolant whether is short,the radiator is tightened. If above phenomenon is not OK,Please improve or replace the control board AP1
36	Four-way valve abnormal	U7				This malfunction happened,only in heating mode,all will stop to run.	1.Power supply voltage is lower than AC175V 2.Wire terminal 4V loosen or wire break 3.4V damaged,replace 4V
37	Outdoor unit zero-cross detecting error					Cooling:compressor will stop,indoor fan motor works. Heating:all will stop.	Replace the outdoor control board AP1
38	Outdoor DC fan motor malfunction	L3				Outdoor DC fan motor malfunction lead to compressor stop operation	DC fan motor malfunction or system blocked or the connector loosed

39	Anti-freezing protection for evaporator	E2				Not the error code. It's the status code for the operation.	
40	Cold air prevention protection	E9				Not the error code. It's the status code for the operation.	
41	Refrigerant recovery mode	Fo				Refrigerant recovery. The Serviceman operates it for maintenance.	
42	Undefined outdoor unit error	oE				<p>Cool: compressor and outdoor fan stops operation, while indoor fan operates; Heat: compressor, outdoor fan and indoor fan stop operation.</p>	<ol style="list-style-type: none"> <li>1. Outdoor ambient temperature exceeds the operation range of unit (eg: less than -20oC for cooling; more than 60oC for heating);</li> <li>2. Failure startup of compressor?</li> <li>3. Are wires of compressor not connected tightly?</li> <li>4. Is compressor damaged?</li> <li>5. Is main board damaged?</li> </ol>



## 9.2 Procedure of Troubleshooting


### Indoor unit

#### (1) Malfunction of Temperature Sensor F1, F2

Main detection points:

- Is the wiring terminal between the temperature sensor and the controller loosened or poorly contacted?
- Is there short circuit due to trip-over of the parts?
- Is the temperature sensor broken?
- Is mainboard broken?

Malfunction diagnosis process:

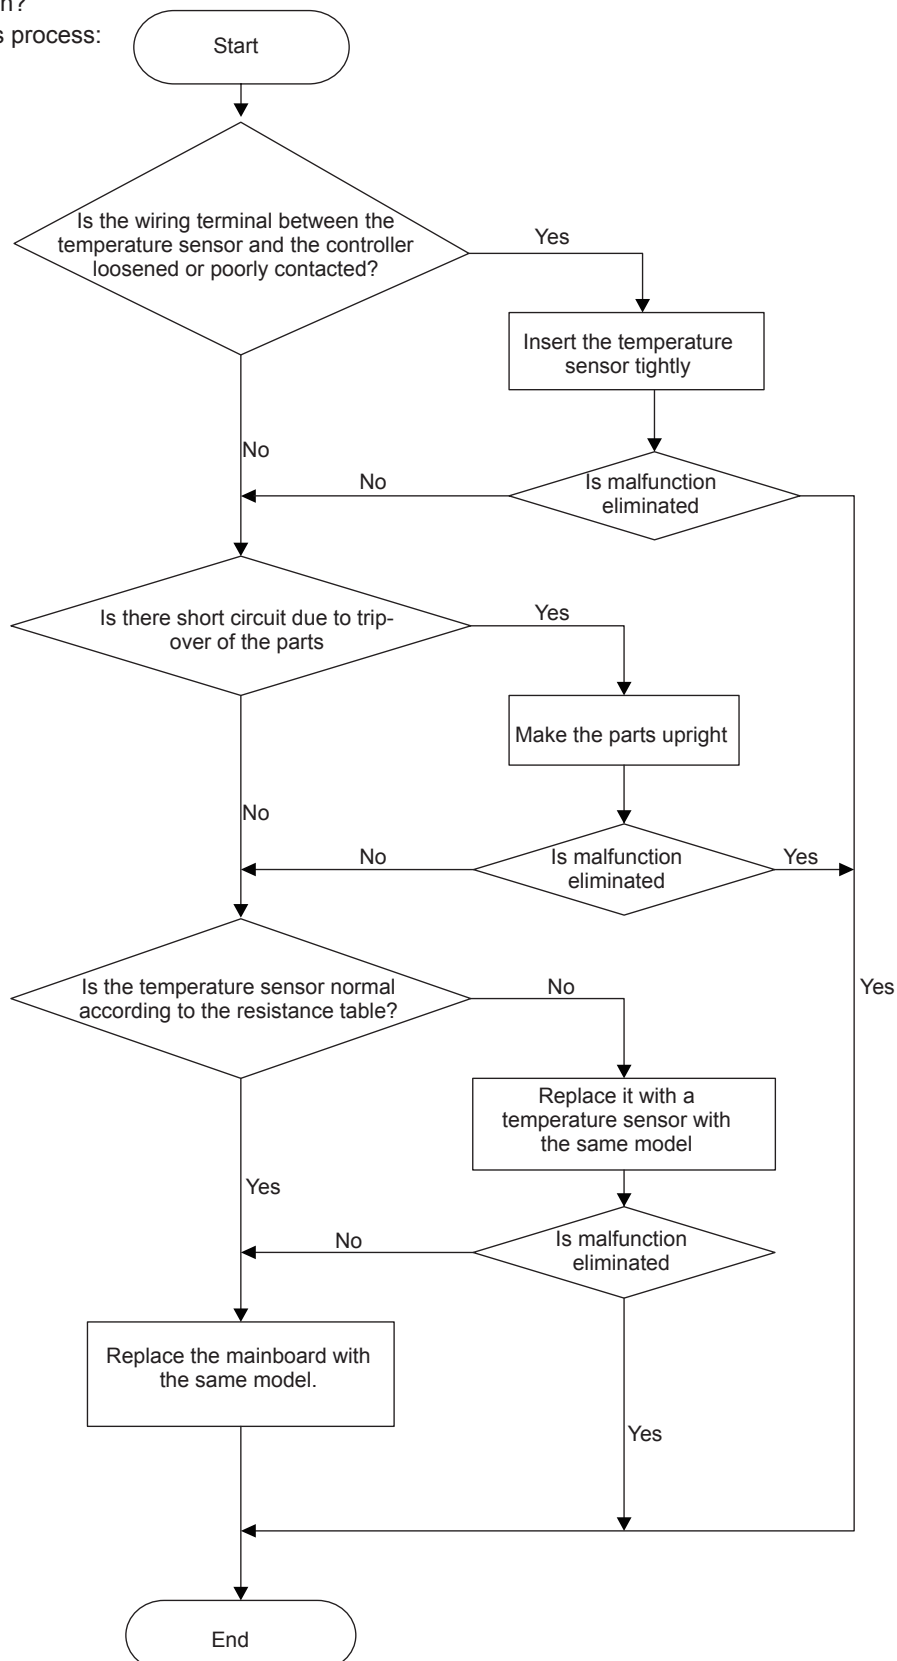


**(2) Malfunction of Blocked Protection of IDU Fan Motor H6**

Main detection points:

- SmoothlyIs the control terminal of PG motor connected tightly?
- SmoothlyIs the feedback interface of PG motor connected tightly?
- The fan motor can't operate?
- The motor is broken?
- Detectioncircuit of the mainboard is defined abnormal?


Malfunction diagnosis process:

For some models:

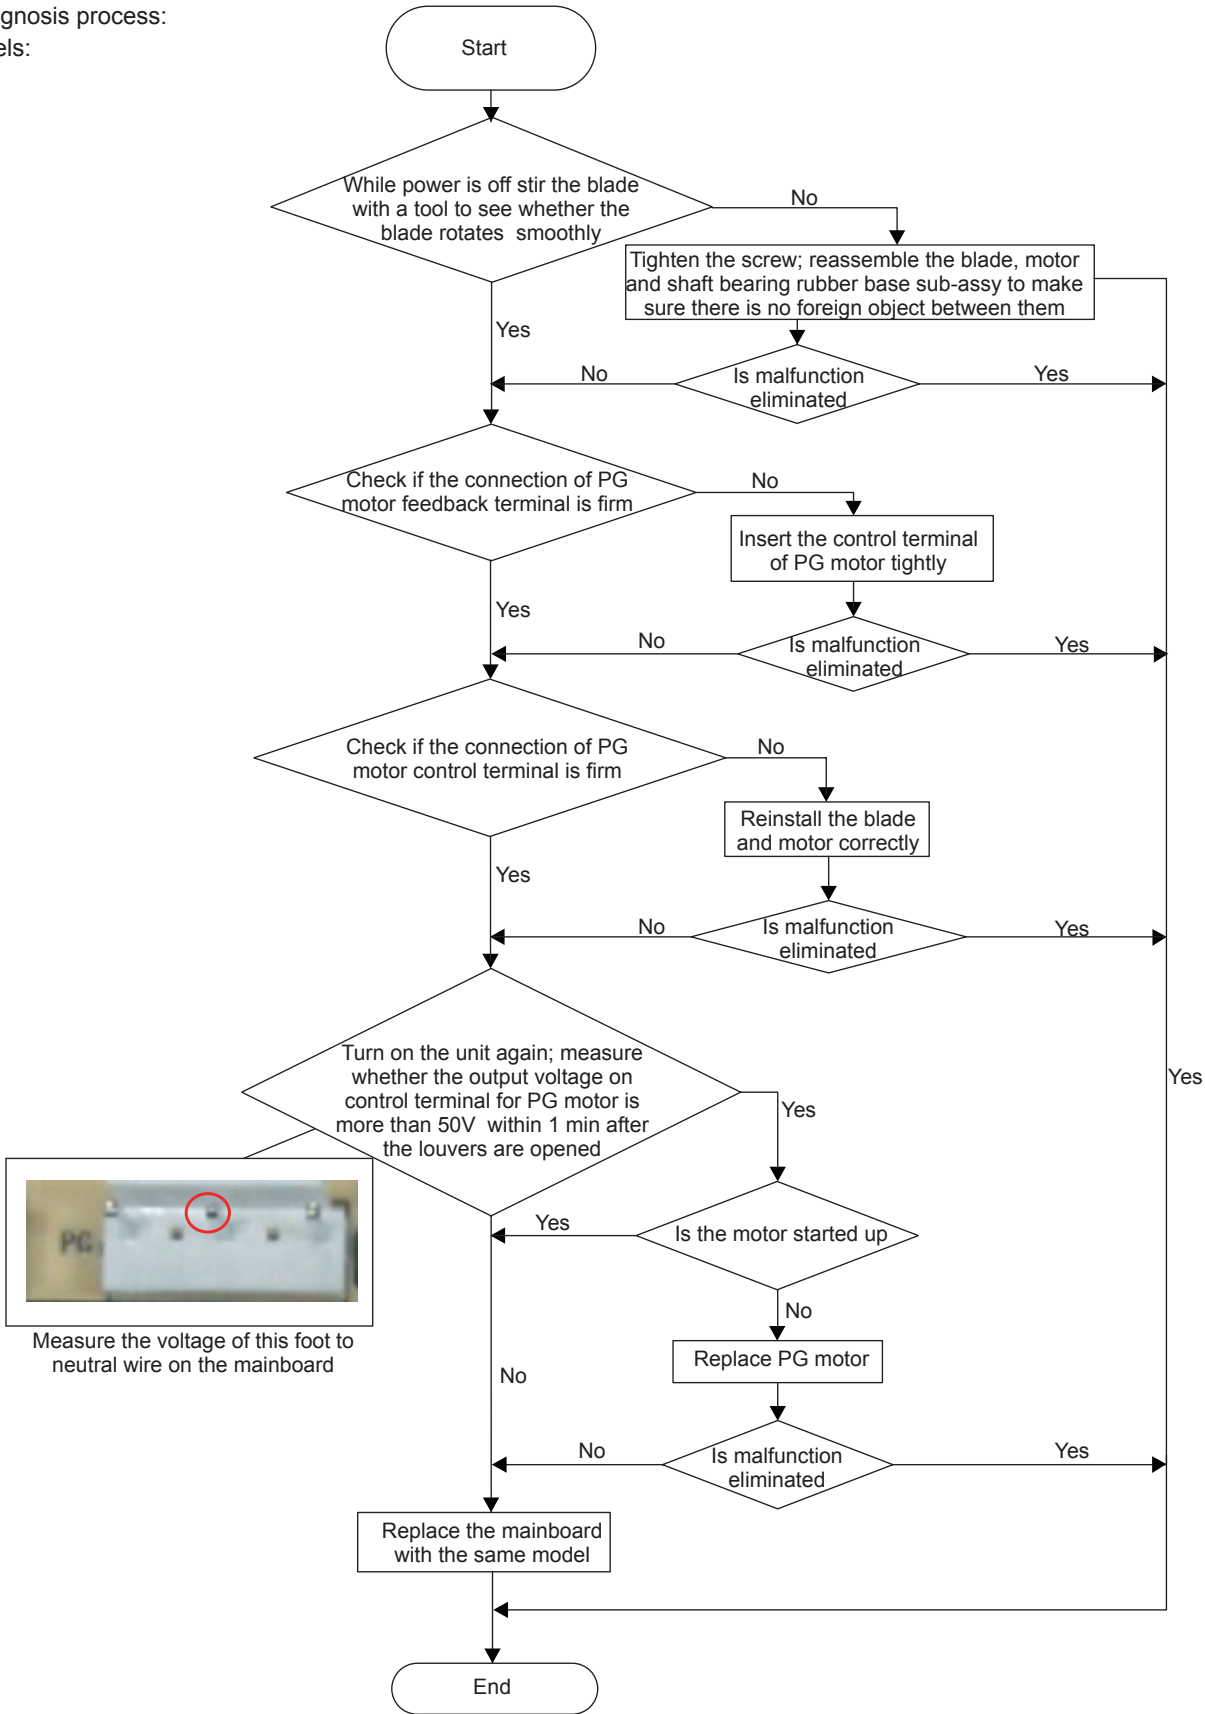

Measure the voltage of this foot to neutral wire on the mainboard

For some models:


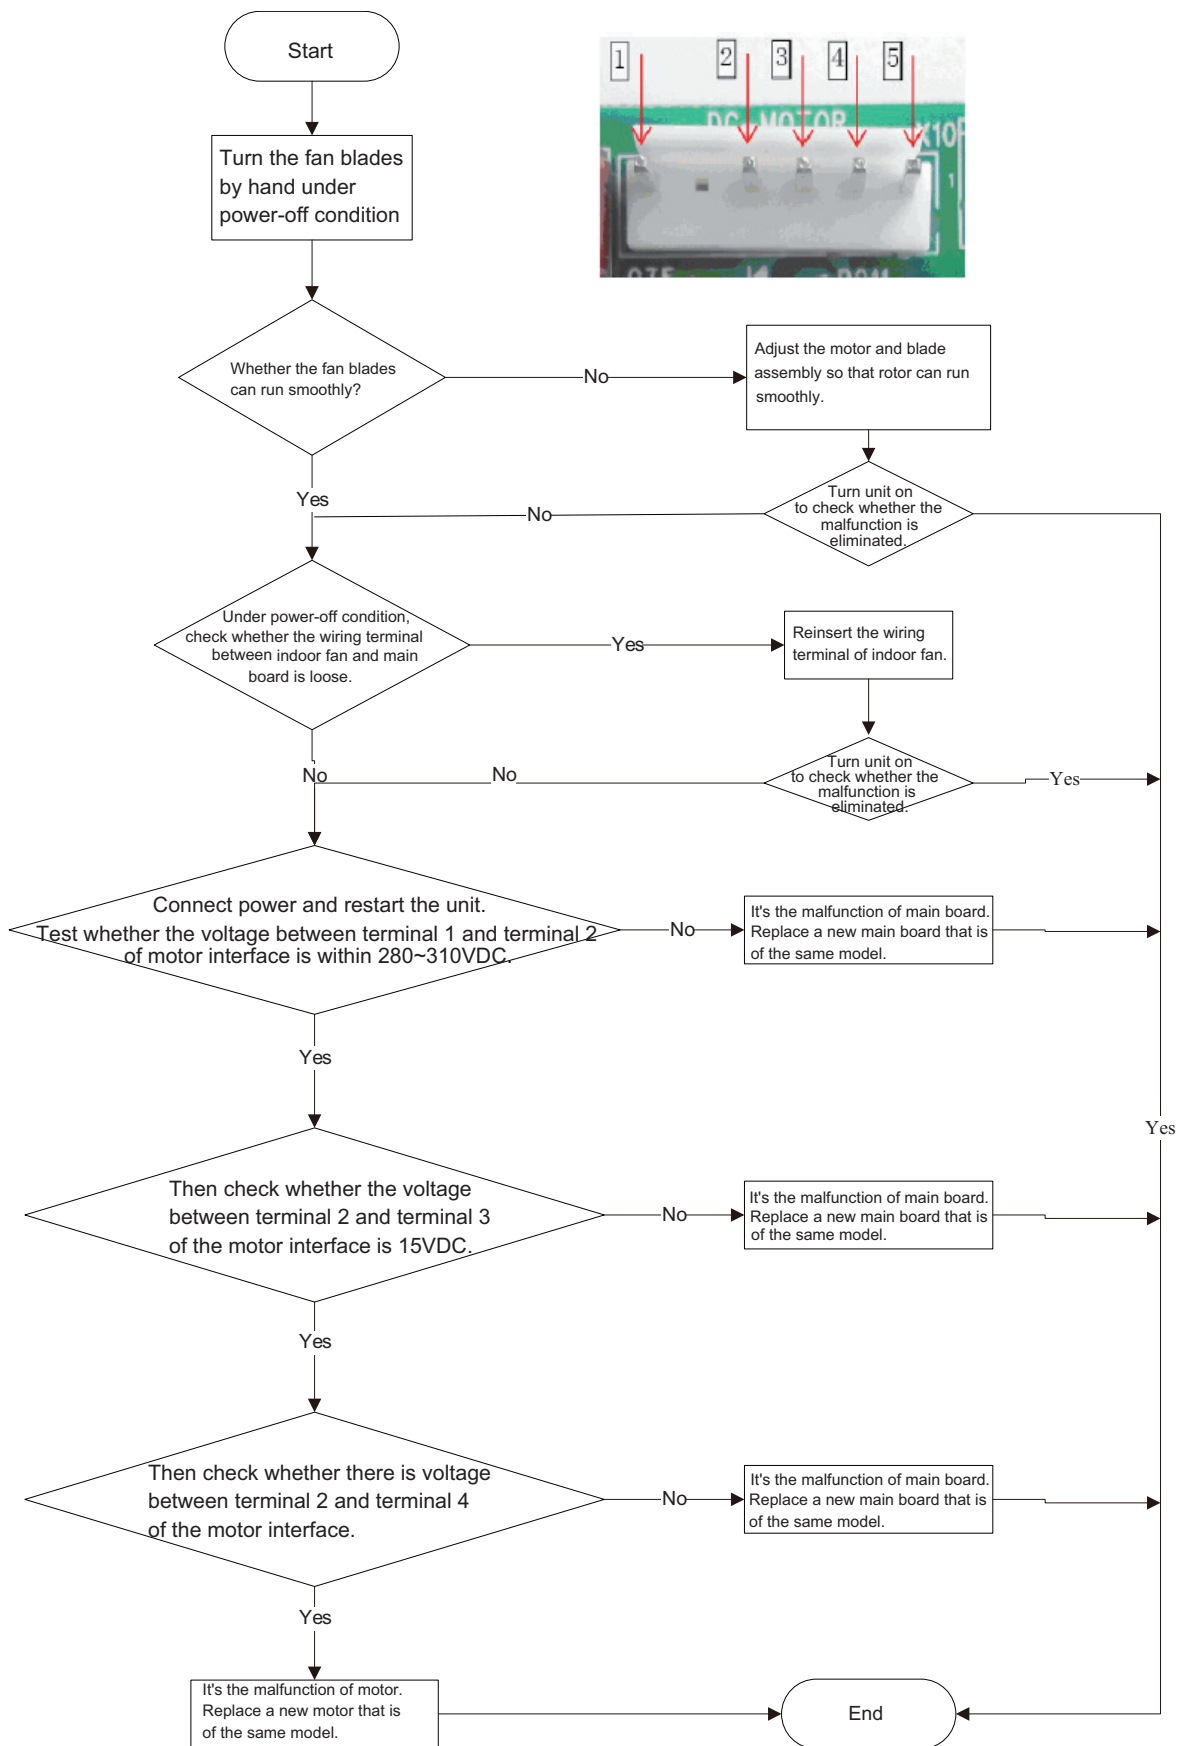


### (3) Malfunction of Protection of Jumper Cap C5

Main detection points:

- Is there jumper cap on the mainboard?
- Is the jumper cap inserted correctly and tightly?
- The jumper is broken?
- The motor is broken?
- Detection circuit of the mainboard is defined abnormal?

Malfunction diagnosis process:

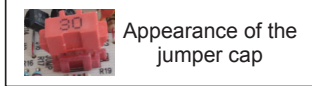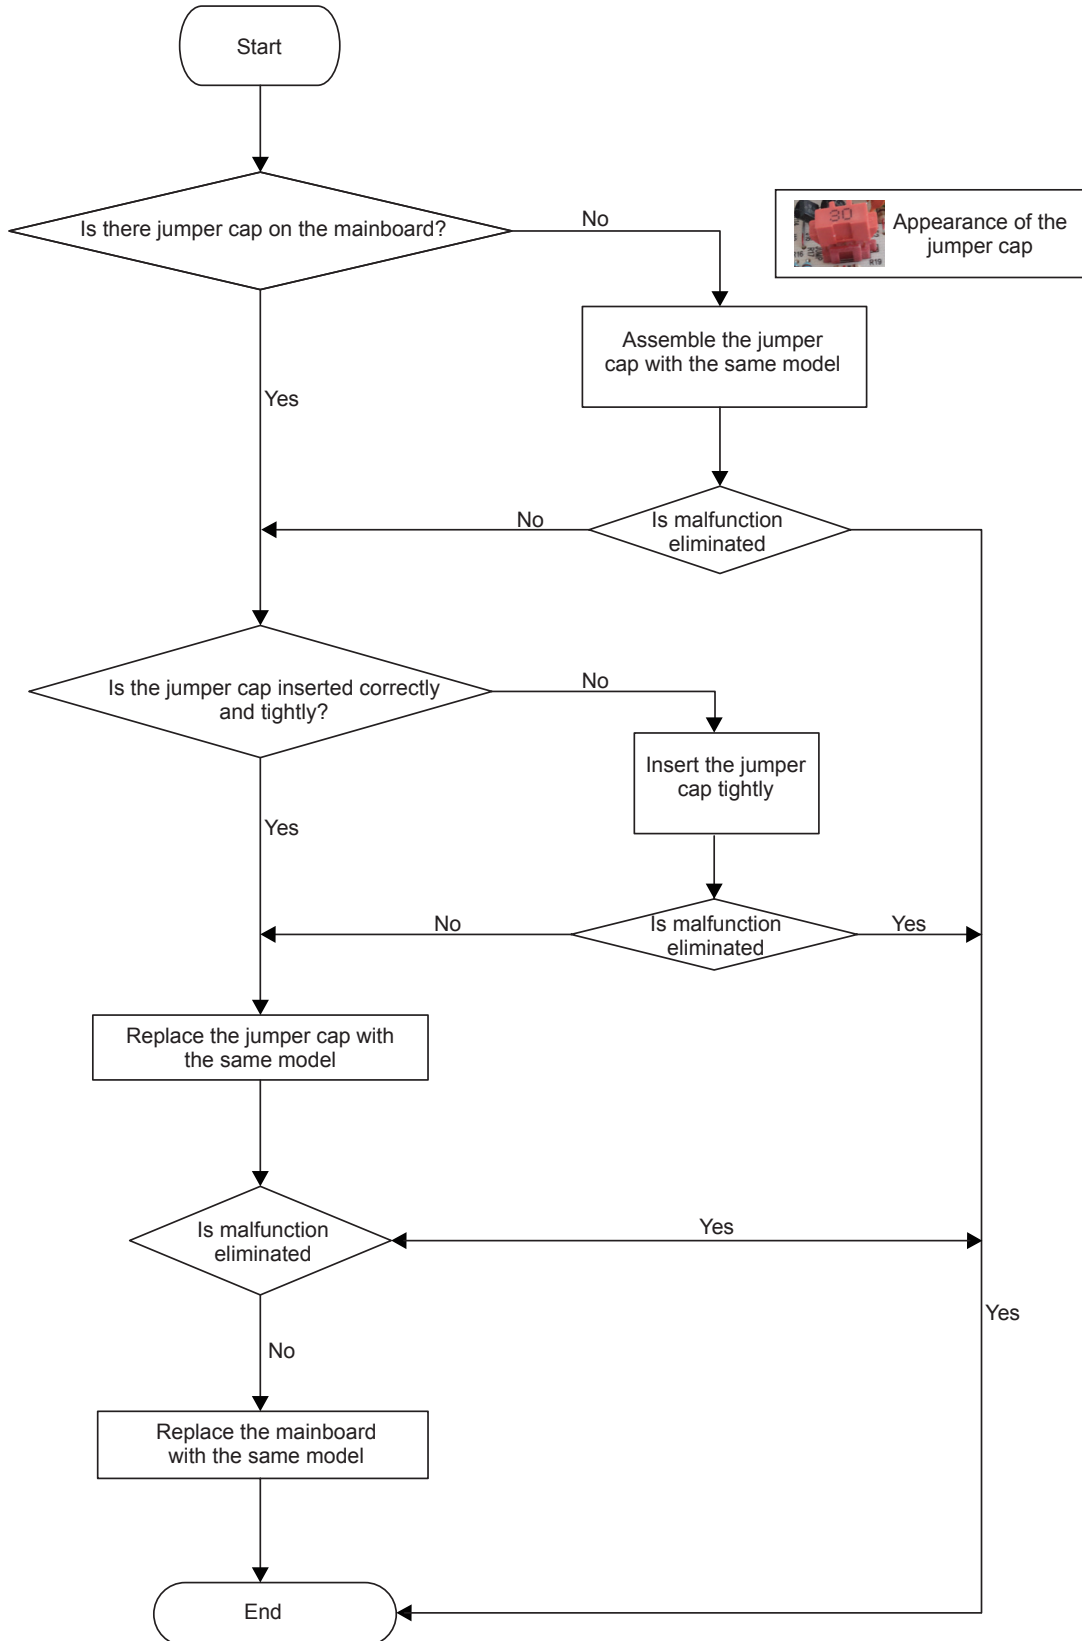


**(4) Malfunction of Zero-crossing Inspection Circuit Malfunction of the IDU Fan Motor U8**


Main detection points:

- Instant energization after de-energization while the capacitor discharges slowly?
- The zero-cross detection circuit of the mainboard is defined abnormal?

Malfunction diagnosis process:

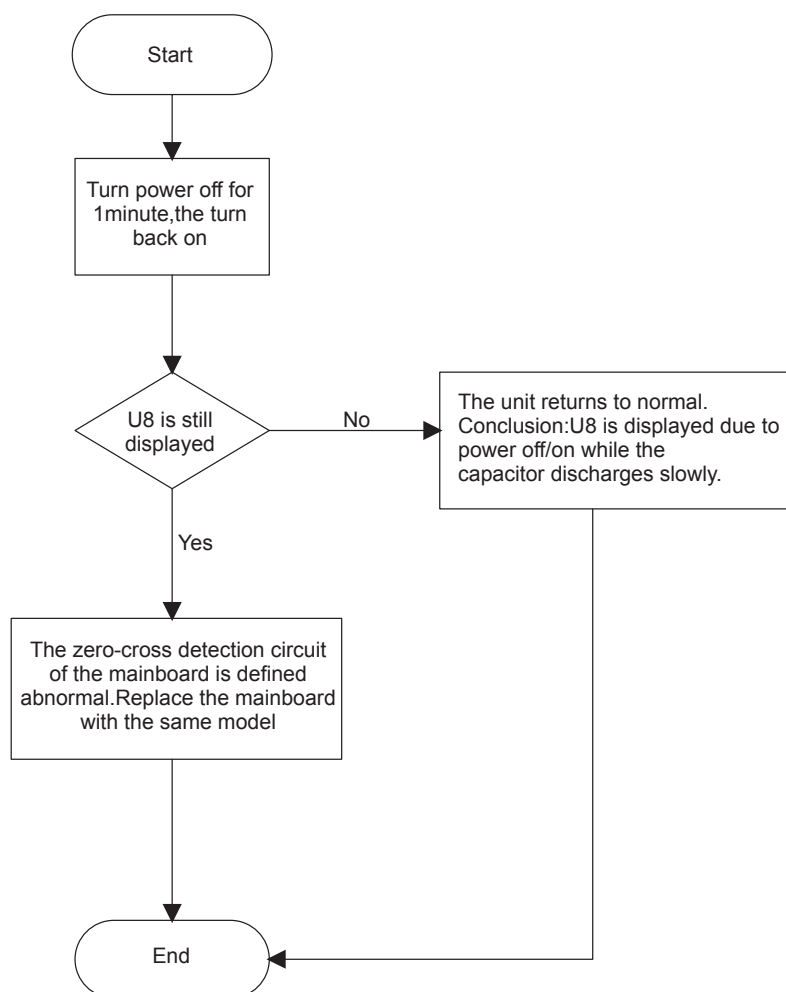


4. Communication malfunction E6

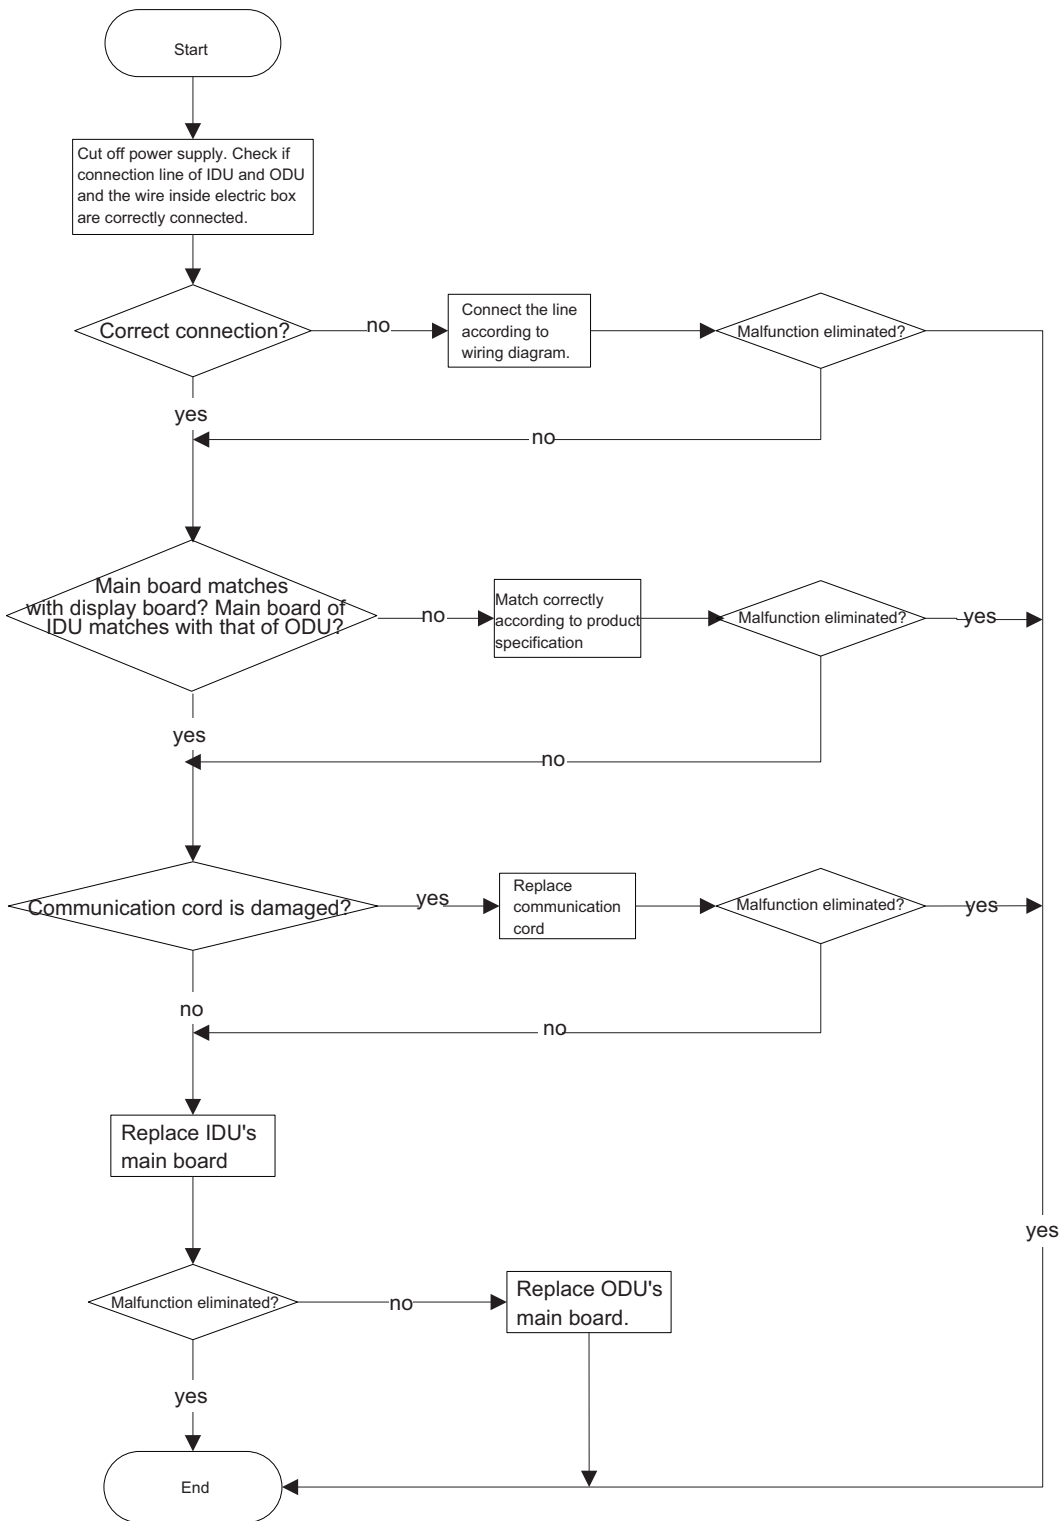


5. Malfunction of detecting plate(WIFI) JF

Note: (only for the mode with this function)

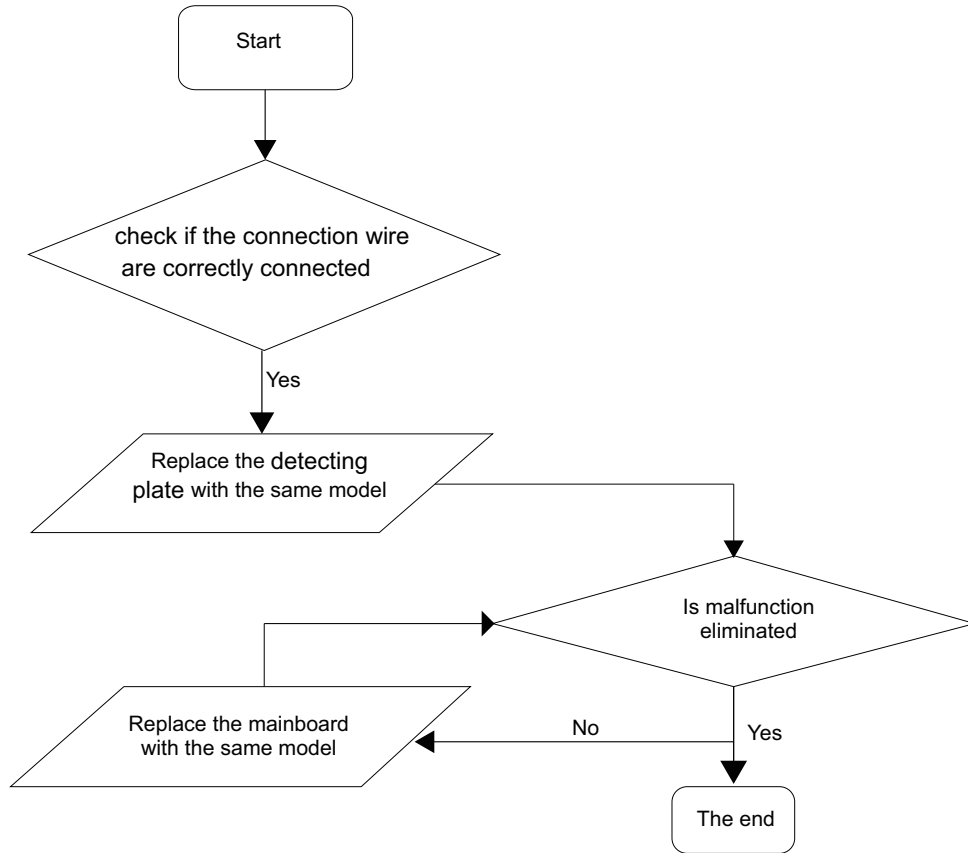

6. Malfunction of Insufficient fluorine protection F0

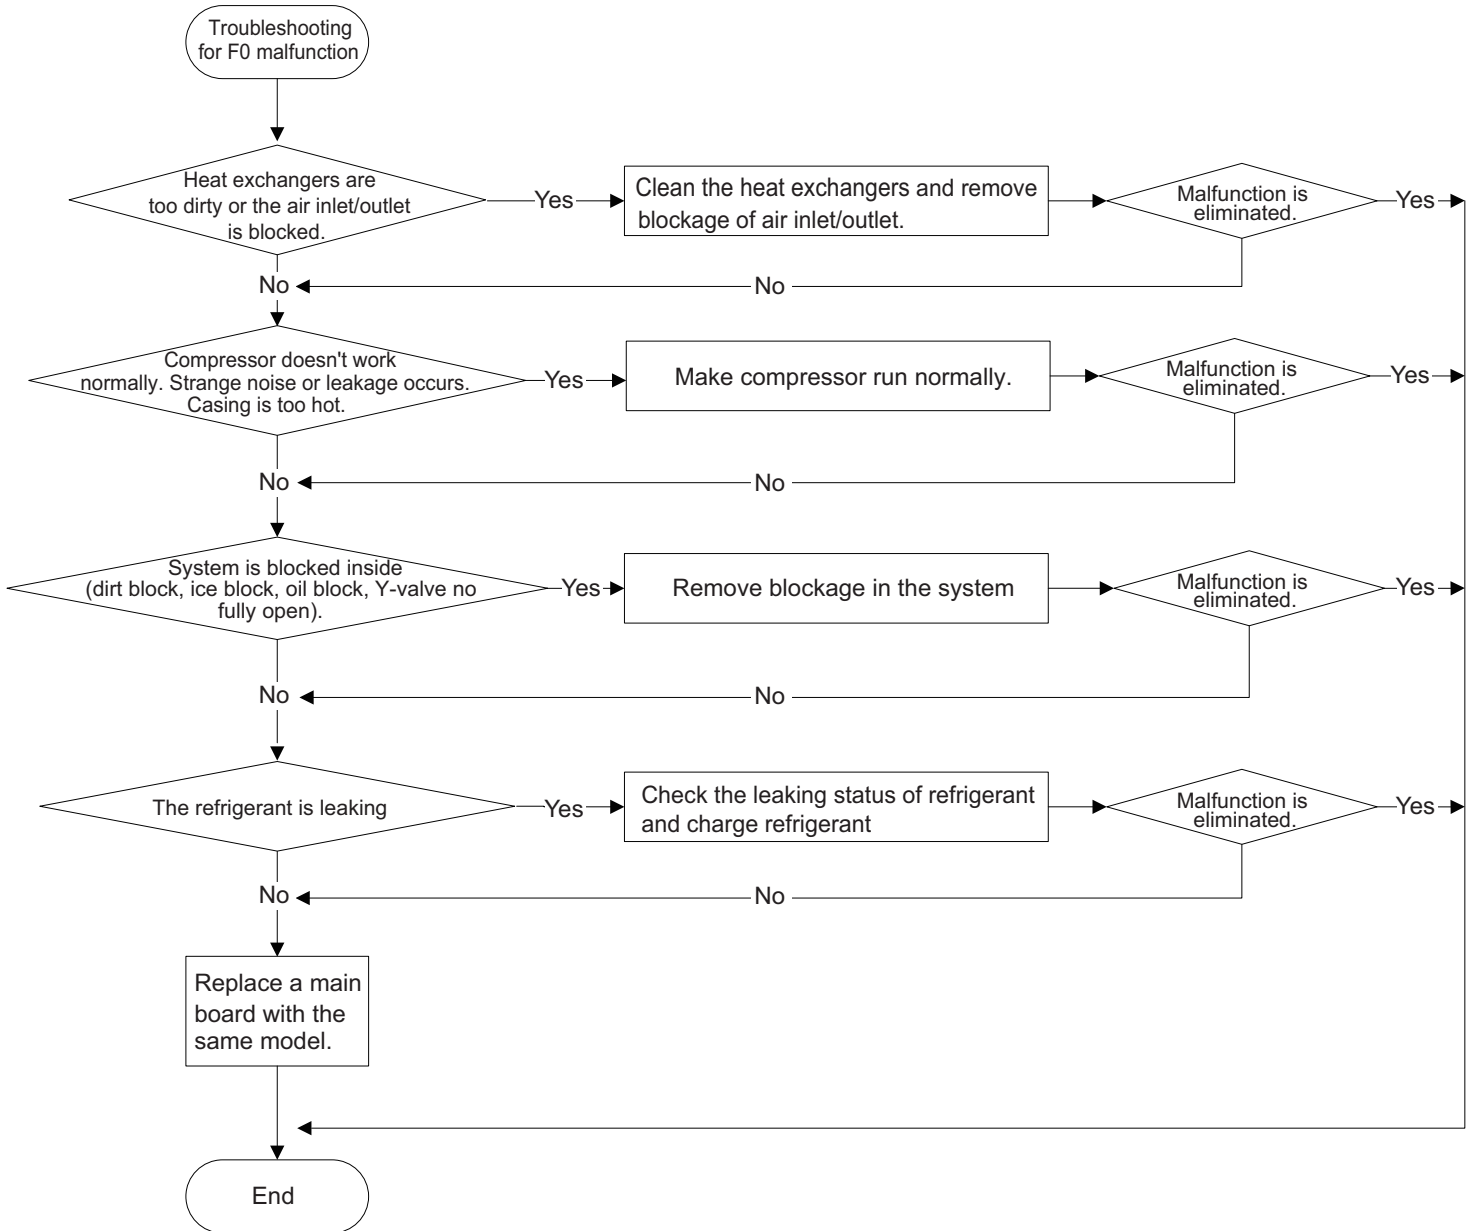




●Outdoor unit:

**(1) Capacitor charge fault (Fault with outdoor unit) (AP1 below refers to the outdoor control panel)**

Main Check Points:

- Use AC voltmeter to check if the voltage between terminal L and N on the wiring board is within 210VAC~240VAC.
- Is the reactor (L) correctly connected? Is the connection loose or fallen? Is the reactor (L) damaged?

Fault diagnosis process:

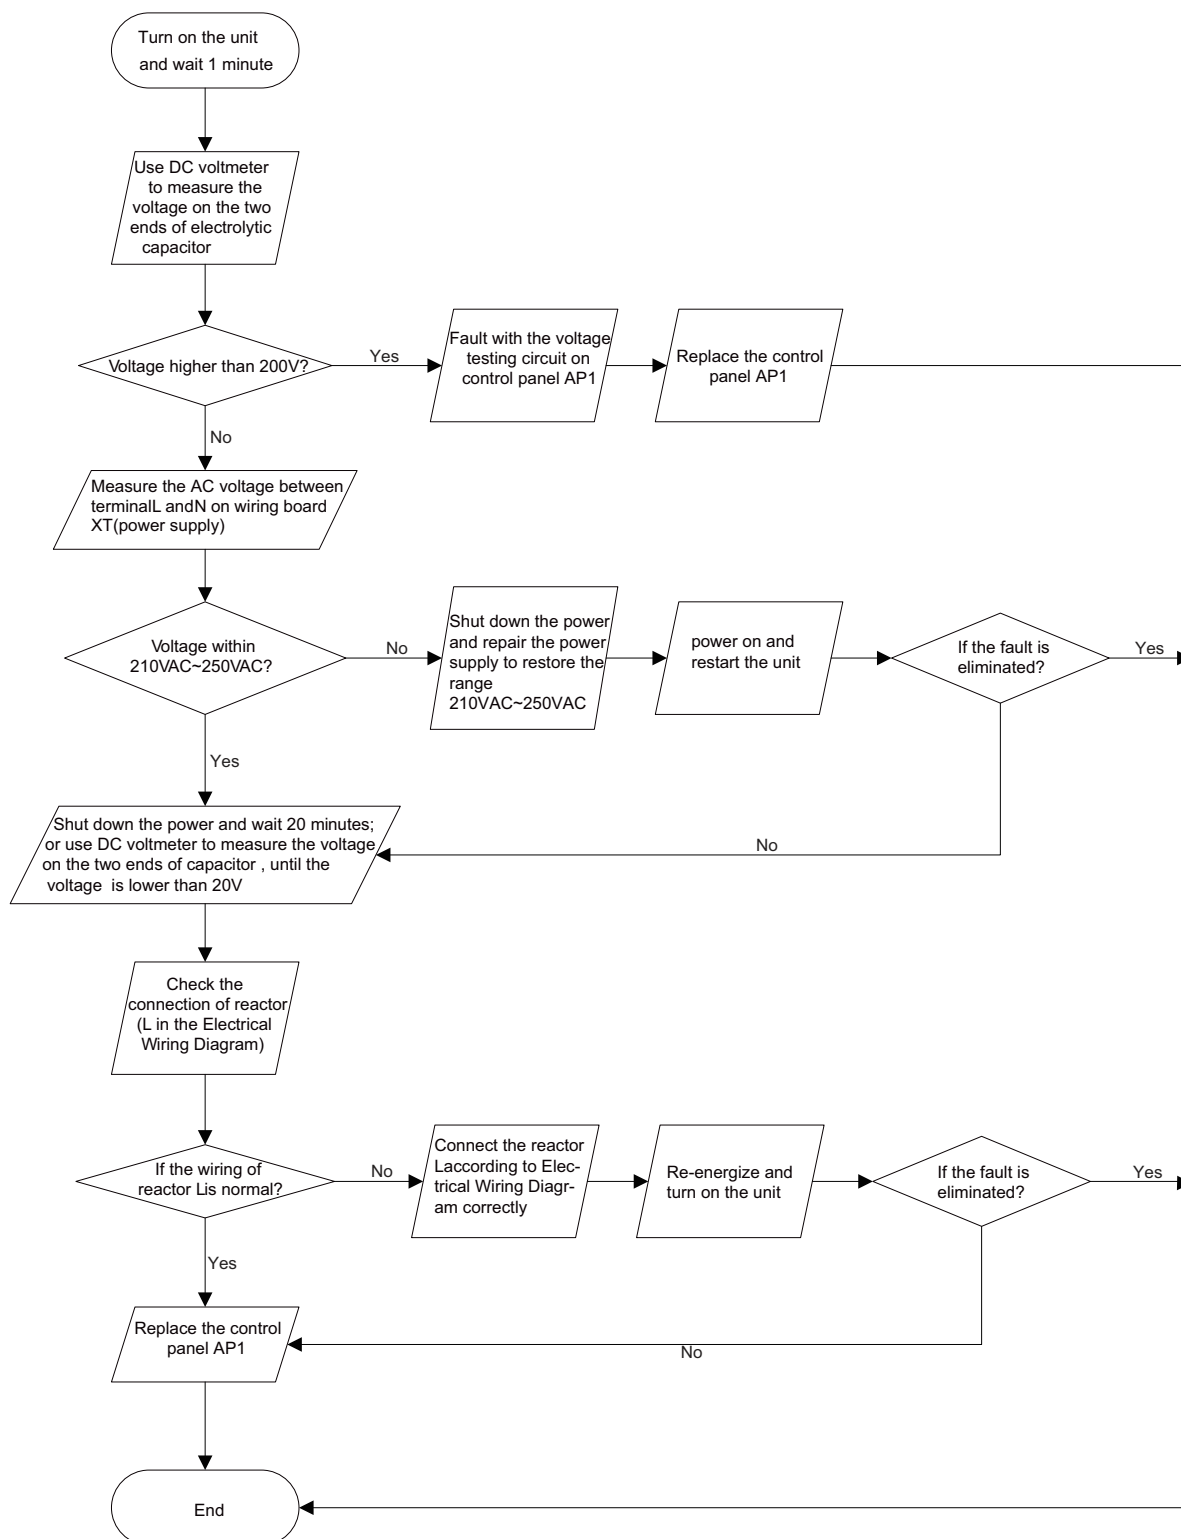


**2. IPM protection, phase current overcurrent (the control board as below indicates the control board of outdoor unit) H5/P5**

Mainly detect:

- (1) Compressor COMP terminal (2) voltage of power supply (3) compressor
- (4) Refrigerant-charging volume (5) air outlet and air inlet of outdoor/indoor unit

Troubleshooting:

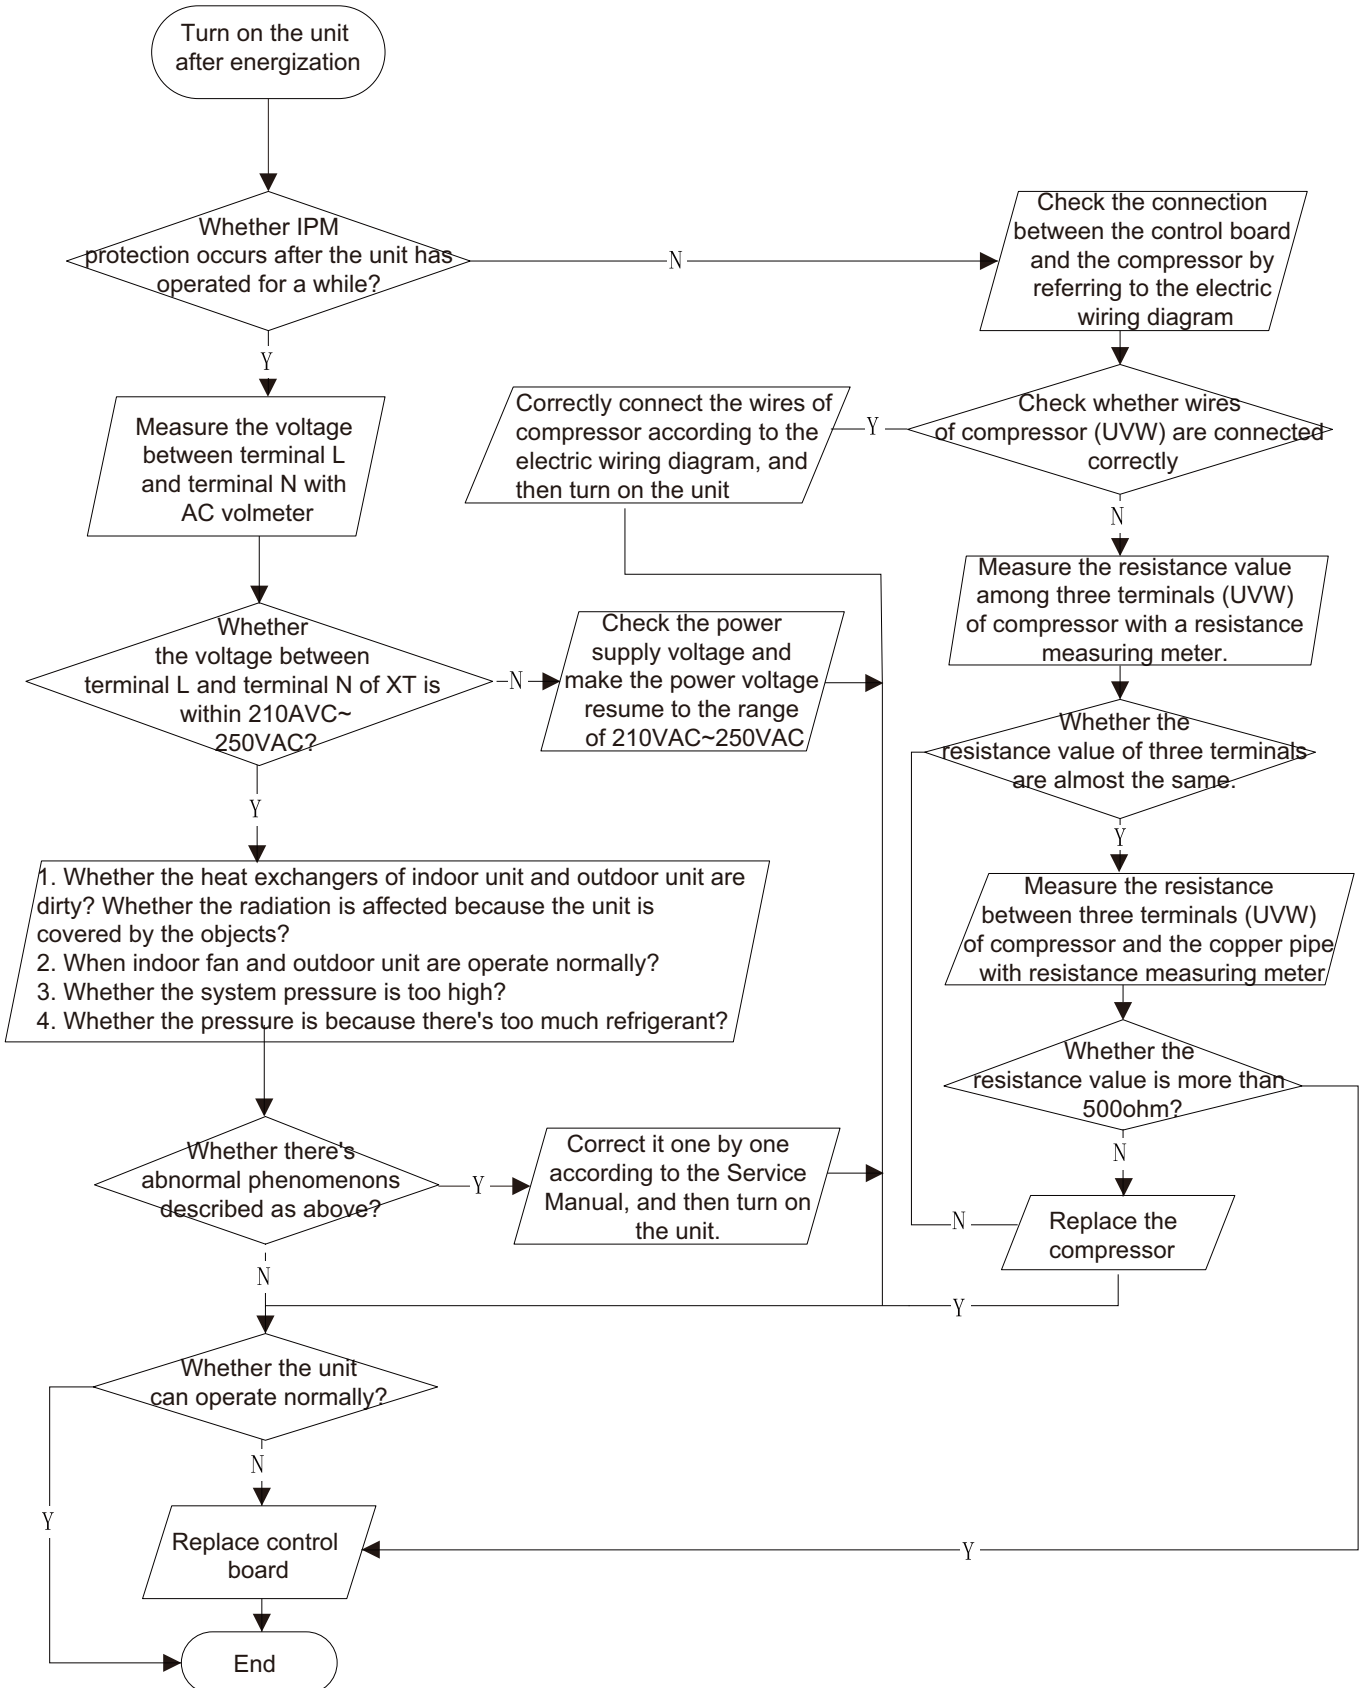


**(3) High temperature and overload protection diagnosis (AP1 hereinafter refers to the control board of the outdoor unit)**

Mainly detect:

- Is outdoor ambient temperature in normal range?
- Are the outdoor and indoor fans operating normally?
- Is the heat dissipation environment inside and outside the unit good?

Fault diagnosis process:

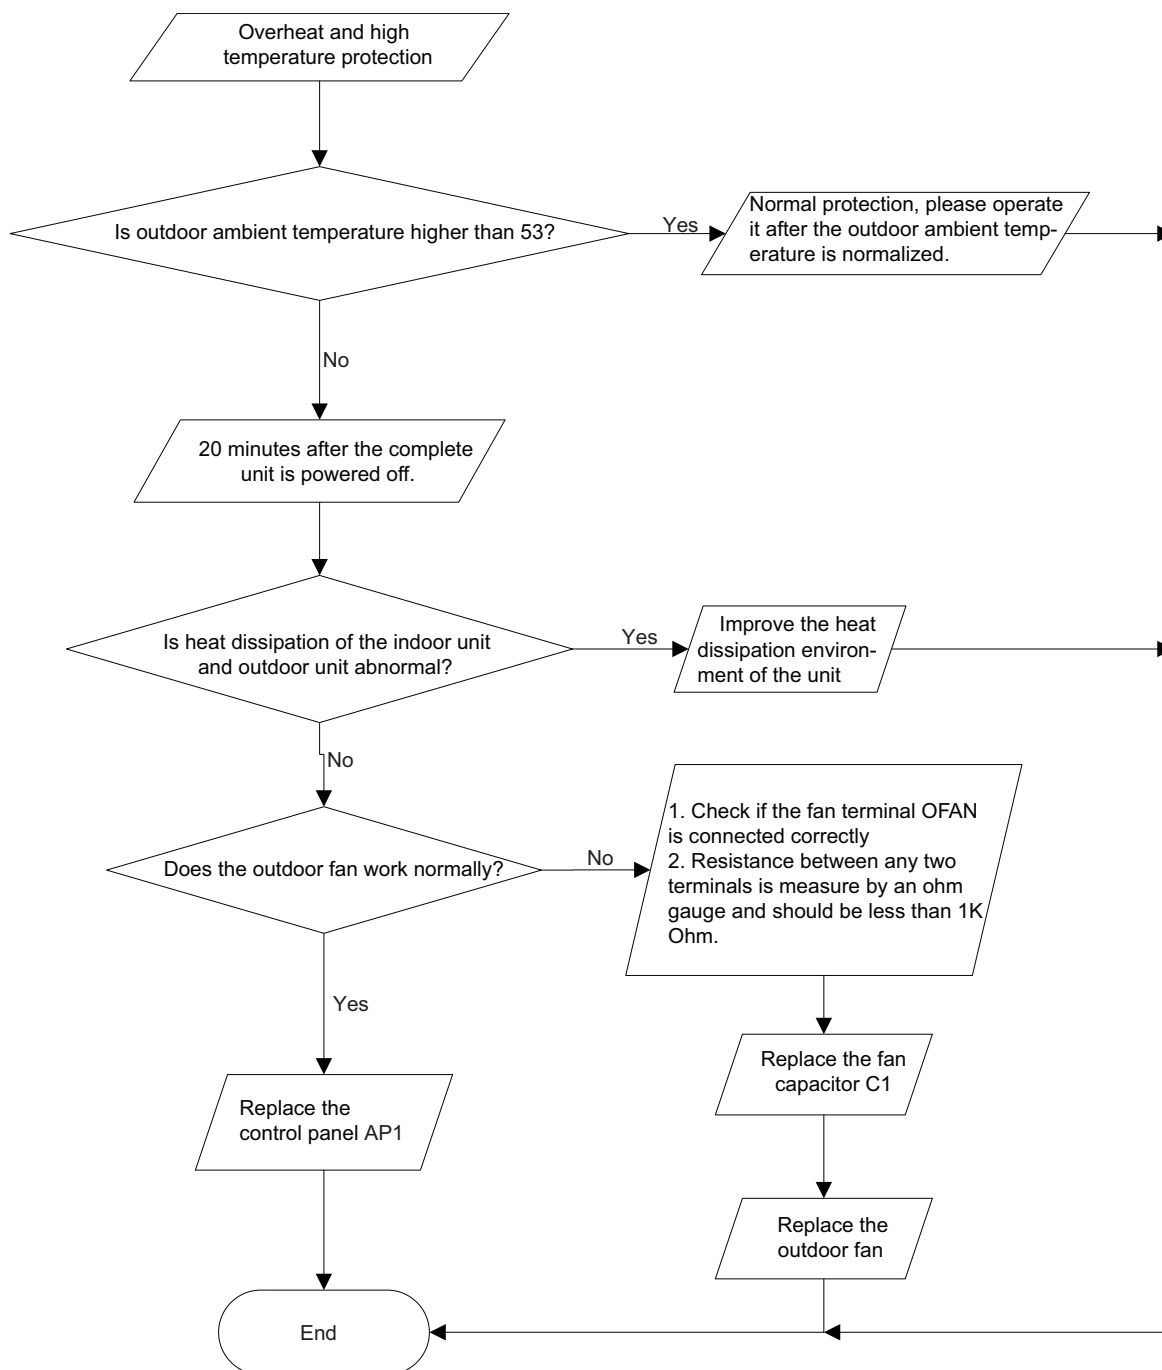


**(4) Start-up failure (following AP1 for outdoor unit control board)**

Mainly detect:

- Whether the compressor wiring is connected correct?
- Is compressor broken?
- Is time for compressor stopping enough?

Fault diagnosis process:

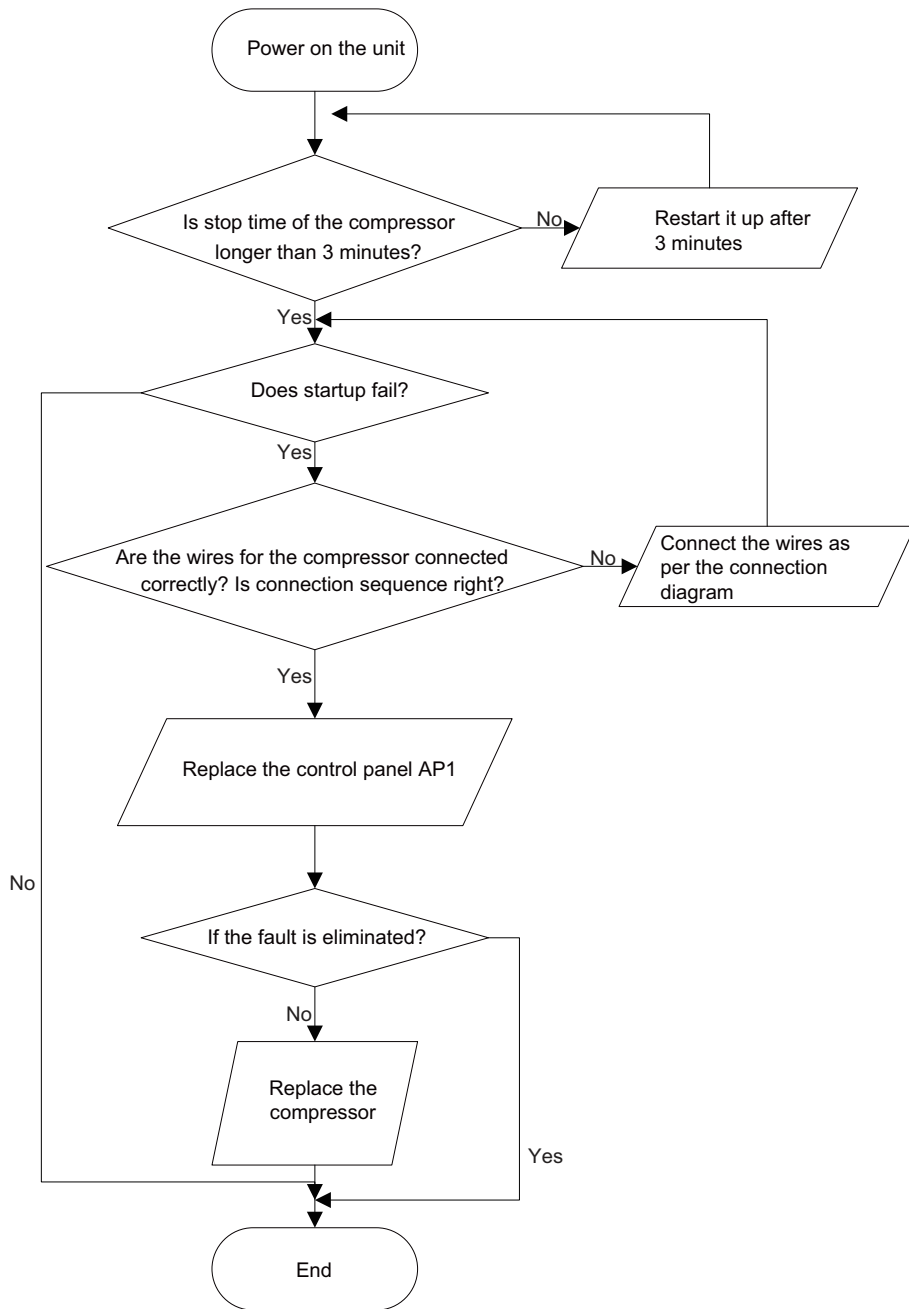


**(5) Out of step diagnosis for the compressor (AP1 hereinafter refers to the control board of the outdoor unit)**

Mainly detect:

- Is the system pressure too high?
- Is the input voltage too low?

Fault diagnosis process:

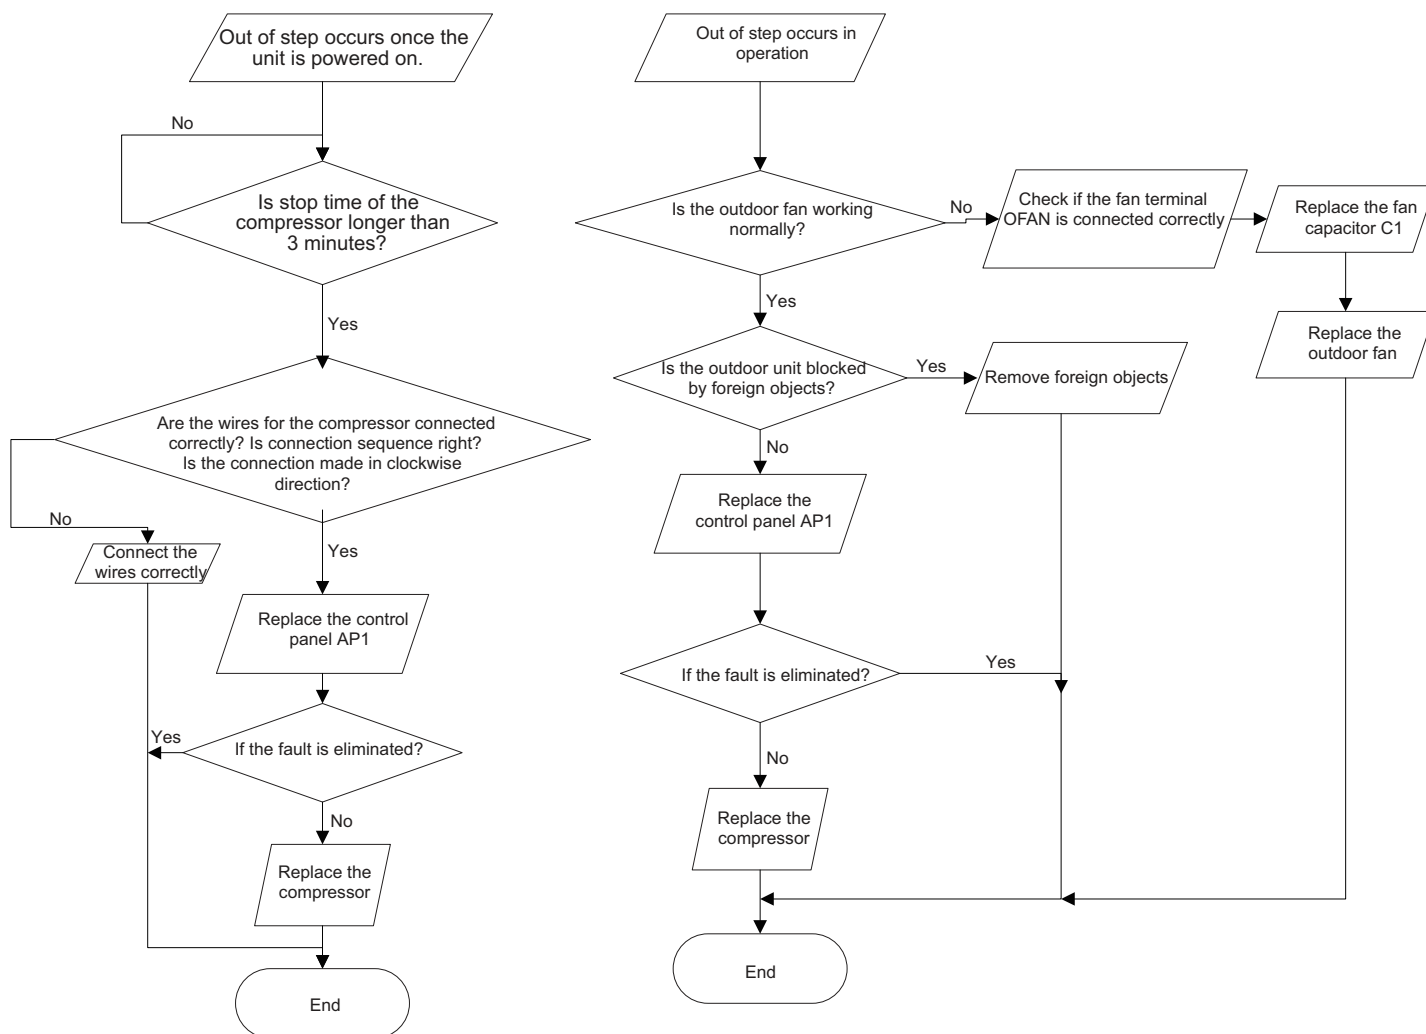


**(6) Overload and air exhaust malfunction diagnosis (following AP1 for outdoor unit control board)**

Mainly detect:

- Is the PMV connected well or not? Is PMV damaged?
- Is refrigerant leaked?

Fault diagnosis process:

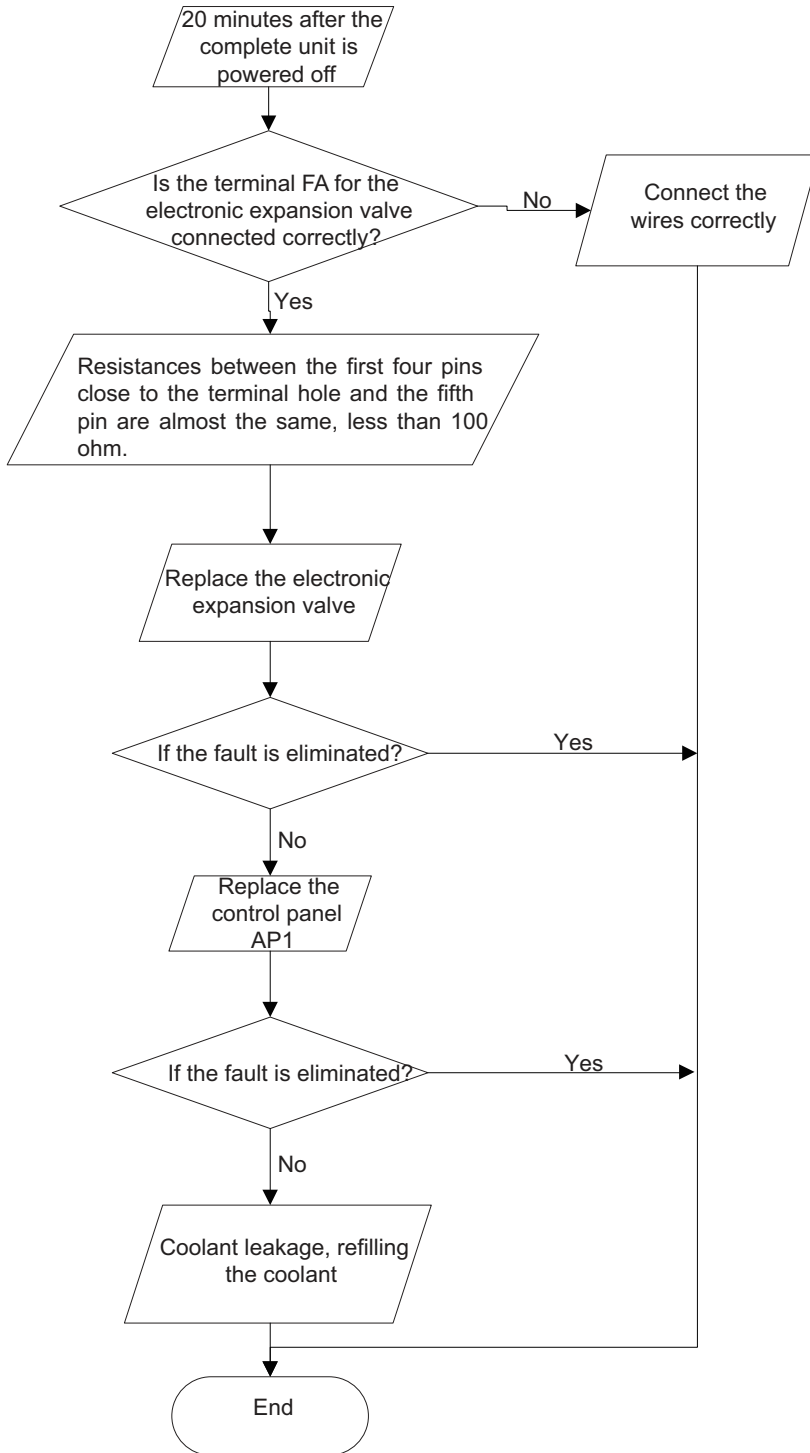


**(7) Communication malfunction: (following AP1 for outdoor unit control board)**

Mainly detect:

- Is there any damage for the indoor unit mainboard communication circuit? Is communication circuit damaged?
- Detect the indoor and outdoor units connection wire and indoor and outdoor units inside wiring is connect well or not, if is there any damage?

Fault diagnosis process:

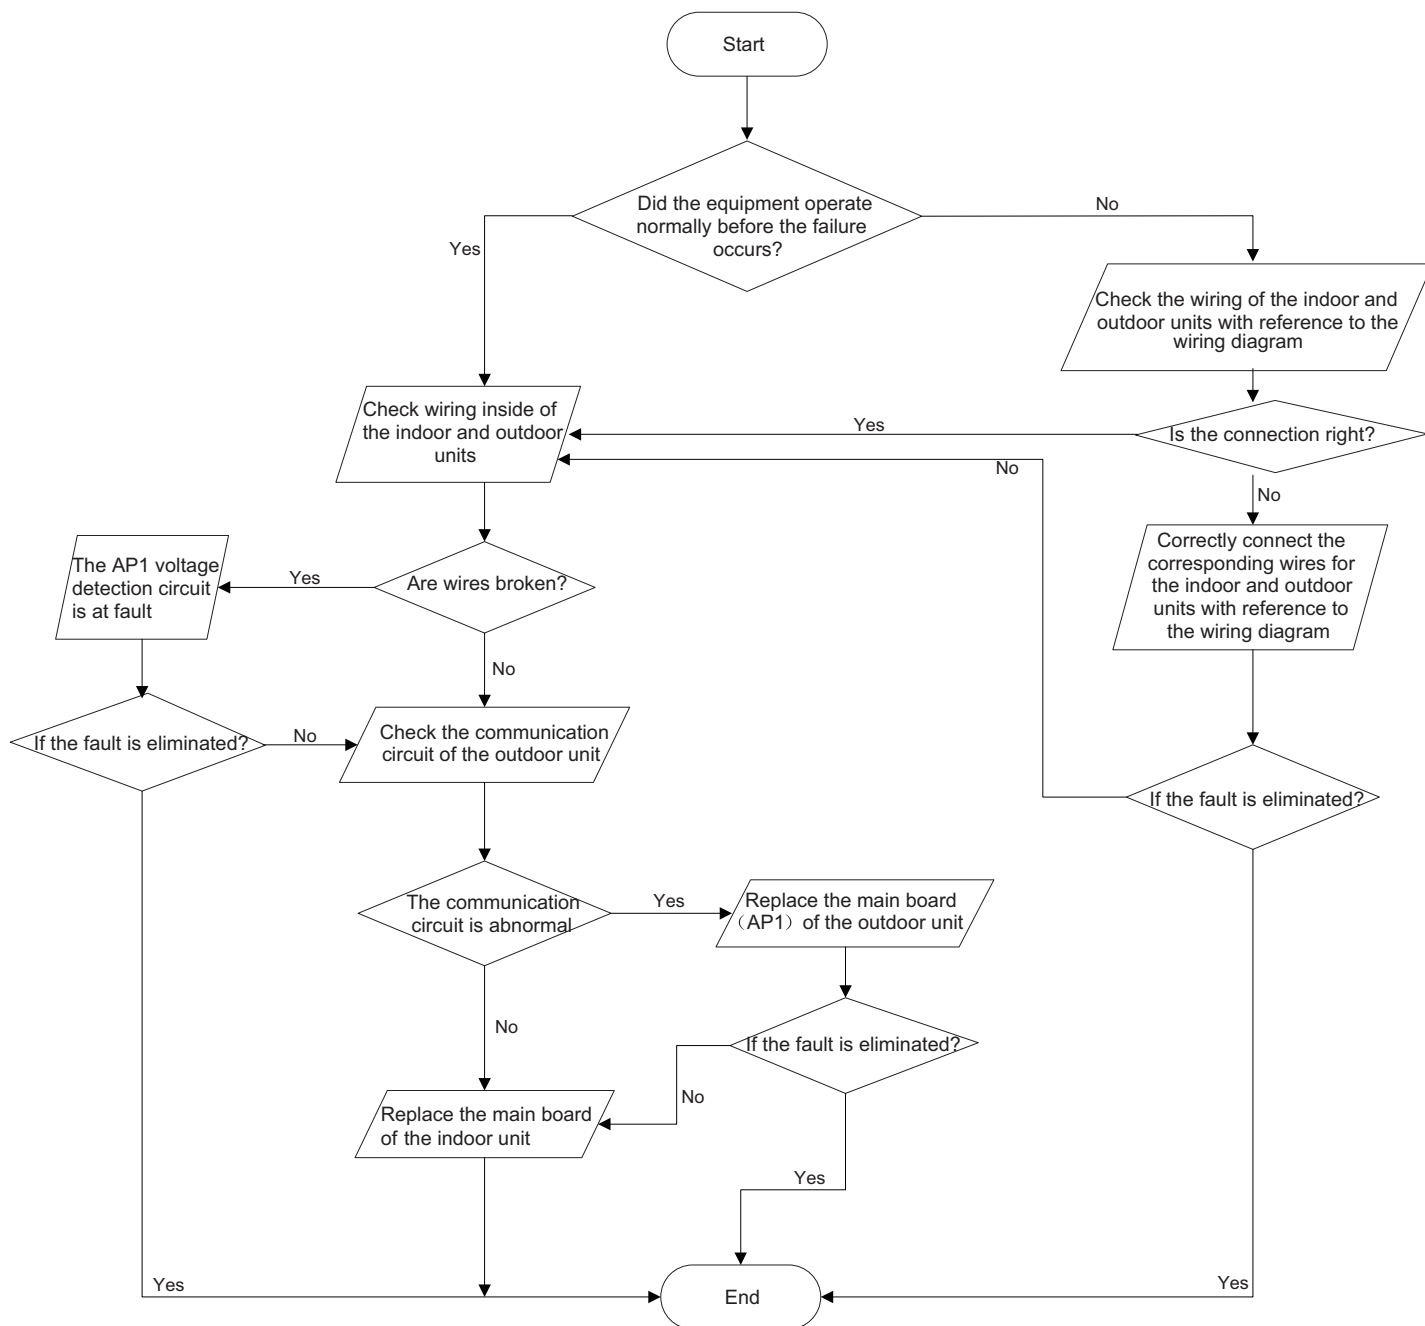


**(8) Malfunction of Overcurrent Protection**

Main detection points:

- Is the supply voltage unstable with big fluctuation?
- Is the supply voltage too low with overload?
- Hardware trouble?

Malfunction diagnosis process:

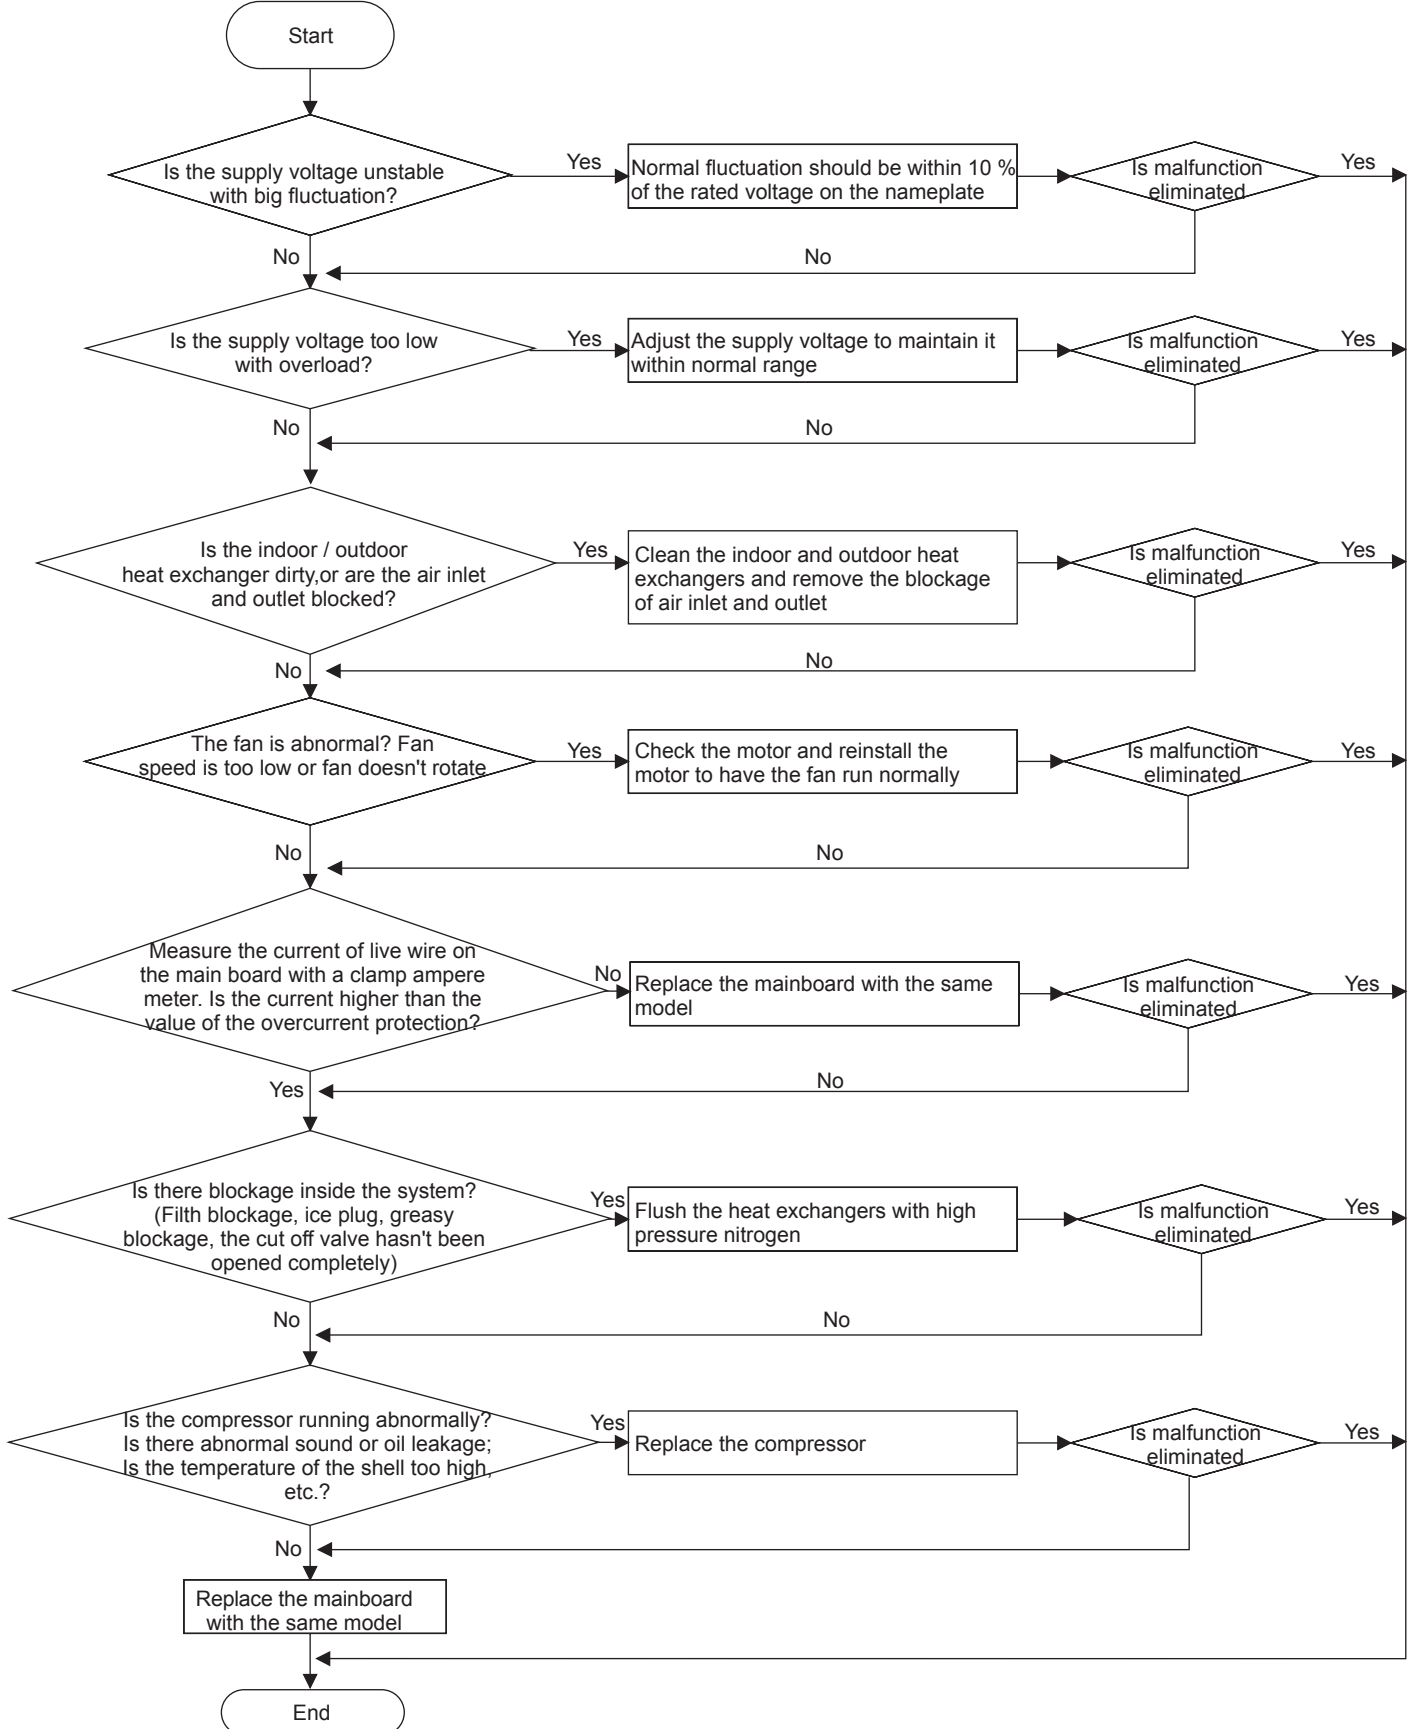



## 9.3 Troubleshooting for Normal Malfunction

### 1. Air Conditioner Can't be Started Up

Possible Causes	Discriminating Method (Air conditioner Status)	Troubleshooting
No power supply, or poor connection for power plug	After energization, operation indicator isn't bright and the buzzer can't give out sound	Confirm whether its due to power failure. If yes, wait for power recovery. If not, check power supply circuit and make sure the power plug is connected well.
Wrong wire connection between indoor unit and outdoor unit, or poor connection for wiring terminals	Under normal power supply circumstances, operation indicator isn't bright after energization	Check the circuit according to circuit diagram and connect wires correctly. Make sure all wiring terminals are connected firmly
Electric leakage for air conditioner	After energization, room circuit breaker trips off at once	Make sure the air conditioner is grounded reliably Make sure wires of air conditioner is connected correctly Check the wiring inside air conditioner. Check whether the insulation layer of power cord is damaged; if yes, place the power cord.
Model selection for air switch is improper	After energization, air switch trips off	Select proper air switch
Malfunction of remote controller	After energization, operation indicator is bright, while no display on remote controller or buttons have no action.	Replace batteries for remote controller Repair or replace remote controller

### 2. Poor Cooling (Heating) for Air Conditioner

Possible Causes	Discriminating Method (Air conditioner Status)	Troubleshooting
Set temperature is improper	Observe the set temperature on remote controller	Adjust the set temperature
Rotation speed of the IDU fan motor is set too low	Small wind blow	Set the fan speed at high or medium
Filter of indoor unit is blocked	Check the filter to see its blocked	Clean the filter
Installation position for indoor unit and outdoor unit is improper	Check whether the installation position is proper according to installation requirement for air conditioner	Adjust the installation position, and install the rainproof and sunproof for outdoor unit
Refrigerant is leaking	Discharged air temperature during cooling is higher than normal discharged wind temperature; Discharged air temperature during heating is lower than normal discharged wind temperature; Units pressure is much lower than regulated range	Find out the leakage causes and deal with it. Add refrigerant.
Malfunction of 4-way valve	Blow cold wind during heating	Replace the 4-way valve
Malfunction of capillary	Discharged air temperature during cooling is higher than normal discharged wind temperature; Discharged air temperature during heating is lower than normal discharged wind temperature; Unit pressure is much lower than regulated range. If refrigerant isn't leaking, part of capillary is blocked	Replace the capillary
Flow volume of valve is insufficient	The pressure of valves is much lower than that stated in the specification	Open the valve completely
Malfunction of horizontal louver	Horizontal louver can't swing	Refer to point 3 of maintenance method for details
Malfunction of the IDU fan motor	The IDU fan motor can't operate	Refer to troubleshooting for H6 for maintenance method in details
Malfunction of the ODU fan motor	The ODU fan motor can't operate	Refer to point 4 of maintenance method for details
Malfunction of compressor	Compressor can't operate	Refer to point 5 of maintenance method for details

### 3. Horizontal Louver Can't Swing

Possible Causes	Discriminating Method (Air conditioner Status)	Troubleshooting
Wrong wire connection, or poor connection	Check the wiring status according to circuit diagram	Connect wires according to wiring diagram to make sure all wiring terminals are connected firmly
Stepping motor is damaged	Stepping motor can't operate	Repair or replace stepping motor
Main board is damaged	Others are all normal, while horizontal louver can't operate	Replace the main board with the same model

**4. ODU Fan Motor Can't Operate**

Possible causes	Discriminating method (air conditioner status)	Troubleshooting
Wrong wire connection, or poor connection	Check the wiring status according to circuit diagram	Connect wires according to wiring diagram to make sure all wiring terminals are connected firmly
Capacity of the ODU fan motor is damaged	Measure the capacity of fan capacitor with an universal meter and find that the capacity is out of the deviation range indicated on the nameplate of fan capacitor.	Replace the capacity of fan
Power voltage is a little low or high	Use universal meter to measure the power supply voltage. The voltage is a little high or low	Suggest to equip with voltage regulator
Motor of outdoor unit is damaged	When unit is on, cooling/heating performance is bad and ODU compressor generates a lot of noise and heat.	Change compressor oil and refrigerant. If no better, replace the compressor with a new one

**5. Compressor Can't Operate**

Possible causes	Discriminating method (air conditioner status)	Troubleshooting
Wrong wire connection, or poor connection	Check the wiring status according to circuit diagram	Connect wires according to wiring diagram to make sure all wiring terminals are connected firmly
Capacity of compressor is damaged	Measure the capacity of fan capacitor with an universal meter and find that the capacity is out of the deviation range indicated on the nameplate of fan capacitor.	Replace the compressor capacitor
Power voltage is a little low or high	Use universal meter to measure the power supply voltage. The voltage is a little high or low	Suggest to equip with voltage regulator
Coil of compressor is burnt out	Use universal meter to measure the resistance between compressor terminals and its 0	Repair or replace compressor
Cylinder of compressor is blocked	Compressor can't operate	Repair or replace compressor

**6. Air Conditioner is Leaking**

Possible causes	Discriminating method (air conditioner status)	Troubleshooting
Drain pipe is blocked	Water leaking from indoor unit	Eliminate the foreign objects inside the drain pipe
Drain pipe is broken	Water leaking from drain pipe	Replace drain pipe
Wrapping is not tight	Water leaking from the pipe connection place of indoor unit	Wrap it again and bundle it tightly


**7. Abnormal Sound and Vibration**

Possible causes	Discriminating method (air conditioner status)	Troubleshooting
When turn on or turn off the unit, the panel and other parts will expand and there's abnormal sound	There's the sound of "PAPA"	Normal phenomenon. Abnormal sound will disappear after a few minutes.
When turn on or turn off the unit, there's abnormal sound due to flow of refrigerant inside air conditioner	Water-running sound can be heard	Normal phenomenon. Abnormal sound will disappear after a few minutes.
Foreign objects inside the indoor unit or there're parts touching together inside the indoor unit	There's abnormal sound fro indoor unit	Remove foreign objects. Adjust all parts position of indoor unit, tighten screws and stick damping plaster between connected parts
Foreign objects inside the outdoor unit or there're parts touching together inside the outdoor unit	There's abnormal sound fro outdoor unit	Remove foreign objects. Adjust all parts position of outdoor unit, tighten screws and stick damping plaster between connected parts
Short circuit inside the magnetic coil	During heating, the way valve has abnormal electromagnetic sound	Replace magnetic coil
Abnormal shake of compressor	Outdoor unit gives out abnormal sound	Adjust the support foot mat of compressor, tighten the bolts
Abnormal sound inside the compressor	Abnormal sound inside the compressor	If add too much refrigerant during maintenance, please reduce refrigerant properly. Replace compressor for other circumstances.

# 10. Exploded View and Parts List

## 10.1 Indoor Unit

09/12K Unit

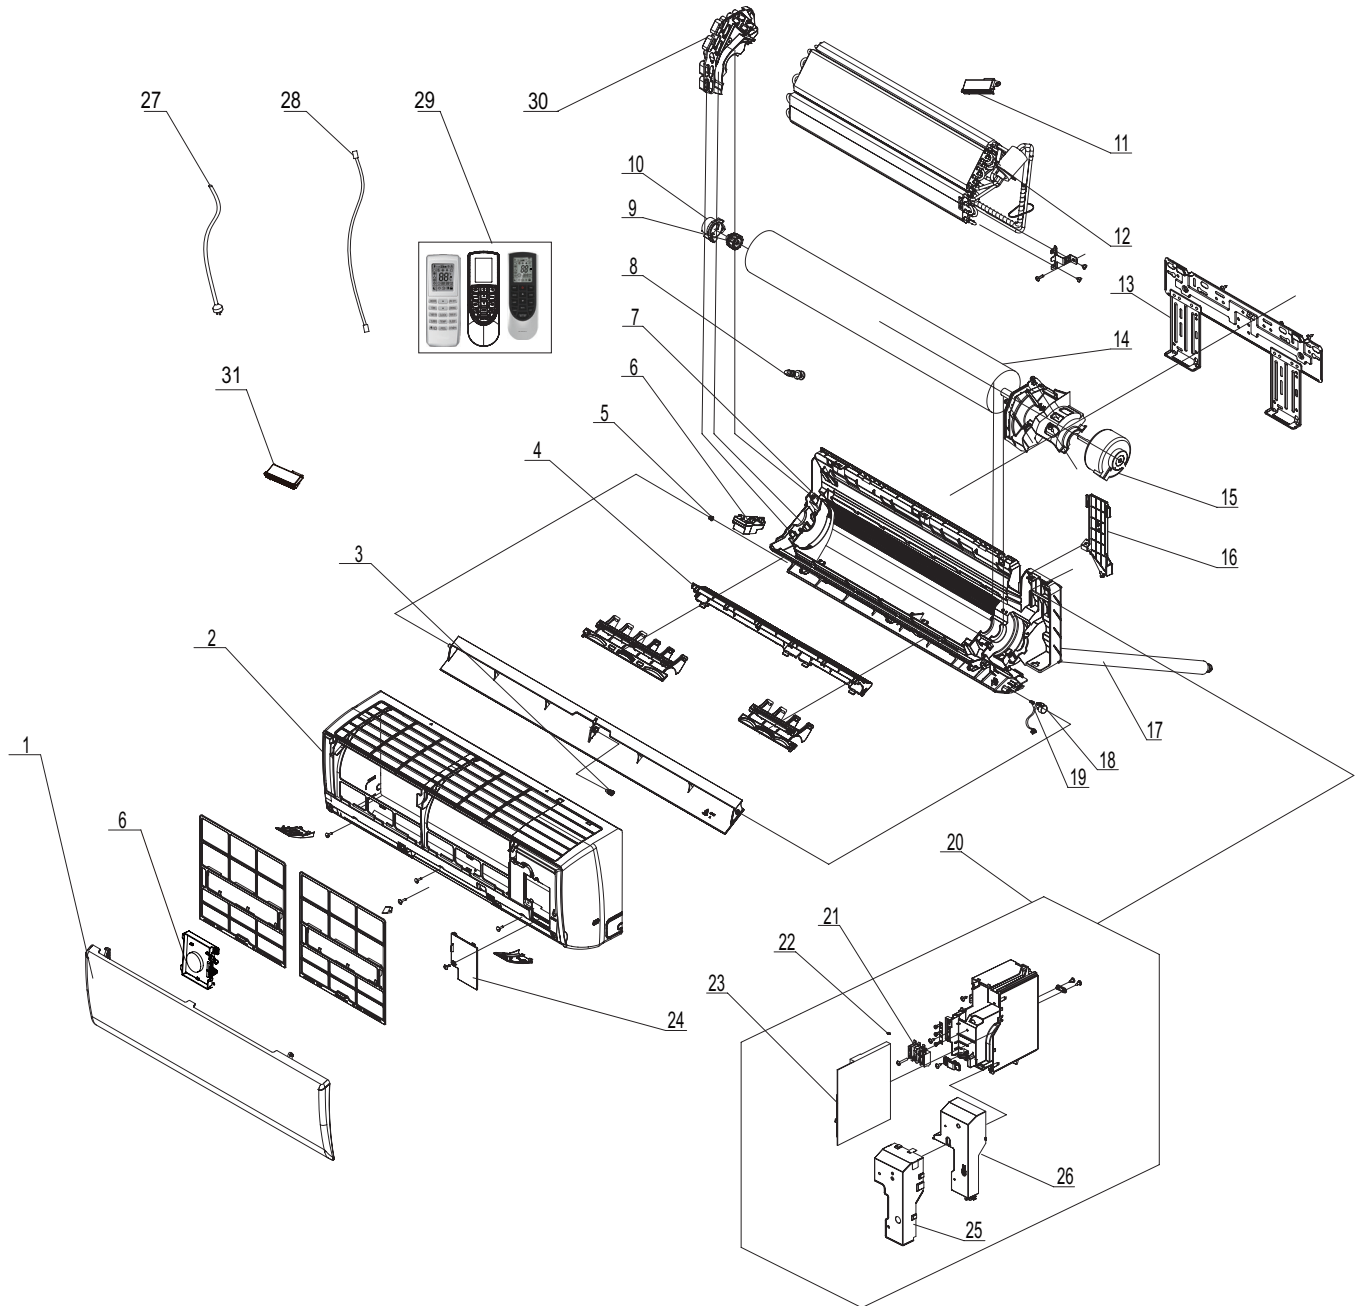

The component picture is only for reference please refer to the actual product.

No.	Description	Part Code			Qty
		KW09HQ1B8AI	KW12HQ1B8AI	KW09HQ3B8AI	
		Product Code	CB438N03702_L74316	CB438N03902_L74316	
1	Front Panel	27230009463	27230009464	27230009463	1
2	Front Case	2002248001	27230009468	2002248001	1
3	Axile Bush	10542036	10542036	10542036	1
4	Helicoid Tongue	26112508	26112436	26112508	1
5	Left Axile Bush	10512037	10512037	10512037	1
6	Display Board	30565260	30565260	30565260	1
7	Rear Case assy	00000100066	00000100093	00000100066	1
8	Rubber Plug (Water Tray)	76712012	76712012	76712012	1
9	O-Gasket sub-assy of Bearing	76512051	76512051	76512051	1
10	Ring of Bearing	26152022	26152022	26152022	1
11	Cold Plasma Generator	/	/	/	/
12	Evaporator Assy	0100200004407	0100297601	0100200004407	1
13	Wall Mounting Frame	01252043	01252484	01252043	1
14	Cross Flow Fan	10352059	10352056	10352059	1
15	Fan Motor	1501208902	1501214605	1501208902	1
16	Connecting pipe clamp	2611216401	2611216401	2611216401	1
17	Drainage Hose	0523001408	05230014	0523001408	1
18	Stepping Motor	1521212901	1521210710	1521212901	1
19	Crank	73012005	73012005	73012005	1
20	Electric Box Assy	100002001620	100002001623	100002001620	1
21	Terminal Board	42011233	42011233	42011233	1
22	Jumper	4202021911	4202021917	4202021911	1
23	Main Board	300002000307	300002000307	300002000307	1
24	Electric Box Cover Sub-Assy	0140206501	0140206501	0140206501	1
25	Shield Cover of Electric Box Cover	01592150	01592150	01592150	1
26	Electric Box Cover	2011220701	2011220701	2011220701	1
27	Power Cord	/	/	/	/
28	Connecting Cable	/	/	/	/
29	Evaporator Support	24212180	24212179	24212180	1
30	Remote Controller	30510475_L74316	30510475_L74316	30510475_L74316	1
31	Detecting plate(WIFI)	/	/	/	/

Above data is subject to change without notice.

No.	Description	Part Code			Qty
		KW12HQ3B8AI	KW09HQ2B8AI	KW12HQ2B8AI	
Product Code		CB438N08200_L74316	CB438N02601_L74316	CB438N02901_L74316	
1	Front Panel	27230009464	27230009464	27230009464	1
2	Front Case	27230009468	27230009468	27230009468	1
3	Axile Bush	10542036	10542036	10542036	1
4	Helicoid Tongue	26112436	26112436	26112436	1
5	Left Axile Bush	10512037	10512037	10512037	1
6	Display Board	30565260	30565260	30565260	1
7	Rear Case assy	00000100093	00000100093	00000100093	1
8	Rubber Plug (Water Tray)	76712012	76712012	76712012	1
9	O-Gasket sub-assy of Bearing	76512051	76512051	76512051	1
10	Ring of Bearing	26152022	26152022	26152022	1
11	Cold Plasma Generator	/	/	/	/
12	Evaporator Assy	0100297601	01002000030	0100200003001	1
13	Wall Mounting Frame	01252484	01252484	01252484	1
14	Cross Flow Fan	10352056	10352056	10352056	1
15	Fan Motor	1501214605	15012153	15012153	1
16	Connecting pipe clamp	2611216401	2611216401	2611216401	1
17	Drainage Hose	05230014	05230014	05230014	1
18	Stepping Motor	1521210710	1521210710	1521210710	1
19	Crank	73012005	73012005	73012005	1
20	Electric Box Assy	100002001623	100002002094	100002002078	1
21	Terminal Board	42011233	42011233	42011233	1
22	Jumper	4202021917	4202021909	4202021920	1
23	Main Board	300002000307	30138001018	30138001018	1
24	Electric Box Cover Sub-Assy	0140206501	0140206501	0140206501	1
25	Shield Cover of Electric Box Cover	01592150	01592150	01592150	1
26	Electric Box Cover	2011220701	2011220701	2011220701	1
27	Power Cord	/	/	/	/
28	Connecting Cable	/	/	/	/
29	Evaporator Support	24212179	24212174	24212174	1
30	Remote Controller	30510475_L74316	30510475_L74316	30510475_L74316	1
31	Detecting plate(WIFI)	/	/	/	/

Above data is subject to change without notice.

No.	Description	Part Code			Qty
		KW09CQ2B8AI	KW12CQ2B8AI	KW09CQ2B8DI	
		Product Code	CB438N02500_L74316	CB438N02800_L74316	
1	Front Panel	20000300074T	20000300074T	20000300074T	1
2	Front Case	2002247401	2002247401	2002247401	1
3	Axile Bush	10542036	10542036	10542036	1
4	Helicoid Tongue	26112436	26112436	26112436	1
5	Left Axile Bush	10512037	10512037	10512037	1
6	Display Board	30565260	30565260	30565260	1
7	Rear Case assy	00000100093	00000100093	00000100093	1
8	Rubber Plug (Water Tray)	76712012	76712012	76712012	1
9	O-Gasket sub-assy of Bearing	76512051	76512051	76512051	1
10	Ring of Bearing	26152022	26152022	26152022	1
11	Cold Plasma Generator	/	/	/	/
12	Evaporator Assy	01002000030	01002695	01002000030	1
13	Wall Mounting Frame	01252484	01252484	01252484	1
14	Cross Flow Fan	10352056	10352056	10352056	1
15	Fan Motor	15012153	15012153	150104060029	1
16	Connecting pipe clamp	2611216401	2611216401	2611216401	1
17	Drainage Hose	05230014	05230014	05230014	1
18	Stepping Motor	1521210710	1521210710	1521210710	1
19	Crank	73012005	73012005	73012005	1
20	Electric Box Assy	10000201781	10000201784	10000201781	1
21	Terminal Board	42011233	42011233	42011233	1
22	Jumper	4202021909	4202021920	4202021909	1
23	Main Board	30138000317	30138000317	30138000317	1
24	Electric Box Cover Sub-Assy	0140206501	0140206501	0140206501	1
25	Shield Cover of Electric Box Cover	01592150	01592150	01592150	1
26	Electric Box Cover	2011220701	2011220701	2011220701	1
27	Power Cord	/	/	/	/
28	Connecting Cable	/	/	/	/
29	Evaporator Support	24212174	24212174	24212174	1
30	Remote Controller	30510475_L74316	30510475_L74316	30510475_L74316	1
31	Detecting plate(WIFI)	/	/	/	/

Above data is subject to change without notice.

No.	Description	Part Code			Qty
		KW12CQ2B8DI	KW09HQ1B8DI	KW12HQ1B8DI	
	Product Code	CB438N00200_L74316	CB438N03602_L74316	CB438N01402_L74316	
1	Front Panel	20000300074T	27230009463	27230009464	1
2	Front Case	2002247401	2002248001	27230009468	1
3	Axile Bush	10542036	10542036	10542036	1
4	Helicoid Tongue	26112436	26112508	26112436	1
5	Left Axile Bush	10512037	10512037	10512037	1
6	Display Board	30565260	30565260	30565260	1
7	Rear Case assy	00000100093	00000100066	00000100093	1
8	Rubber Plug (Water Tray)	76712012	76712012	76712012	1
9	O-Gasket sub-assy of Bearing	76512051	76512051	76512051	1
10	Ring of Bearing	26152022	26152022	26152022	1
11	Cold Plasma Generator	/	/	/	/
12	Evaporator Assy	0100200003001	0100200004407	0100297601	1
13	Wall Mounting Frame	01252484	01252043	01252484	1
14	Cross Flow Fan	10352056	10352059	10352056	1
15	Fan Motor	150104060029	1501208905	1501214607	1
16	Connecting pipe clamp	2611216401	2611216401	2611216401	1
17	Drainage Hose	05230014	0523001408	05230014	1
18	Stepping Motor	1521210710	1521212901	1521210710	1
19	Crank	73012005	73012005	73012005	1
20	Electric Box Assy	10000201784	10000203822	10000204740	1
21	Terminal Board	42011233	42011233	42011233	1
22	Jumper	4202021920	4202021911	4202021917	1
23	Main Board	30138000317	300002000309	300002000315	1
24	Electric Box Cover Sub-Assy	0140206501	0140206501	0140206501	1
25	Shield Cover of Electric Box Cover	01592150	01592150	01592150	1
26	Electric Box Cover	2011220701	2011220701	2011220701	1
27	Power Cord	/	/	/	/
28	Connecting Cable	/	/	/	/
29	Evaporator Support	24212174	24212180	24212179	1
30	Remote Controller	30510475_L74316	30510475_L74316	30510475_L74316	1
31	Detecting plate(WIFI)	/	/	/	/

Above data is subject to change without notice.

No.	Description	Part Code			Qty
		KW12CQ1B8DI	KW09HQ3B8DI	KW12HQ3B8DI	
	Product Code	CB438N01601_L74316	CB438N08100_L74316	CB438N08300_L74316	
1	Front Panel	20000300074T	27230009463	27230009464	1
2	Front Case	2002247401	2002248001	27230009468	1
3	Axile Bush	10542036	10542036	10542036	1
4	Helicoid Tongue	26112436	26112508	26112436	1
5	Left Axile Bush	10512037	10512037	10512037	1
6	Display Board	30565260	30565260	30565260	1
7	Rear Case assy	00000100093	00000100066	00000100093	1
8	Rubber Plug (Water Tray)	76712012	76712012	76712012	1
9	O-Gasket sub-assy of Bearing	76512051	76512051	76512051	1
10	Ring of Bearing	26152022	26152022	26152022	1
11	Cold Plasma Generator	/	/	/	/
12	Evaporator Assy	0100297601	010020004407	0100297601	1
13	Wall Mounting Frame	01252484	01252043	01252484	1
14	Cross Flow Fan	10352056	10352059	10352056	1
15	Fan Motor	1501214607	1501208905	1501214607	1
16	Connecting pipe clamp	2611216401	2611216401	2611216401	1
17	Drainage Hose	05230014	0523001408	05230014	1
18	Stepping Motor	1521210710	1521212901	1521210710	1
19	Crank	73012005	73012005	73012005	1
20	Electric Box Assy	10000204778	10000203822	10000204740	1
21	Terminal Board	42011233	42011233	42011233	1
22	Jumper	4202021917	4202021911	4202021917	1
23	Main Board	300002000311	300002000309	300002000315	1
24	Electric Box Cover Sub-Assy	0140206501	0140206501	0140206501	1
25	Shield Cover of Electric Box Cover	01592150	01592150	01592150	1
26	Electric Box Cover	2011220701	2011220701	2011220701	1
27	Power Cord	/	/	/	/
28	Connecting Cable	/	/	/	/
29	Evaporator Support	24212179	24212180	24212179	1
30	Remote Controller	305001000085	30510475_L74316	30510475_L74316	1
31	Detecting plate(WIFI)	30070077	/	/	1

Above data is subject to change without notice.



No.	Description	Part Code		Qty
		KW09HQ2B8DI	KW12HQ2B8DI	
		Product Code	Product Code	
1	Front Panel	27230009464	27230009464	1
2	Front Case	27230009468	27230009468	1
3	Axile Bush	10542036	10542036	1
4	Helicoid Tongue	26112436	26112436	1
5	Left Axile Bush	10512037	10512037	1
6	Display Board	30565260	30565260	1
7	Rear Case assy	00000100093	00000100093	1
8	Rubber Plug (Water Tray)	76712012	76712012	1
9	O-Gasket sub-assy of Bearing	76512051	76512051	1
10	Ring of Bearing	26152022	26152022	1
11	Cold Plasma Generator	/	/	/
12	Evaporator Assy	01002000030	0100200003001	1
13	Wall Mounting Frame	01252484	01252484	1
14	Cross Flow Fan	10352056	10352056	1
15	Fan Motor	150104060029	150104060029	1
16	Connecting pipe clamp	2611216401	2611216401	1
17	Drainage Hose	05230014	05230014	1
18	Stepping Motor	1521210710	1521210710	1
19	Crank	73012005	73012005	1
20	Electric Box Assy	100002002094	100002002078	1
21	Terminal Board	42011233	42011233	1
22	Jumper	4202021909	4202021920	1
23	Main Board	30138001018	30138001018	1
24	Electric Box Cover Sub-Assy	0140206501	0140206501	1
25	Shield Cover of Electric Box Cover	01592150	01592150	1
26	Electric Box Cover	2011220701	2011220701	1
27	Power Cord	/	/	/
28	Connecting Cable	/	/	/
29	Evaporator Support	24212174	24212174	1
30	Remote Controller	30510475_L74316	30510475_L74316	1
31	Detecting plate(WIFI)	/	/	/

Above data is subject to change without notice.




NO.	Description	Part Code			Qty
		KW18HQ1B8DI	KW18CQ1B8DI	KW18HQ3B8DI	
	Product Code	CB438N01502_L74316	CB438N01901_L74316	CB438N07800_L74316	
1	Front Panel	27230009465	20000300075T	27230009465	1
2	Filter Sub-Assy	11122089	11122089	11122089	2
3	Decoration board(left and right)	20192662	20192662	20192662	1
4	Front Case	2002248401	2002248401	2002248401	1
5	Guide Louver	1051276501	1051276501	1051276501	1
6	Axile Bush	10542036	10542036	10542036	2
7	Air Louver(Manual)	10512732	10512732	10512732	3
8	Helicoid Tongue	26112512	26112512	26112512	1
9	Left Axile Bush	10512037	10512037	10512037	1
10	Display Board	30565260	30565260	30565260	1
11	Rear Case assy	22202571	22202571	22202571	1
12	Rubber Plug (Water Tray)	76712012	76712012	76712012	1
13	O-Gasket sub-assy of Bearing	76512051	76512051	76512051	1
14	O-Gasket of Cross Fan Bearing	76512203	76512203	76512203	1
15	Evaporator Support	24212177	24212177	24212177	1
16	Evaporator Assy	0100200001401	0100200001401	011001000207	1
17	Cross Flow Fan	10352060	10352060	10352060	1
18	Fan Motor	1501214503	1501214503	1501214503	1
19	Motor Press Plate	26112511	26112511	26112511	1
20	Wall Mounting Frame	01362026	01362026	01362026	1
21	Connecting pipe clamp	2611218801	2611218801	2611218801	1
22	Crank	73012005	73012005	73012005	1
23	Stepping Motor	1521240212	1521240212	1521240212	1
24	Drainage Hose	05230014	05230014	05230014	1
25	Electric Box Assy	10000204786	10000204819	10000204786	1
26	Lower Shield of Electric Box	01592139	01592139	01592139	1
27	Electric Box	2011221105	2011221105	2011221105	1
28	Jumper	4202021919	4202021919	4202021919	1
29	Main Board	300002000312	300002000313	300002000312	1
30	Terminal Board	42011233	42011233	42011233	1
31	Electric Box Cover	2011220901	2011220901	2011220901	1
32	Shield Cover of Electric Box	01592139	01592139	01592139	1
33	Screw Cover	2425201726	2425201726	2425201726	3
34	Electric Box Cover2	2011221001	2011221001	2011221001	1
35	Power Cord	/	/	/	/
36	Connecting Cable	/	/	/	/
37	Remote Controller	30510475_L74316	305001000085	30510475_L74316	1
38	Cold Plasma Generator	/	/	/	/
39	Detecting plate(WIFI)	/	30070077	/	1

Above data is subject to change without notice.

NO.	Description	Part Code		Qty
		KW18CQ2B8DI	KW18HQ2B8DI	
	Product Code	CB438N10000_L74316	CB438N06400_L74316	
1	Front Panel	20000300075T	27230009465	1
2	Filter Sub-Assy	1112208906	1112208904	2
3	Decoration board(left and right)	20192662	20192662	1
4	Front Case	2002248401	2002248401	1
5	Guide Louver	1051276501	1051276501	1
6	Axile Bush	10542036	10542036	2
7	Air Louver(Manual)	10512732	10512732	3
8	Helicoid Tongue	26112512	26112512	1
9	Left Axile Bush	10512037	10512037	1
10	Display Board	30565260	30565260	1
11	Rear Case assy	22202571	22202571	1
12	Rubber Plug (Water Tray)	76712012	76712012	1
13	O-Gasket sub-assy of Bearing	76512051	76512051	1
14	O-Gasket of Cross Fan Bearing	76512203	76512203	1
15	Evaporator Support	24212177	24212177	1
16	Evaporator Assy	01100100085	01100100085	1
17	Cross Flow Fan	10352060	10352060	1
18	Fan Motor	15012136	15012136	1
19	Motor Press Plate	26112511	26112511	1
20	Wall Mounting Frame	01362026	01362026	1
21	Connecting pipe clamp	2611218801	2611218801	1
22	Crank	73012005	73012005	1
23	Stepping Motor	1521240212	1521240212	1
24	Drainage Hose	05230014	05230014	1
25	Electric Box Assy	100002062264	10000203680	1
26	Lower Shield of Electric Box	01592139	01592139	1
27	Electric Box	2011221105	2011221105	1
28	Jumper	4202021924	4202021924	1
29	Main Board	30138001021	30138001018	1
30	Terminal Board	42011233	42011233	1
31	Electric Box Cover	2011220901	2011220901	1
32	Shield Cover of Electric Box	01592139	01592139	1
33	Screw Cover	2425201726	2425201726	3
34	Electric Box Cover2	2011221001	2011221001	1
35	Power Cord	/	/	/
36	Connecting Cable	/	/	/
37	Remote Controller	30500100085	30510475_L74316	1
38	Cold Plasma Generator	/	/	/
39	Detecting plate(WIFI)	30070077	/	1

Above data is subject to change without notice.

24K Unit

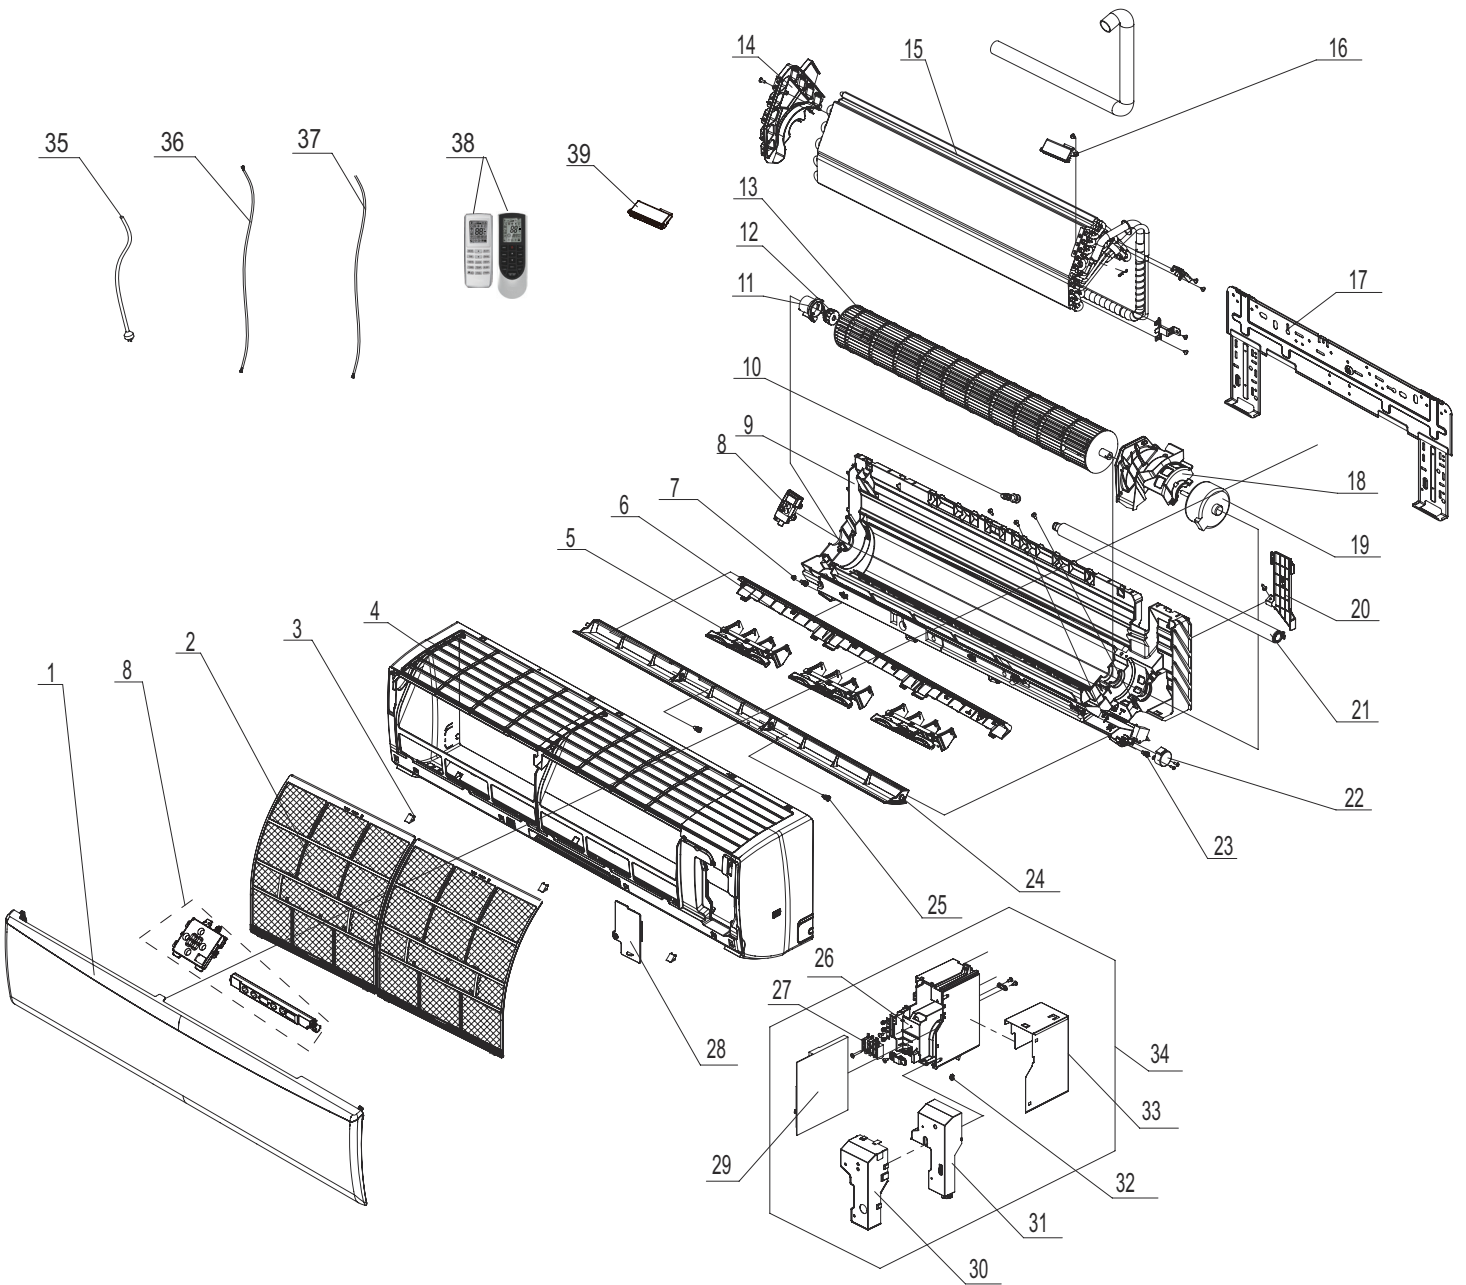

The component picture is only for reference; please refer to the actual product.

No.	Description	Part Code			Qty
		KW24HQ1B8DI	KW24CQ1B8DI	KW24HQ3B8DI	
	Product Code	CB438N01802_L74316	CB438N01701_L74316	CB438N07900_L74316	
1	Front Panel	27230009466	20000300076S	27230009466	1
2	Filter Sub-Assy	11012007	11012007	11012007	2
3	Screw Cover	2425245301	2425245301	2425245301	3
4	Front Case	2002248603	2002248603	2002248603	1
5	Air Louver(Manual)	10512737	10512737	10512737	3
6	Helicoid Tongue	26112513	26112513	26112513	1
7	Left Axile Bush	10512037	10512037	10512037	1
8	Display Board	30565260	30565260	30565260	1
9	Rear Case assy	22202570	22202570	22202570	1
10	Rubber Plug (Water Tray)	76712012	76712012	76712012	1
11	Ring of Bearing	26152025	26152025	26152025	1
12	O-Gasket sub-assy of Bearing	76512051	76512051	76512051	1
13	Cross Flow Fan	10352057	10352057	10352057	1
14	Evaporator Support	24212178	24212178	24212178	1
15	Evaporator Assy	01100100029	01100100029	011001000095	1
16	Cold Plasma Generator	/	/	/	/
17	Wall Mounting Frame	01252229	01252229	01252229	1
18	Motor Press Plate	26112515	26112515	26112515	1
19	Fan Motor	1501214501	1501214501	1501214501	1
20	Connecting pipe clamp	26112514	26112514	26112514	1
21	Drainage Hose	0523001405	0523001405	0523001405	1
22	Stepping Motor	1521240212	1521240212	1521240212	1
23	Crank	73012005	73012005	73012005	1
24	Guide Louver	1051232001	1051232001	1051232001	1
25	Axile Bush	10542036	10542036	10542036	2
26	Electric Box	2011221105	2011221105	2011221105	1
27	Terminal Board	42011233	42011233	42011233	1
28	Electric Box Cover2	2011221001	2011221001	2011221001	1
29	Main Board	300002000316	300002000314	300002000316	1
30	Shield Cover of Electric Box	01592139	01592139	01592139	1
31	Electric Box Cover	2011220901	2011220901	2011220901	1
32	Jumper	4202021926	4202021926	4202021924	1
33	Lower Shield of Electric Box	01592139	01592139	01592139	1
34	Electric Box Assy	10000204970	100002000829	100002001787	1
35	Power Cord	/	/	/	/
36	Connecting Cable	/	/	/	/
37	Temperature Sensor	3900031302	3900031302	3900031302	1
38	Remote Controller	30510475_L74316	305001000085	30510475_L74316	1
39	Detecting plate(WIFI)	/	30070077	/	1

Above data is subject to change without notice.

No.	Description	Part Code		Qty
		KW24HQ2B8DI	KW24CQ2B8DI	
		Product Code	Product Code	
		CB438N02401_L74316	CB438N08600_L74316	
1	Front Panel	27230009466	20000300076	1
2	Filter Sub-Assy	11012007	11012007	2
3	Screw Cover	2425245301	2425245301	3
4	Front Case	2002248603	2002248603	1
5	Air Louver(Manual)	10512737	10512737	3
6	Helicoid Tongue	26112513	26112513	1
7	Left Axile Bush	10512037	10512037	1
8	Display Board	30565260	30565260	1
9	Rear Case assy	22202570	22202570	1
10	Rubber Plug (Water Tray)	76712012	76712012	1
11	Ring of Bearing	26152025	26152025	1
12	O-Gasket sub-assy of Bearing	76512051	76512051	1
13	Cross Flow Fan	10352057	10352057	1
14	Evaporator Support	24212178	24212178	1
15	Evaporator Assy	01100100029	01100100029	1
16	Cold Plasma Generator	/	/	/
17	Wall Mounting Frame	01252229	01252229	1
18	Motor Press Plate	26112515	26112515	1
19	Fan Motor	15012136	15012136	1
20	Connecting pipe clamp	26112514	26112514	1
21	Drainage Hose	0523001405	0523001405	1
22	Stepping Motor	1521240212	1521240212	1
23	Crank	73012005	73012005	1
24	Guide Louver	1051232001	1051232001	1
25	Axile Bush	10542036	10542036	2
26	Electric Box	2011221105	2011221105	1
27	Terminal Board	42011233	42011233	1
28	Electric Box Cover2	2011221001	2011221001	1
29	Main Board	30138001018	30138001021	1
30	Shield Cover of Electric Box	01592139	01592139	1
31	Electric Box Cover	2011220901	2011220901	1
32	Jumper	4202021926	4202021926	1
33	Lower Shield of Electric Box	01592139	01592139	1
34	Electric Box Assy	10000203513	100002060491	1
35	Power Cord	/	/	/
36	Connecting Cable	/	/	/
37	Temperature Sensor	3900031302	3900031302	1
38	Remote Controller	30510113_L74316	305001000085	1
39	Detecting plate(WIFI)	/	30070077	1

Above data is subject to change without notice.






NO.	Description	Part Code		Qty
		KW09CQ2B8AO	KW12CQ2B8AO	
		Product Code CB419W03800_L74316	CB419W04000_L74316	
1	Front Grill	01473012	01473012	1
2	Cabinet	0143305801P	0153501604	1
3	Axial Flow Fan	10333004	10333004	1
4	Fan Motor	1501308507	1501308507	1
5	Chassis Sub-assy	0120388102P	0120388102P	1
6	Compressor Gasket	76710302	76710302	3
7	Electrical Heater(Compressor)	76510009	76510009	1
8	Compressor and fittings	00103862	00103862	1
9	Electric Expansion Valve Sub-Assy	/	/	/
10	Valve cover	2012300101	22243010	1
11	Valve	07130239	07130239	1
12	Valve	07100005	07100006	1
13	Valve Support	01713041	01713041	1
14	Cable Cross Plate sub-assy	02123015	02123015	1
15	Right Side Plate Assy	013030713	00013000001002	1
16	Cover of pass wire	01413069	02123021	1
17	Magnet Coil	07200200001202	4300876704	1
18	Discharge Tube	03001300137	03001300138	1
19	Inhalation Tube	03001000151	03001000152	1
20	Compressor Overload Protector(External)	00183032	00183032	1
21	Temperature Sensor	3900030903	39000310	1
22	Rear Grill	01473057	01475014	1
23	Condenser Assy	0110020018901	011002000139	1
24	Clapboard Sub-Assy	01233034	0123309001	1
25	Top Cover Plate	0125310703P	0125310703P	1
26	Motor suport spot welding sub-assy	0170310201	01703114	1
27	Cover of Reactor box	01403767	01403767	1
28	Reactor	/	/	/
29	Electric Box Cover Sub-Assy	0260309601	0260309601	1
30	Main Board	30138000524	30138000546	1
31	Electric Box Assy	100002061834	100002061847	1
32	Terminal Board	422000060016	422000060016	1

Above data is subject to change without notice.

NO.	Description	Part Code		Qty
		KW09CQ2B8DO	KW12CQ2B8DO	
		Product Code	Product Code	
		CB419W04200_L74316	CB419W04400_L74316	
1	Front Grill	01473012	01473012	1
2	Cabinet	0143305801P	0153501201	1
3	Axial Flow Fan	10333004	10333004	1
4	Fan Motor	1501308505	1501308505	1
5	Chassis Sub-assy	0120380601P	0120380601P	1
6	Compressor Gasket	76713027	76713027	3
7	Electrical Heater(Compressor)	76513004	76513004	1
8	Compressor and fittings	00103892	00103892	1
9	Electric Expansion Valve Sub-Assy	07133769	07130369	1
10	Valve cover	2012300101	22243010	1
11	Valve	07100003	07100003	1
12	Valve	07100005	07100006	1
13	Valve Support	01713041	01713041	1
14	Cable Cross Plate sub-assy	02123014P	02123014P	1
15	Right Side Plate Assy	0130306903	0130509901P	1
16	Cover of pass wire	02123013P	02123013P	1
17	Magnet Coil	4300876716	4300876701	1
18	Discharge Tube	03813963	03500800281	1
19	Inhalation Tube	03833416	03733985	1
20	Compressor Overload Proctector(External)	00183114	00183111	1
21	Temperature Sensor	39000310	39000310	1
22	Rear Grill	01473057	01475014	1
23	Condenser Assy	01163412	01100200207	1
24	Clapboard Sub-Assy	01233034	01233090	1
25	Top Cover Plate	0125310703P	0125310703P	1
26	Motor suport spot welding sub-assy	0170310201	01703114	1
27	Cover of Reactor box	01413029	/	1
28	Reactor	43130185	43130185	1
29	Electric Box Cover Sub-Assy	0260309601	0260309601	1
30	Main Board	30138000522	30138000520	1
31	Electric Box Assy	10000100187	10000100189	1
32	Terminal Board	422000060016	422000060016	1

Above data is subject to change without notice.

KW18CQ1B8DO KW24CQ1B8DO

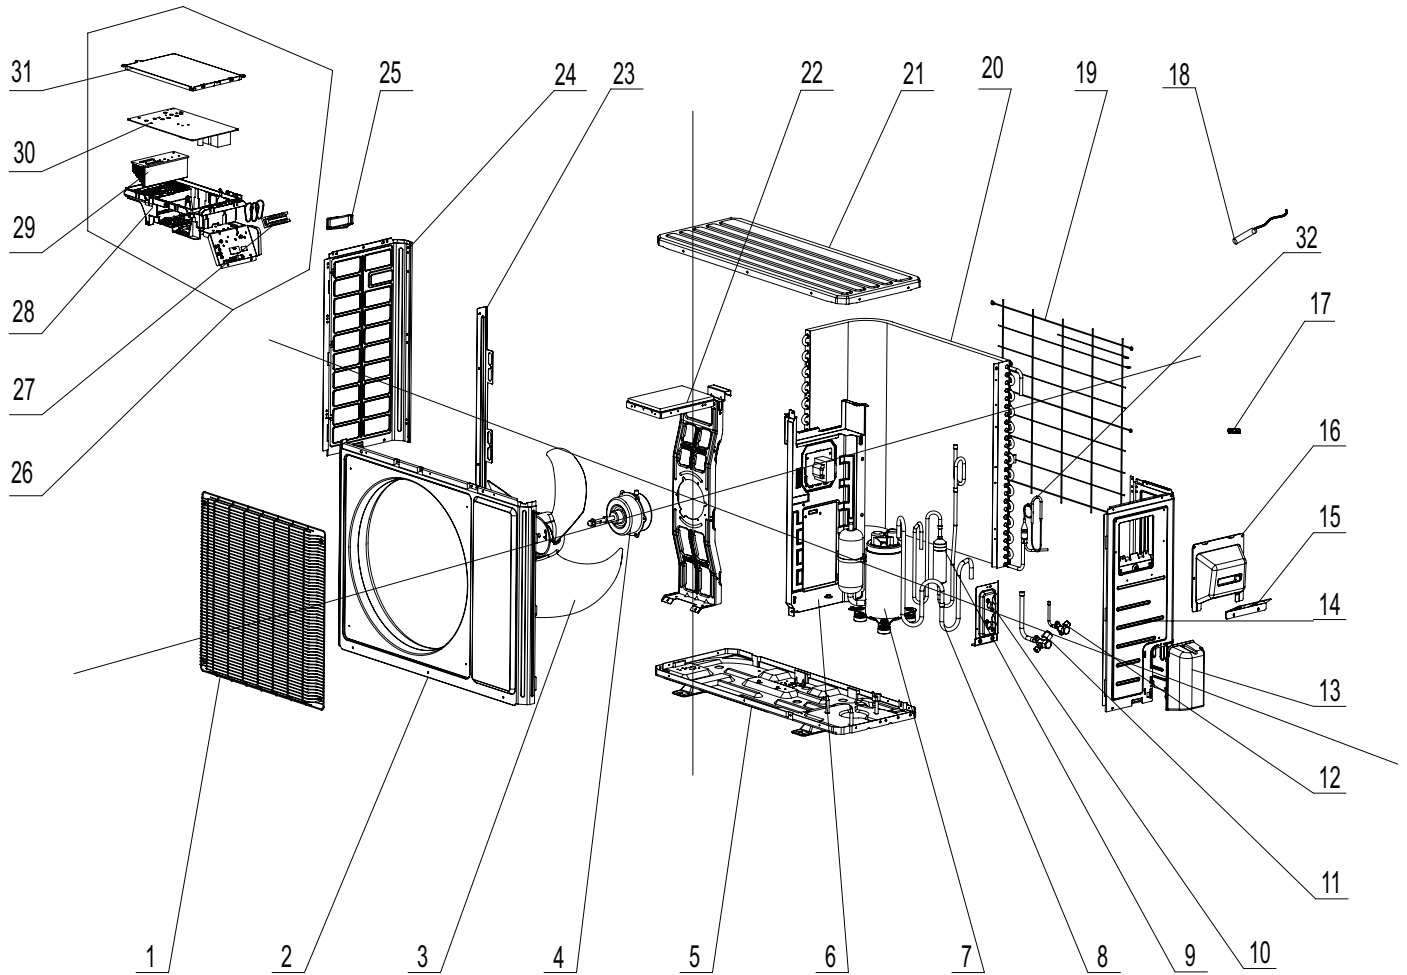


The component picture is only for reference; please refer to the actual product.

NO.	Description	Part Code		Qty
		KW18CQ1B8DO	KW24CQ1B8DO	
		Product Code	Product Code	
		CB427W01700_L74316	CB427W02300_L74316	
1	Front Grill	016004000006	016004000006	1
2	Cabinet	01433047P	01433047P	1
3	Axial Flow Fan	10335008	10335008	1
4	Fan Motor	1501506402	1501506402	1
5	Chassis Sub-assy	01700000094P	02803214P	1
6	Clapboard Assy	01233153	01233153	1
7	Compressor and Fittings	00105249G	00105249G	1
8	Inhalation Tube Sub-assy	03833913	03833916	1
9	Discharge Tube Sub-assy	03001300244	03833914	1
10	Valve Support Assy	01715010P	01713098P	1
11	Cut off Valve Assy	07133774	07133157	1
12	Cut off Valve Sub-Assy	07133774	0713317001	1
13	Valve Cover	22245002	22245002	1
14	Right Side Plate	0130509403P	0130509403P	1
15	Retaining Plate	02115006P	02115006P	1
16	Handle Assy	02113109	02113109	1
17	Wire Clamp	26115004	71010003	1
18	Temperature Sensor	3900030901	3900030901	1
19	Rear Grill	01473043	01473043	1
20	Condenser Assy	01100200338	01100200348	1
21	Coping	012049000007P	012049000007P	1
22	Motor Support Sub-Assy	01705043	0170512001	1
23	Condenser Support Plate	0117313201	0170512001	1
24	Left Side Plate	01305093P	01305093P	1
25	Handle	26233053	26233053	1
26	Electric Box Assy	10000100287	10000100295	1
27	Terminal Board	42200006001401	42200006001401	1
28	Electric Box	20113027	20113027	1
29	Main Board	30138000686	30138000674	1
30	Radiator	49013060	49010252	1
31	Insulated Board (Cover of Electric Box)	20113003	20113003	1
32	Capillary Sub-assy	03000600320	03000600330	1

Above data is subject to change without notice.

KW09HQ1B8AO KW12HQ1B8AO

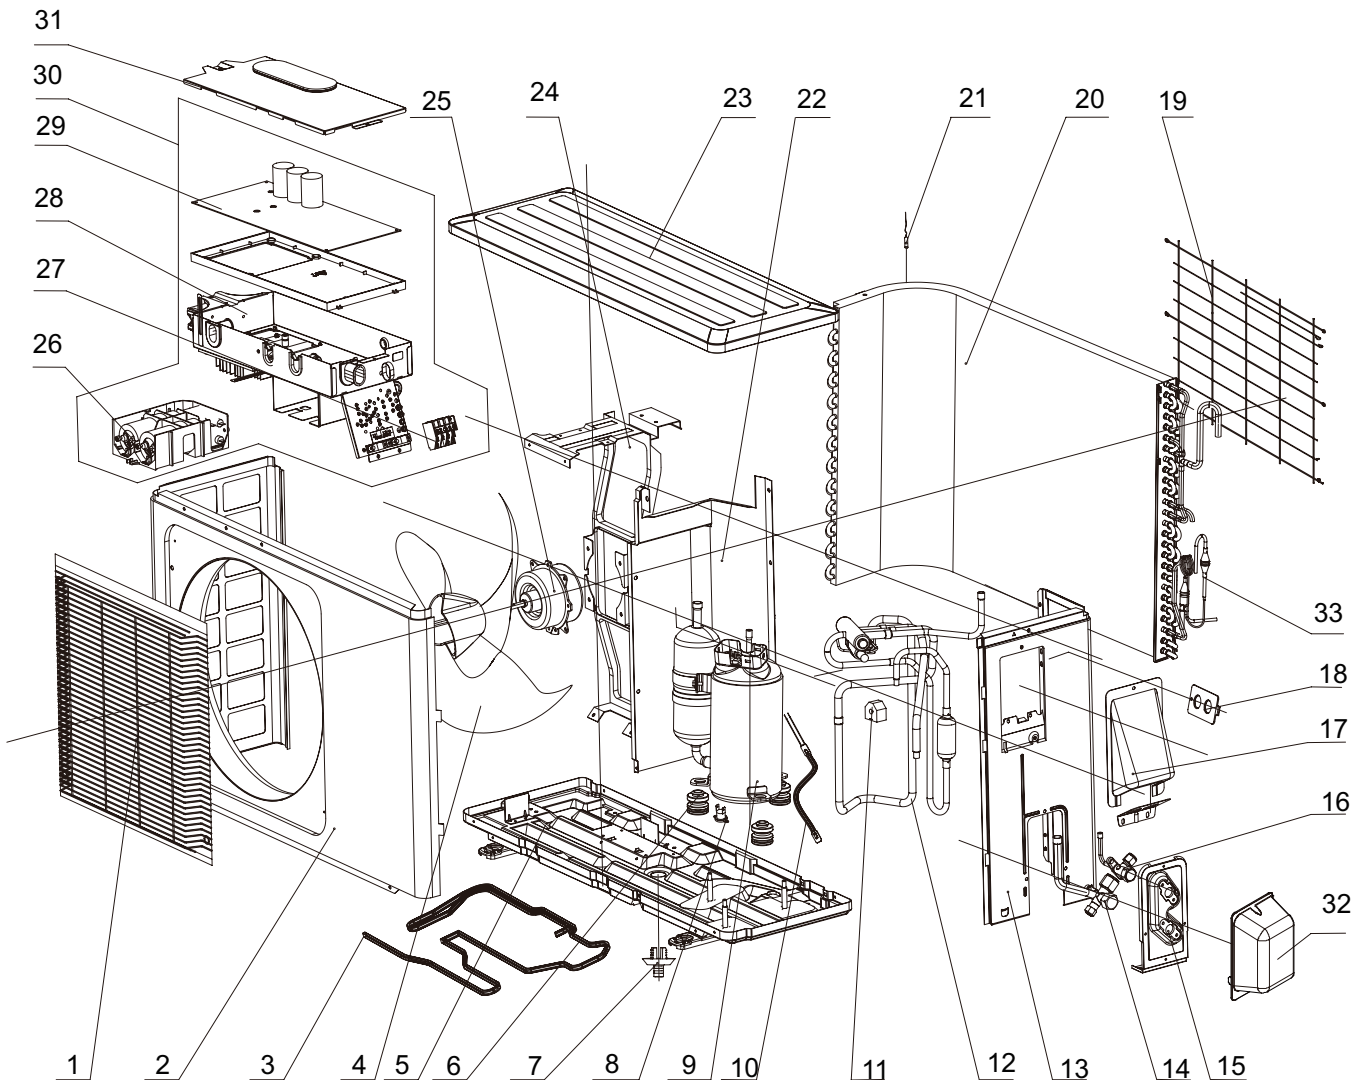


The component picture is only for reference please refer to the actual product.

NO.	Description	Part Code		Qty
		KW09HQ1B8AO	KW12HQ1B8AO	
		Product Code CB427W03900_L74316	CB427W03700_L74316	
1	Front Grill	01473012	01473012	1
2	Cabinet	0143305801P	0143305801P	1
3	Electrical heater (Chassis)	76510010	76510010	1
4	Axial Flow Fan	10333004	10333004	1
5	Chassis Sub-assy	0120388105P	0120388103P	1
6	Compressor Gasket	76710302	76710302	3
7	Drainage Connector	06123401	06123401	1
8	Overload Protector	00180030	00180030	1
		00183031	00183031	1
		00183032	00183032	1
9	Compressor and fittings	00103862	00103862	1
10	Electrical heater	76510010	76510010	1
11	Magnet Coil	4300040021	4300040021	1
12	4-Way Valve Assy	03073403	03073403	1
13	Right Side Plate Assy	013030713	013030713	1
14	Valve	07100005	07100005	1
15	Valve Support	01713041	01713041	1
16	Valve	07100005	07100005	1
17	Cable Cross Plate sub-assy	02123015	02123015	1
18	Cover of pass wire	01413069	01413069	1
19	Rear Grill	01473057	01473057	1
20	Condenser Assy	01100200497	01100200482	1
21	Temperature Sensor	39000310	39000310	1
22	Clapboard Sub-Assy	01233034	01233034	1
23	Top Cover Plate	0125310703P	0125310703P	1
24	Motor suport spot welding sub-assy	01703104	0170310401	1
25	Fan Motor	1501308507	1501308507	1
26	Capacitor Box	20113004	20113004	1
27	Terminal Board	422000060016	422000060016	1
28	Electric box 1	20113005	20113005	1
29	Main Board	30138000865	30138000863	1
30	Electric Box Assy	100002061837	100002061850	1
31	Electric Box Cover Sub-Assy	0260309601	0260309601	1
32	Valve Cover	2012300101	2012300101	1
33	Capillary Sub-assy	03000600331	03000600463	1

Above data is subject to change without notice.

KW09HQ3B8AO KW12HQ3B8AO

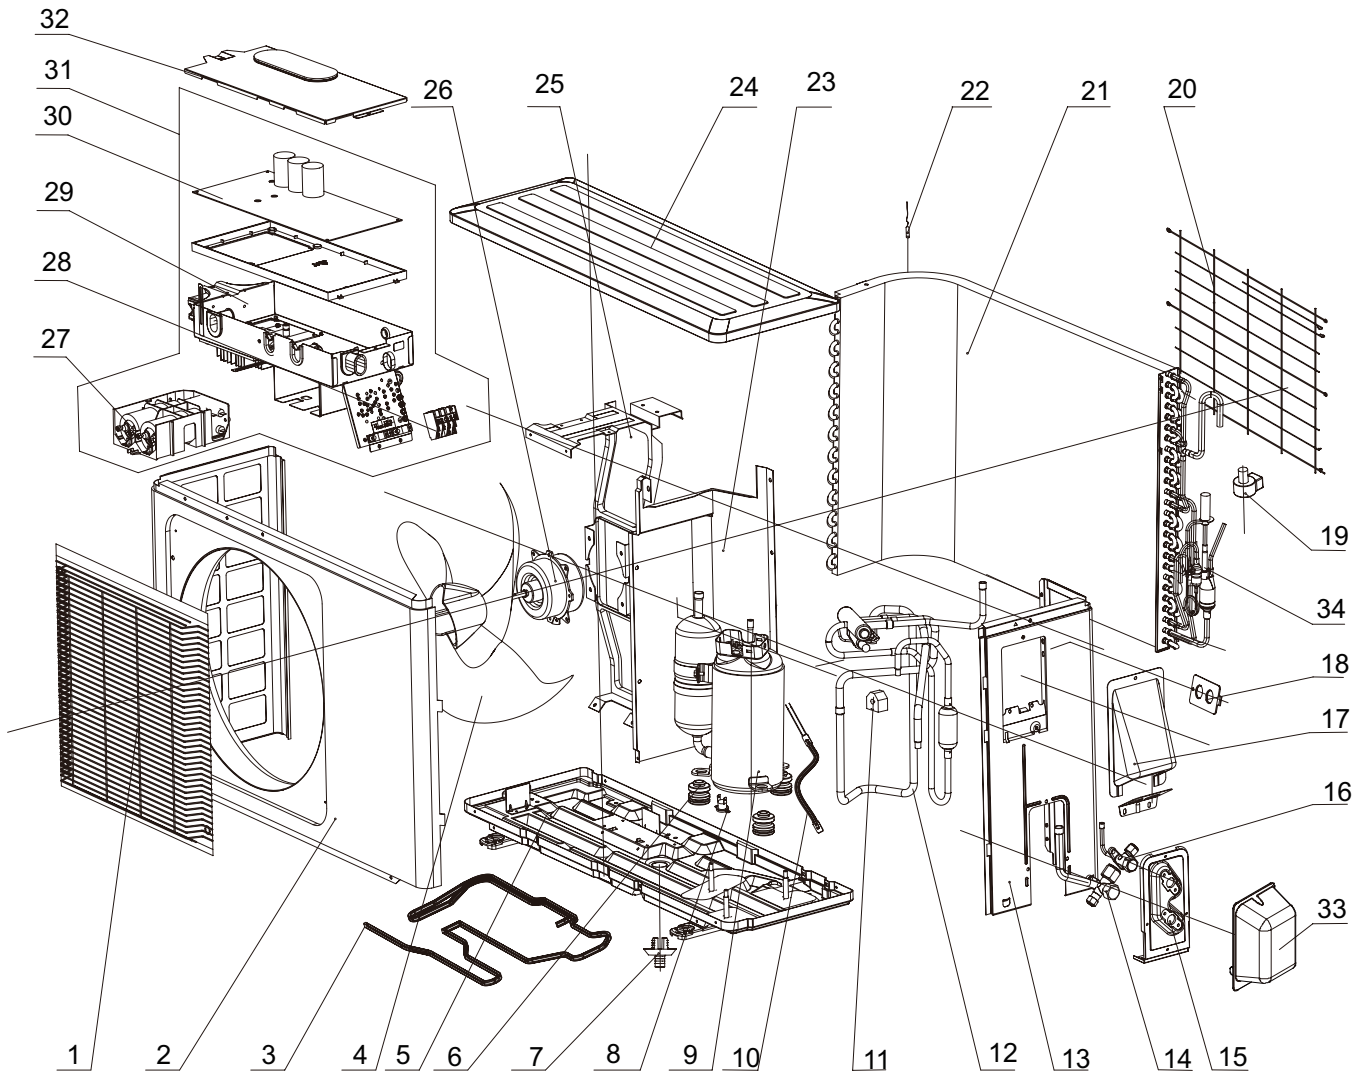


The component picture is only for reference please refer to the actual product.

NO.	Description	Part Code		Qty
		KW12HQ3B8AO	KW09HQ3B8AO	
		Product Code	Product Code	
		CB425W07900_L74316	CB425W08200_L74316	
1	Front Grill	01473012	01473012	1
2	Cabinet	0143305801P	0143305801P	1
3	Electrical heater (Chassis)	76510010	76510010	1
4	Axial Flow Fan	10333004	10333004	1
5	Chassis Sub-assy	0120388103P	0120388105P	1
6	Compressor Gasket	76710302	76710302	3
7	Drainage Connector	06123401	06123401	1
8	Overload Protector	00180030	00180030	1
		00183031	00183031	1
		00183032	00183032	1
9	Compressor and fittings	00103862	00103862	1
10	Electrical heater	76510010	76510010	1
11	Magnet Coil	4300040021	4300040021	1
12	4-Way Valve Assy	03073403	03073403	1
13	Right Side Plate Assy	013030713	013030713	1
14	Valve	07100005	07100005	1
15	Valve Support	01713041	01713041	1
16	Valve	07100005	07100005	1
17	Cable Cross Plate sub-assy	02123015	02123015	1
18	Cover of pass wire	01413069	01413069	1
19	Electric Expand Valve Fitting	072002000012	072002000012	1
20	Rear Grill	01473057	01473057	1
21	Condenser Assy	011002000466	011002000509	1
22	Temperature Sensor	3900030903	39000310	1
23	Clapboard Sub-Assy	01233034	01233034	1
24	Top Cover Plate	0125310703P	0125310703P	1
25	Motor suport spot welding sub-assy	0170310401	01703104	1
26	Fan Motor	1501308507	1501308507	1
27	Capacitor Box	20113004	20113004	1
28	Terminal Board	422000060016	422000060016	1
29	Electric box 1	20113005	20113005	1
30	Main Board	300027000325	300027000356	1
31	Electric Box Assy	100002061852	100002061853	1
32	Electric Box Cover Sub-Assy	0260309601	0260309601	1
33	Valve Cover	2012300101	2012300101	1
34	Electric Expansion Valve Sub-Assy	030026000185	030026000199	1

Above data is subject to change without notice.



KW09HQ2B8AO KW12HQ2B8AO

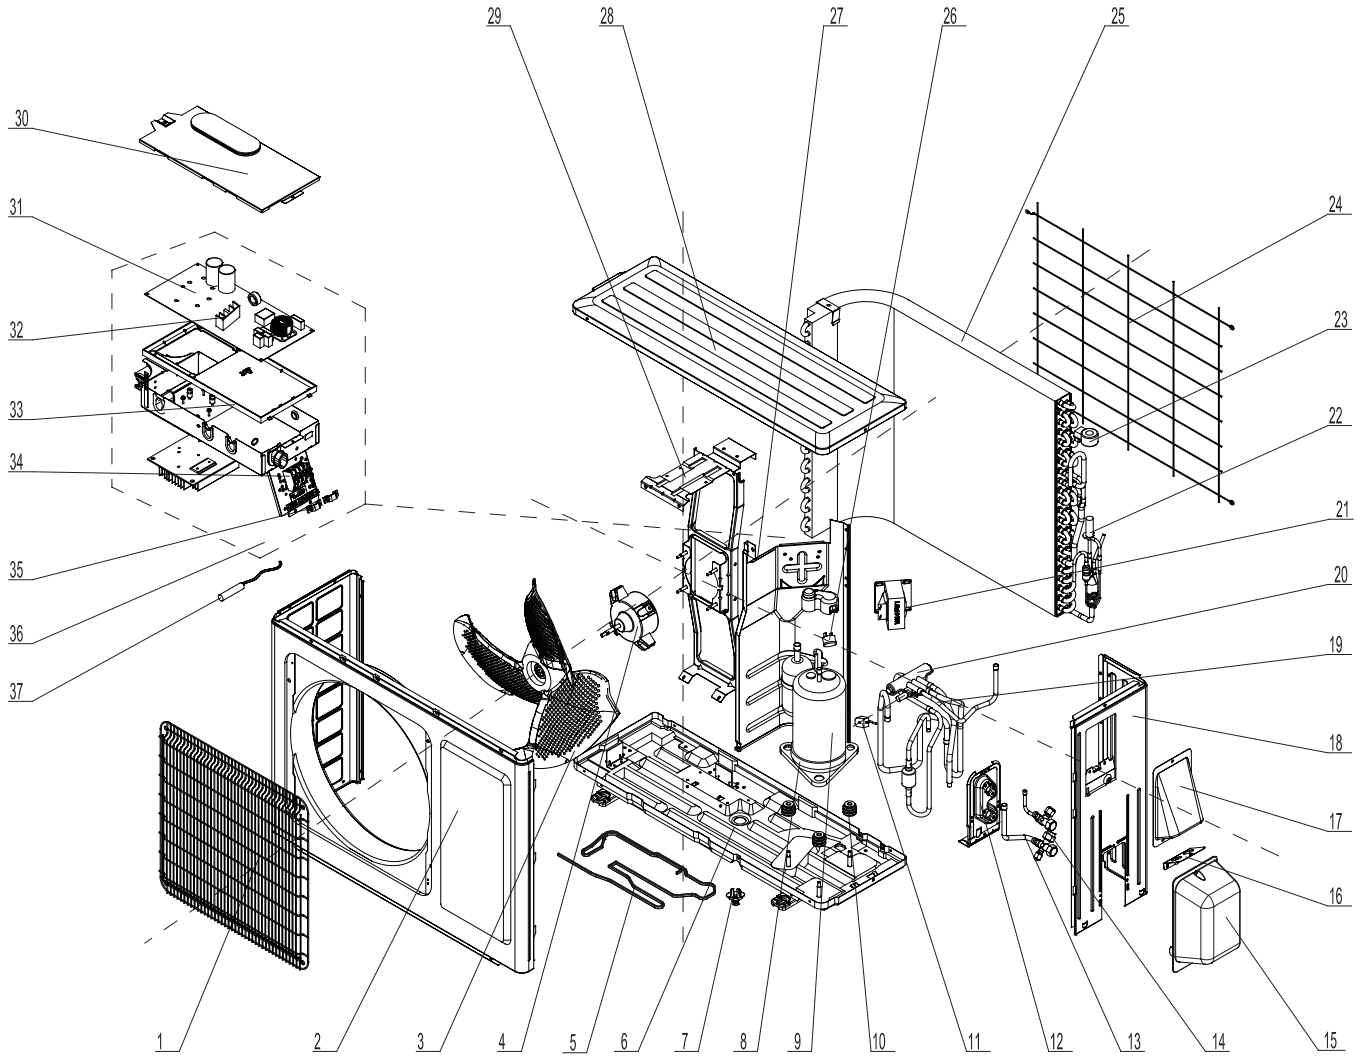


The component picture is only for reference please refer to the actual product.

NO.	Description	Part Code		Qty
		KW09HQ2B8AO	KW12HQ2B8AO	
		Product Code CB419W03900_L74316	CB419W04100_L74316	
1	Front Grill	01473012	01473012	1
2	Cabinet	0153304901	0153501604	1
3	Axial Flow Fan	10333004	10333004	1
4	Fan Motor	1501308507	1501308507	1
5	Electrical Heater	76510010	76510010	1
6	Chassis Sub-assy	01203881P	01203881P	1
7	Drainage Joint	06123401	06123401	1
8	Electrical Heater(Compressor)	76510009	76510009	1
9	Compressor and Fittings	00103862	00103862	1
10	Compressor Gasket	76710302	76710302	3
11	Magnet Coil	4300040021	4300040021	1
12	Valve Support	01713041	01713041	1
13	Valve	07100005	07100006	1
14	Valve	07130239	07130239	1
15	Valve Cover	2012300101	22243010	1
16	Cable Cross Plate 1	02123013P	02123013P	1
17	Cable Cross Plate 2	02123014P	02123014P	1
18	Right Side Plate	0130306903	0130509901P	1
19	4-Way Valve Assy	03015200082	03073339	1
20	4-Way Valve	430004022	430004022	1
21	Reactor	/	/	/
22	Electric Expansion Valve Sub-Assy	03002600039	030026000072	1
23	Electric Expand Valve Fitting	07200200001202	07200200001202	1
24	Rear Grill	01473057	01475014	1
25	Condenser Assy	01100200189	011002000138	1
26	Compressor Overload Protector(External)	00180030	00180030	1
27	Clapboard Sub-Assy	01233034	0123309001	1
28	Top Cover Plate	0125310703	0125310703	1
29	Motor Support	0170310201	01703114	1
30	Electric Box Cover Sub-Assy	0260309601	0260309601	1
31	Main Board	30138000523	30138000545	1
32	Radiator	49010252	49010252	1
33	Electric Box 1	20113005	20113005	1
34	Terminal Board	422000060016	422000060016	1
35	Wire Clamp	71010003	71010003	2
36	Electric Box Assy	100002061836	100002061849	1
37	Temperature Sensor	3900030903	39000310	1

Above data is subject to change without notice.

KW09HQ1B8DO KW12HQ1B8DO

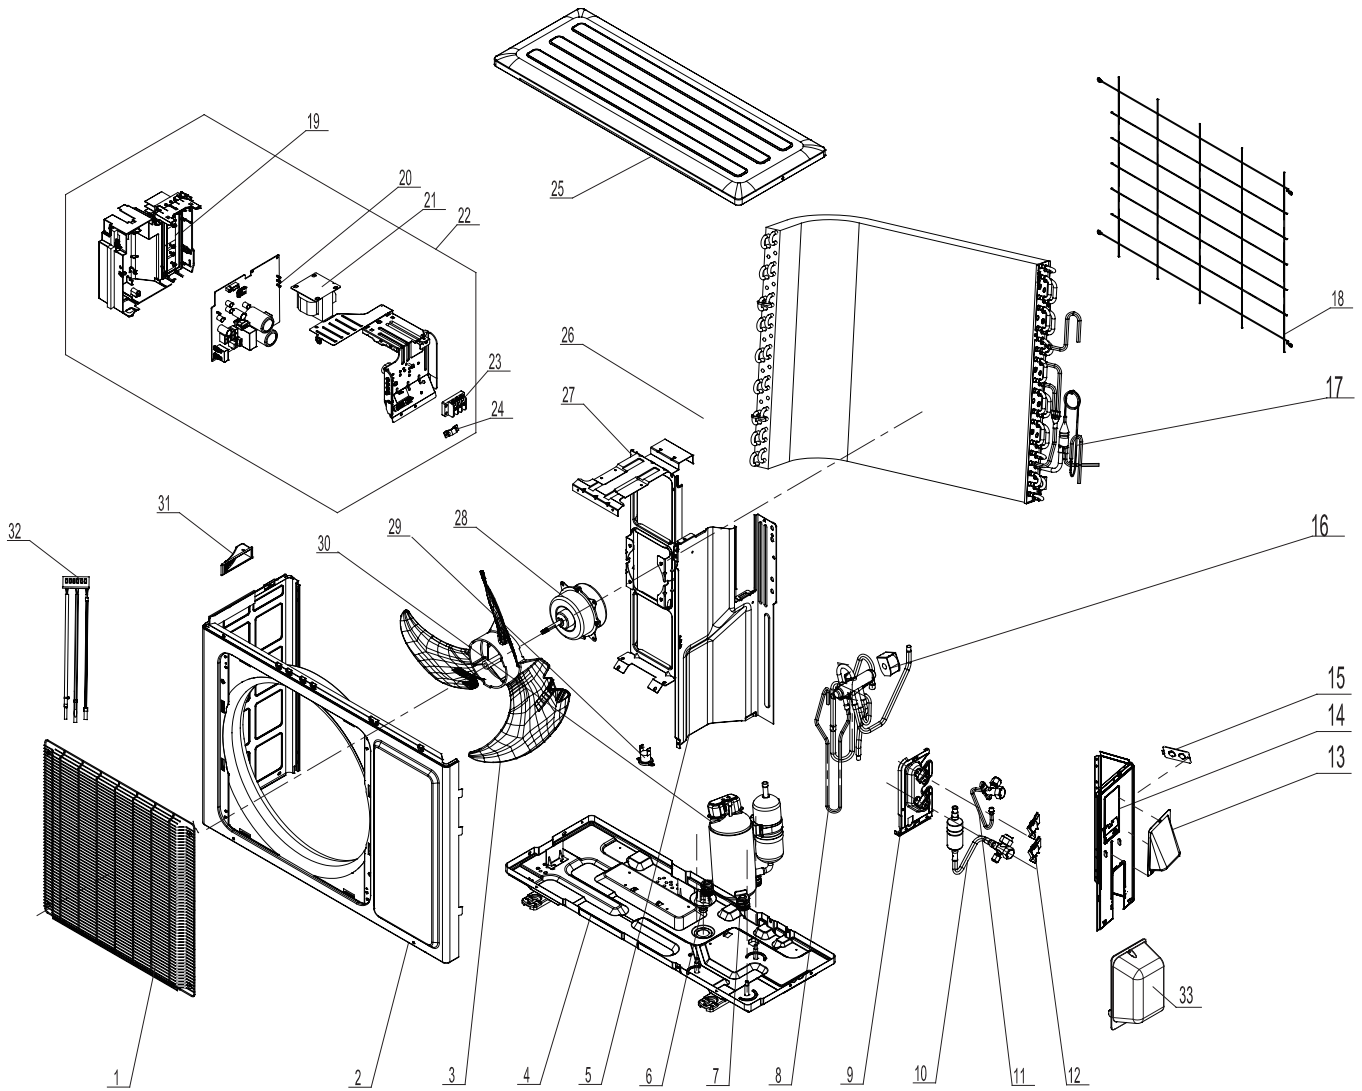


The component picture is only for reference; please refer to the actual product.

NO.	Description	Part Code		Qty
		KW09HQ1B8DO	KW12HQ1B8DO	
		Product Code CB427W02200_L74316	CB427W02100_L74316	
1	Front Grill	01473012	01473012	1
2	Front Panel Assy	0153304804	0153304804	1
3	Axial Flow Fan	10333004	10333004	1
4	Chassis Sub-assy	01700000095P	01700000081P	1
5	Clapboard Sub-Assy	0123338502	0123338502	1
6	Drainage Connector	06123401	06123401	1
7	Compressor Gasket	76713027	76713027	3
8	4-Way Valve Assy	03073369	03073277	1
9	Valve Support	0171314201P	0171314201P	1
10	Cut off Valve Assy	07133474	07133474	1
11	Valve	07100003	07133082	1
12	Valve Support Block	26113017	26113017	2
13	Cover of Pass Wire	01413069	01413069	1
14	Right Side Plate Assy	013030713	013030713	1
15	Cable Cross Plate 2	02123014P	02123014P	1
16	Magnet Coil	4300040050	4300040050	1
17	Capillary Sub-assy	03000600331	03000600327	1
18	Rear Grill	01473009	01473009	1
19	Electric Box	20113033	20113033	1
20	Main Board	30138000679	30138000677	1
21	Reactor	43130184	43130184	1
22	Electric Box Assy	10000100292	10000100291	1
23	Terminal Board	422000060016	422000060016	1
24	Wire Clamp	71010003	71010003	1
25	Top Cover Sub-Assy	01253108P	01253108P	1
26	Condenser Assy	01100200349	01100200346	1
27	Motor Support	01703104	0170310401	1
28	Fan Motor	1501306723	1501306723	1
29	Compressor Overload Protector(External)	00183111	00183111	1
30	Compressor and Fittings	00103892	00103892	1
31	Small Handle	26233100	26233100	1
32	Temperature Sensor	3900030805	3900030805	1
33	valve cover	2012300101	2012300101	1

Above data is subject to change without notice.

KW09HQ3B8DO KW12HQ3B8DO

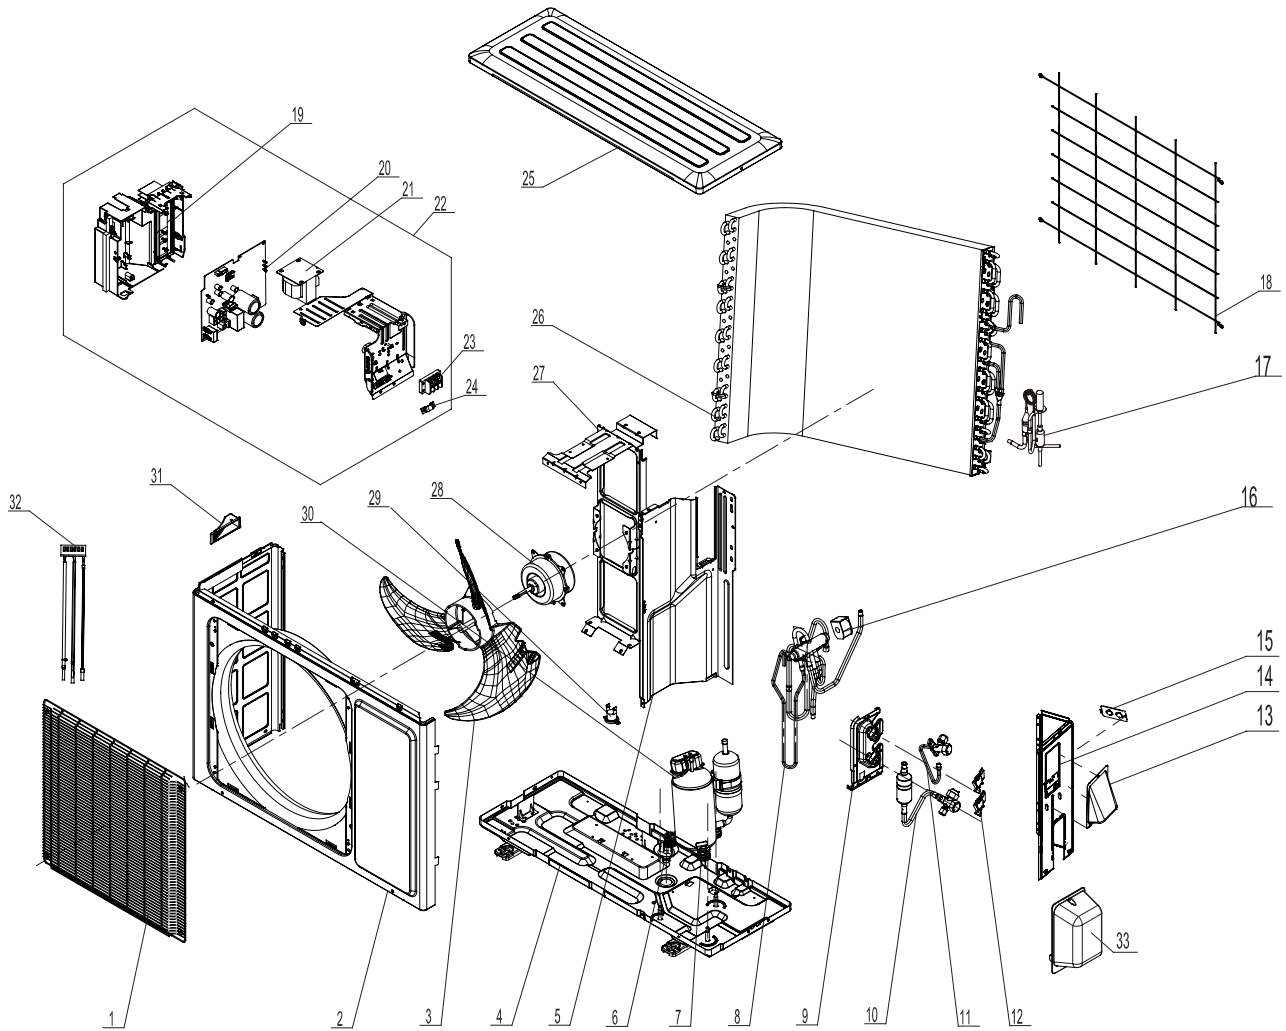


The component picture is only for reference; please refer to the actual product.

NO.	Description	Part Code		Qty
		KW12HQ3B8DO	KW09HQ3B8DO	
		Product Code CB425W08100_L74316	CB425W08500_L74316	
1	Front Grill	01473012	01473012	1
2	Front Panel Assy	0153304804	0153304804	1
3	Axial Flow Fan	10333004	10333004	1
4	Chassis Sub-assy	01700000126	01700000133P	1
5	Clapboard Sub-Assy	0123338502	0123338502	1
6	Drainage Connector	06123401	06123401	1
7	Compressor Gasket	76710287	76710287	3
8	4-Way Valve Assy	030152000094	030152000171	1
9	Valve Support	0171314201P	0171314201P	1
10	Cut off Valve Assy	07133474	07133474	1
11	Valve	07133082	07100003	1
12	Valve Support Block	26113017	26113017	2
13	Cover of Pass Wire	01413069	01413069	1
14	Right Side Plate Assy	013030713	013030713	1
15	Cable Cross Plate 2	02123014P	02123014P	1
16	Magnet Coil	4300040050	4300040050	1
17	Electric Expansion Valve Sub-Assy	030026000192	030026000197	1
18	Rear Grill	01473009	01473009	1
19	Electric Box	20113034	20113032	1
20	Main Board	300027000359	300027000355	1
21	Reactor	43130184	43130184	1
22	Electric Box Assy	100002001959	100002001956	1
23	Terminal Board	422000060016	422000060016	1
24	Wire Clamp	71010003	71010003	1
25	Top Cover Sub-Assy	01253108P	01253108P	1
26	Condenser Assy	011002000492	011002000508	1
27	Motor Support	0170310401	01703104	1
28	Fan Motor	1501308507	1501308507	1
29	Compressor Overload Protector(External)	00180030	00180030	1
30	Compressor and Fittings	009001000030	009001000181	1
31	Small Handle	26233100	26233100	1
32	Temperature Sensor	3900030805	3900030805	1
33	valve cover	2012300101	2012300101	1

Above data is subject to change without notice.

KW12CQ1B8DO

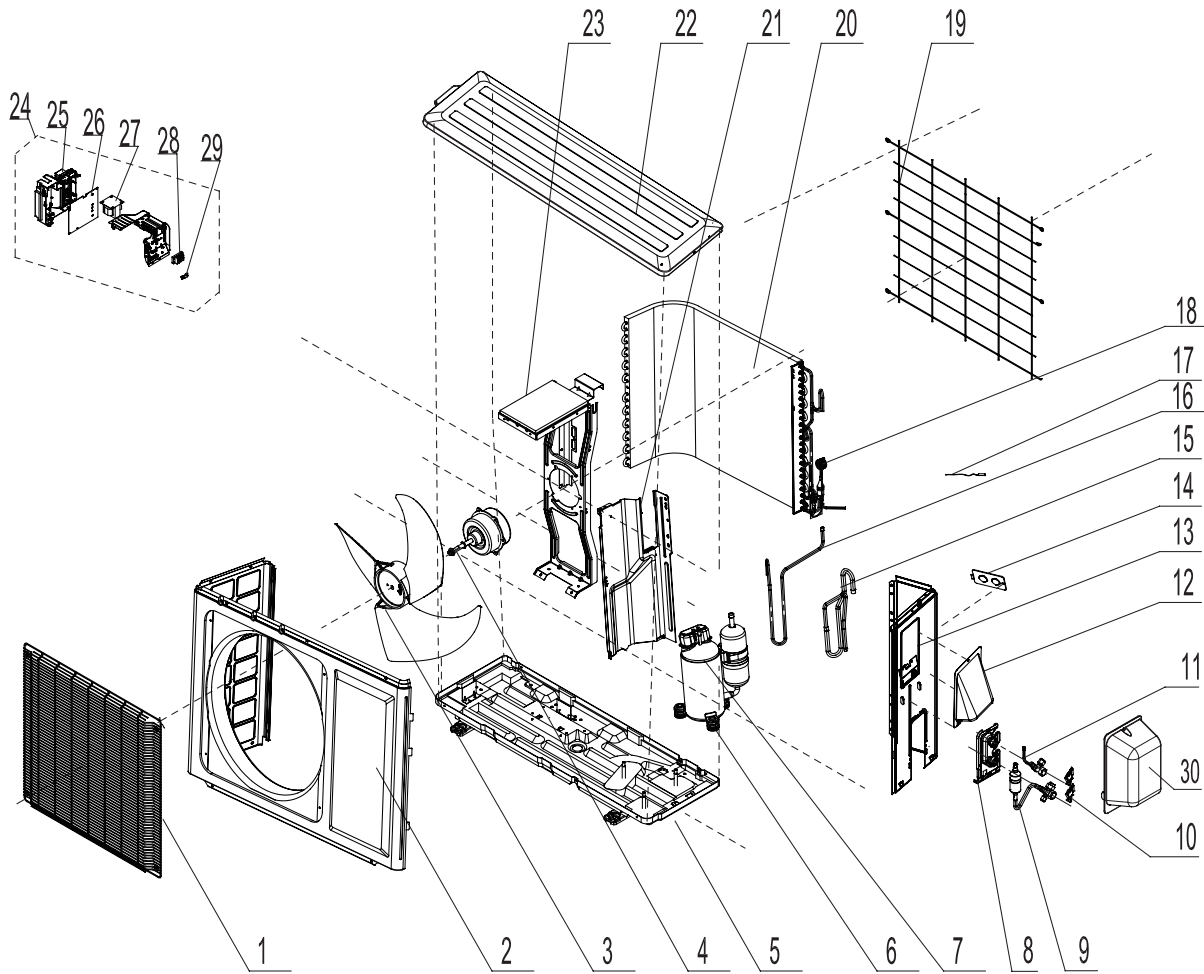


The component picture is only for reference; please refer to the actual product.

NO.	Description	Part Code	Qty
		KW12CQ1B8DO	
		Product Code CB427W01800_L74316	
1	Front Grill	01473012	1
2	Front Panel Assy	0153304804	1
3	Axial Flow Fan	10333004	1
4	Fan Motor	1501306723	1
5	Chassis Sub-assy	02803187P	1
6	Compressor Gasket	76713027	3
7	Compressor and fittings	00103892	1
8	Valve Support	0171314201P	1
9	Cut off Valve Assy	07133474	1
10	Valve Support Block	26113017	2
11	Valve	07133082	1
12	Cable Cross Plate 2	02123014P	1
13	Right Side Plate Assy	013030713	1
14	Cover of pass wire	01413069	1
15	Inhalation Tube Sub-assy	03001000262	1
16	Discharge Tube	03500800570	1
17	Temperature Sensor	3900030805	1
18	Capillary Sub-assy	03000600339	1
19	Rear Grill	01473009	1
20	Condenser Assy	01100200360	1
21	Clapboard Sub-Assy	0123338502	1
22	Top Cover Sub-Assy	01253108P	1
23	Motor Support	0170310401	1
24	Electric Box Assy	10000100290	1
25	Reactor	43130184	1
26	Electric Box Cover Sub-Assy	10000500129	1
27	Main Board	30138000680	1
28	Terminal Board	422000060016	1
29	Wire Clamp	71010003	1
30	valve cover	2012300101	1

Above data is subject to change without notice.



KW09HQ2B8DO KW12HQ2B8DO

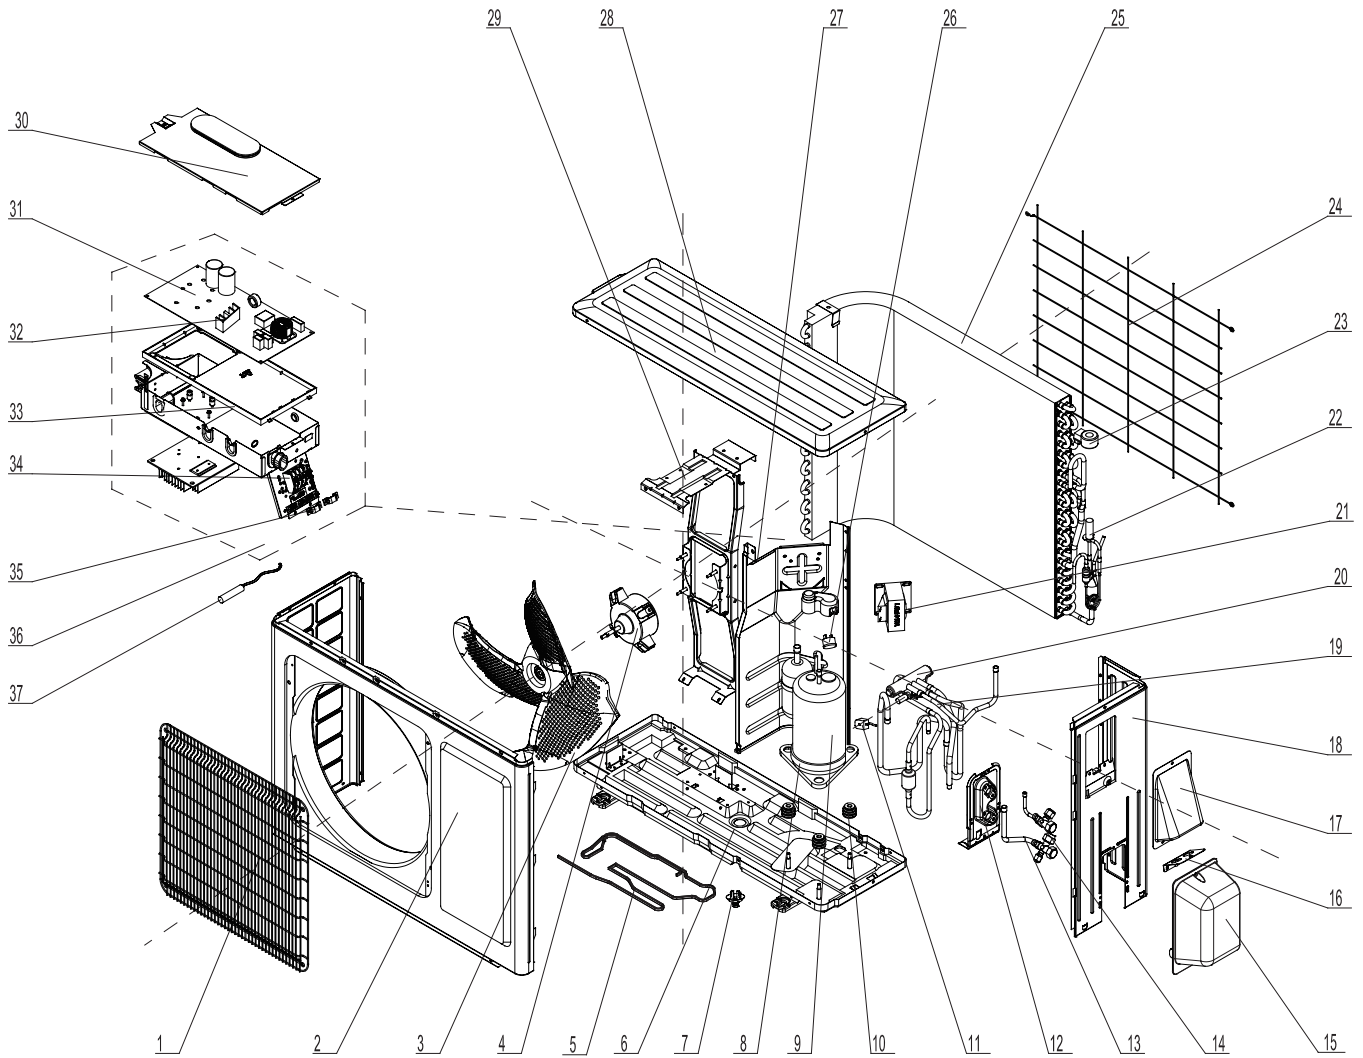


The component picture is only for reference; please refer to the actual product.

NO.	Description	Part Code		Qty
		KW09HQ2B8DO	KW12HQ2B8DO	
		Product Code CB419W04300_L74316	CB419W04500_L74316	
1	Front Grill	01473012	01473012	1
2	Cabinet	0143305801P	0153501604	1
3	Axial Flow Fan	10333004	10333004	1
4	Fan Motor	1501308505	1501308505	1
5	Electrical Heater	76510010	76510010	1
6	Chassis Sub-assy	0120380601P	0120380601P	1
7	Drainage Connector	06123401	06123401	1
8	Electrical Heater(Compressor)	76513004	76513004	1
9	Compressor and Fittings	00103892	00103892	1
10	Compressor Gasket	76713027	76713027	3
11	Magnet Coil	4300040047	4300040047	1
12	Valve Support	01713041	01713041	1
13	Valve	07100005	07100006	1
14	Valve	07100003	07100003	1
15	Valve Cover	2012300101	22243010	1
16	Cable Cross Plate 1	02123013P	02123013P	1
17	Cable Cross Plate 2	02123014P	02123014P	1
18	Right Side Plate	0130306903	0130509901P	1
19	4-Way Valve Assy	03073083	03015200098	1
20	4-Way Valve	430004032	430004032	1
21	Reactor	43130185	43130185	1
22	Electric Expansion Valve Sub-Assy	07133769	07130369	1
23	Electric Expand Valve Fitting	4300876716	4300876701	1
24	Rear Grill	01473057	01475014	1
25	Condenser Assy	01163565	0110020020701	1
26	Compressor Overload Protector(External)	00183111	00183111	1
27	Clapboard Sub-Assy	01233034	01233090	1
28	Top Cover Plate	0125310703P	0125310703P	1
29	Motor Support	0170310201	01703114	1
30	Electric Box Cover Sub-Assy	0260309601	0260309601	1
31	Main Board	30138000521	30138000519	1
32	Radiator	49013026	49013026	1
33	Electric Box 1	20113005	20113005	1
34	Terminal Board	422000060016	422000060016	1
35	Wire Clamp	71010003	71010003	1
36	Electric Box Assy	10000100188	10000100190	1
37	Temperature Sensor	39000310	39000310	1

Above data is subject to change without notice.

KW18HQ1B8DO KW24HQ1B8DO

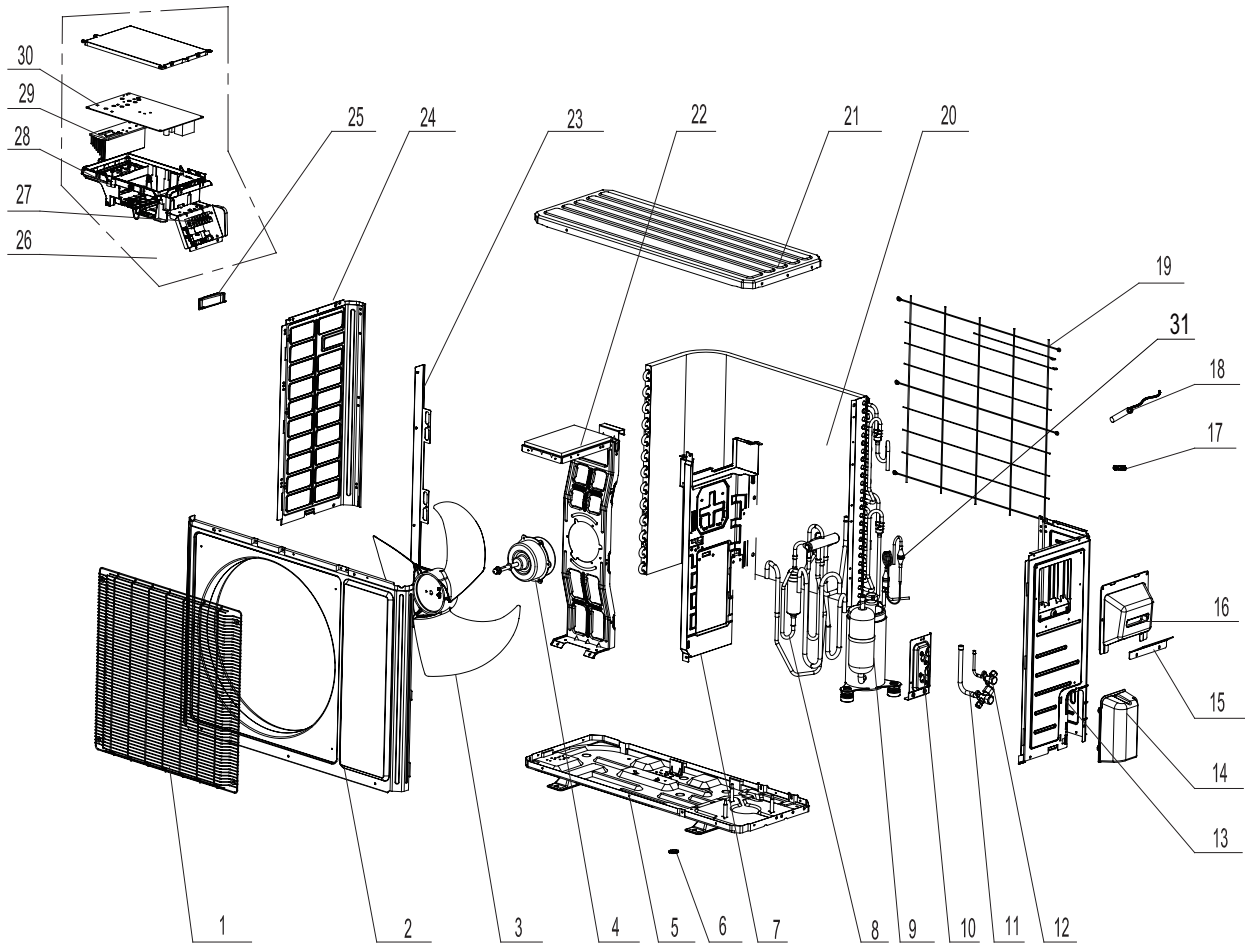


The component picture is only for reference; please refer to the actual product.

No.	Description	Part Code		Qty
		KW18HQ1B8DO	KW24HQ1B8DO	
	Product Code	CB427W02000_L74316	CB427W02400_L74316	
1	Front Grill	016004000006	016004000006	1
2	Cabinet	01433047P	01433047P	1
3	Axial Flow Fan	10335008	10335008	1
4	Fan Motor	1501506402	1501506402	1
5	Chassis Sub-assy	01700000093P	0280336702P	1
6	Drainage hole Cap	06813401	06813401	3
7	Clapboard Assy	01233153	0123315301	1
8	4-Way Valve Assy	03073366	03073324	1
9	Compressor and Fittings	00105249G	00105249G	1
10	Valve Support Assy	01715010P	01713098P	1
11	Cut off Valve	07133774	07133157	1
12	Cut off Valve Sub-Assy	07133204	07133975	1
13	Right Side Plate	0130509403P	0130509403P	1
14	Valve Cover	22245002	22245002	1
15	Retaining Plate	02115006P	02115006P	1
16	Handle Assy	02113109	02113109	1
17	Wiring Clamp	26115004	26115004	1
18	Temperature Sensor	3900030901	3900030901	1
19	Rear Grill	01473043	01473043	1
20	Condenser Assy	01100200339	01100200347	1
21	Top Cover Plate	012049000007P	012049000007P	1
22	Motor Support Sub-Assy	01703154	0170512001	1
23	Condenser Support Plate	01173127	01173415	1
24	Left Side Plate	01305093P	01305093P	1
25	Handle	26233053	26233053	1
26	Electric Box Assy	10000100288	10000100294	1
27	Terminal Board	42200006001401	42200006001401	1
28	Electric Box	20113027	20113027	1
29	Main Board	30138000685	30138000673	1
30	Radiator	49010252	49010252	1
31	Capillary Sub-assy	03000600321	03000600329	1

Above data is subject to change without notice.

KW18HQ3B8DO KW24HQ3B8DO

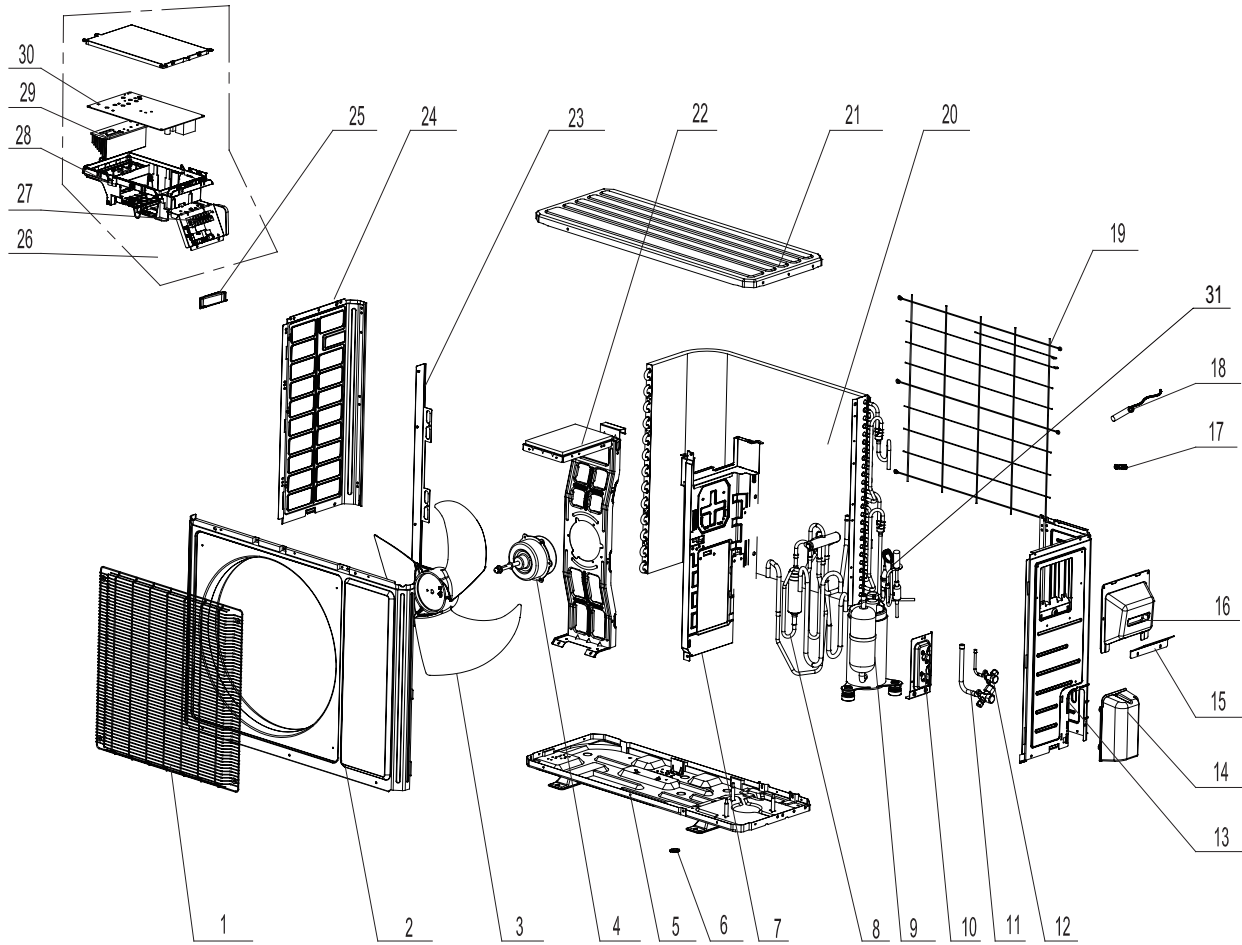


The component picture is only for reference; please refer to the actual product.

No.	Description	Part Code		Qty
		KW18HQ3B8DO	KW24HQ3B8DO	
		Product Code	Product Code	
		CB425W07400_L74316	CB425W07700_L74316	
1	Front Grill	012049000007P	012049000007P	1
2	Cabinet	01433047P	01433047P	1
3	Axial Flow Fan	10335008	10335008	1
4	Fan Motor	1501506402	1501506402	1
5	Chassis Sub-assy	01700000093P	01700000161P	1
6	Drainage hole Cap	06813401	06813401	3
7	Clapboard Assy	01233153	01235081	1
8	4-Way Valve Assy	030152000291	030152000073	1
9	Compressor and Fittings	00105249G	00105249G	1
10	Valve Support Assy	01715010P	01705046	1
11	Cut off Valve	07130239	07133844	1
12	Cut off Valve Sub-Assy	07133204	07133843	1
13	Right Side Plate	0130509403P	0130509002P	1
14	Valve Cover	22245002	22245002	1
15	Retaining Plate	02115006P	02115006P	1
16	Handle Assy	02113109	02113109	1
17	Valve Support Block	/	26115007	1
18	Temperature Sensor	3900030901	3900030902	1
19	Rear Grill	01473043	01475020	1
20	Condenser Assy	011002000513	011002000244	1
21	Top Cover Plate	012049000007P	012049000007P	1
22	Motor Support Sub-Assy	01703154	01705067	1
23	Condenser Support Plate	01173127	01795031	1
24	Left Side Plate	01305093P	01305093P	1
25	Handle	26233053	26233053	1
26	Electric Box Assy	100002001525	100002001406	1
27	Terminal Board	42200006001401	42200006001401	1
28	Electric Box	20113027	20113027	1
29	Main Board	300027000297	300027000301	1
30	Radiator	49013076/49013060	49013076/49013060	1
31	Electronic Expansion Valve assy	030026000208	030174000041	1

Above data is subject to change without notice.

KW18CQ2B8DO

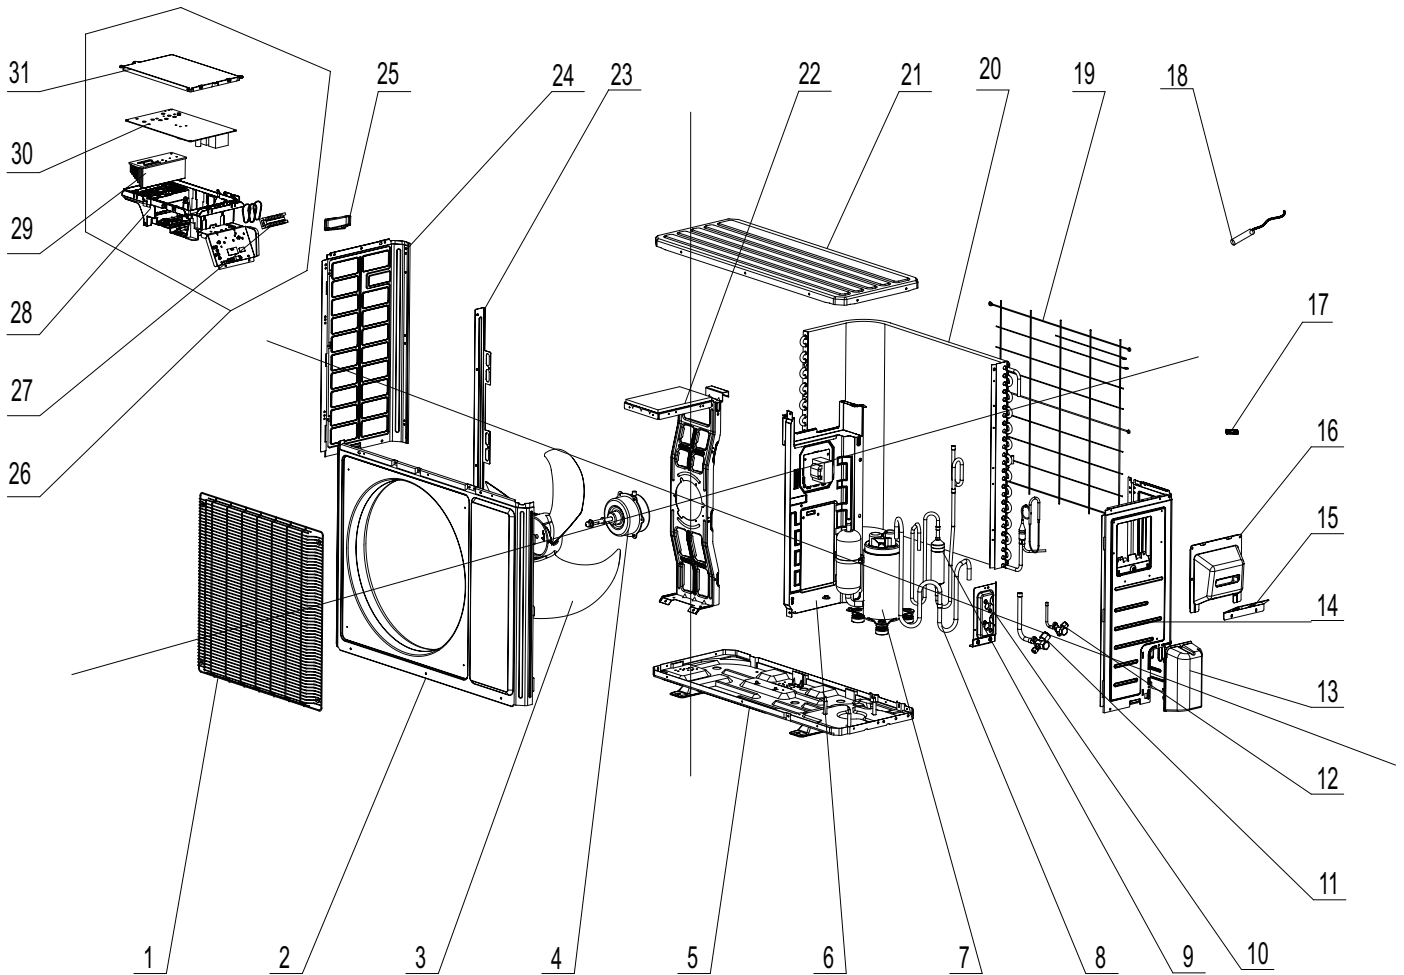


The component picture is only for reference; please refer to the actual product.

NO.	Description	Part Code	Qty
		KW18CQ2B8DO	
Product Code		CB419W06600_L74316	
1	Front Grill	016004000006	1
2	Cabinet	01433047P	1
3	Axial Flow Fan	10335008	1
4	Fan Motor	1501506402	1
5	Chassis Sub-assy	01700000161P01	1
6	Clapboard Assy	01235081	1
7	Compressor and Fittings	00105249G	1
8	Inhalation Tube Sub-assy	03500600726	1
9	Discharge Tube Sub-assy	03001300343	1
10	Valve Support Assy	01705046P	1
11	Cut off Valve Assy	07130239	1
12	Cut off Valve Sub-Assy	03005700125	1
13	Valve Cover	22245002	1
14	Right Side Plate	0130509002P	1
15	Retaining Plate	02115006P	1
16	Handle Assy	02113109	1
17	Wire Clamp	71010003	1
18	Temperature Sensor	3900030902	1
19	Rear Grill	01475020	1
20	Condenser Assy	01100200529	1
21	Coping	012049000007P	1
22	Motor Support Sub-Assy	01705067	1
23	Condenser Support Plate	01795031	1
24	Left Side Plate	01305093P	1
25	Handle	26233053	1
26	Electric Box Assy	10000100631	1
27	Terminal Board	42200006001401	1
28	Electric Box	20115003	1
29	Main Board	30138000872	1
30	Radiator	4901521502	1
31	Insulated Board (Cover of Electric Box)	20113003	1

Above data is subject to change without notice.



KW24HQ2B8DO

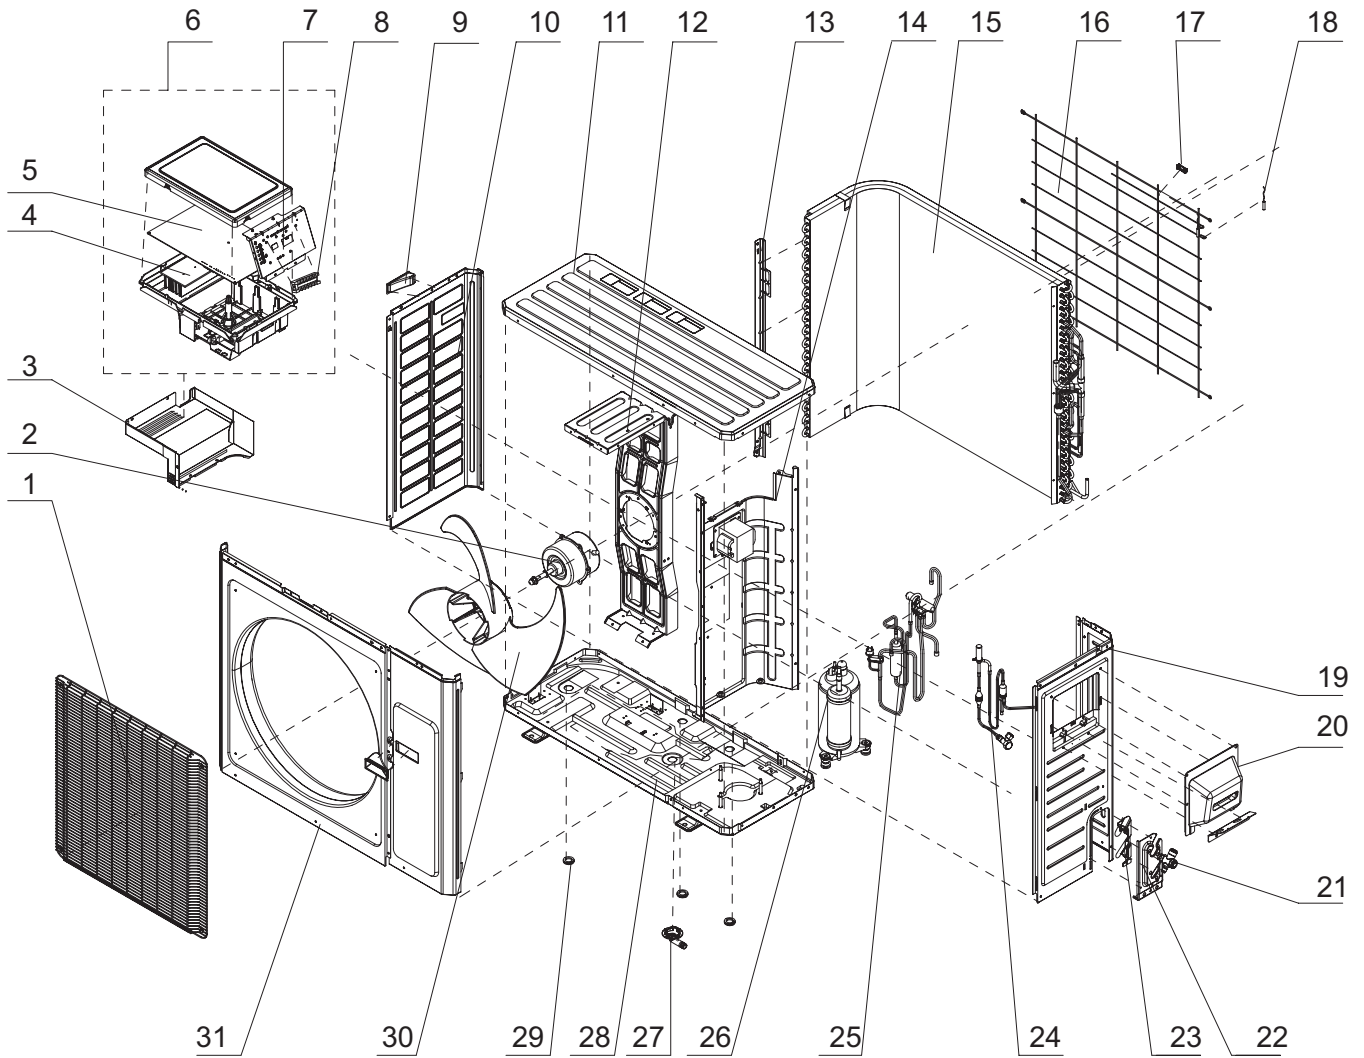


The component picture is only for reference; please refer to the actual product.

No.	Description	Part Code	Qty
		KW24HQ2B8DO	
		Product Code CB419W03600_L74316	
1	Front Grill	016004060005	1
2	Fan Motor	15010400000102	1
3	Electric Box (Fireproofing)	01413426	1
4	Radiator	49015215	1
5	Main Board	30138000504	1
6	Electric Box Assy	10000100164	1
7	Wire Clamp	71010003/71010102	1/1
8	Terminal Board	42200006001401	1
9	Left Handle	02113031	1
10	Left Side Plate	01305043P	1
11	Coping	01255020P	1
12	Motor Support Sub-Assy	01705079	1
13	Condenser Support Plate	01175092	1
14	Clapboard Sub-Assy	01235040	1
15	Condenser Assy	01100200162	1
16	Rear Grill	01475013	1
17	Wiring Clamp	26115004	1
18	Temperature Sensor	3900030901	1
19	Right Side Plate	0130504402P	1
20	Handle Assy	02113109	1
21	Cut off Valve	07133157	1
22	Valve Support Sub-Assy	0171501201P	1
23	Baffle(Valve Support)	01365435P	1
24	Electronic Expansion Valve assy	03017400002	1
25	4-Way Valve Assy	03015200087	1
26	Compressor and Fittings	0010505701	1
27	Drainage Connector	06123401	1
28	Chassis Sub-assy	0280319604P	1
29	Drainage hole Cap	06813401	1
30	Axial Flow Fan	10335014	1
31	Cabinet	0143500401P	1

Above data is subject to change without notice.

KW24CQ2B8DO

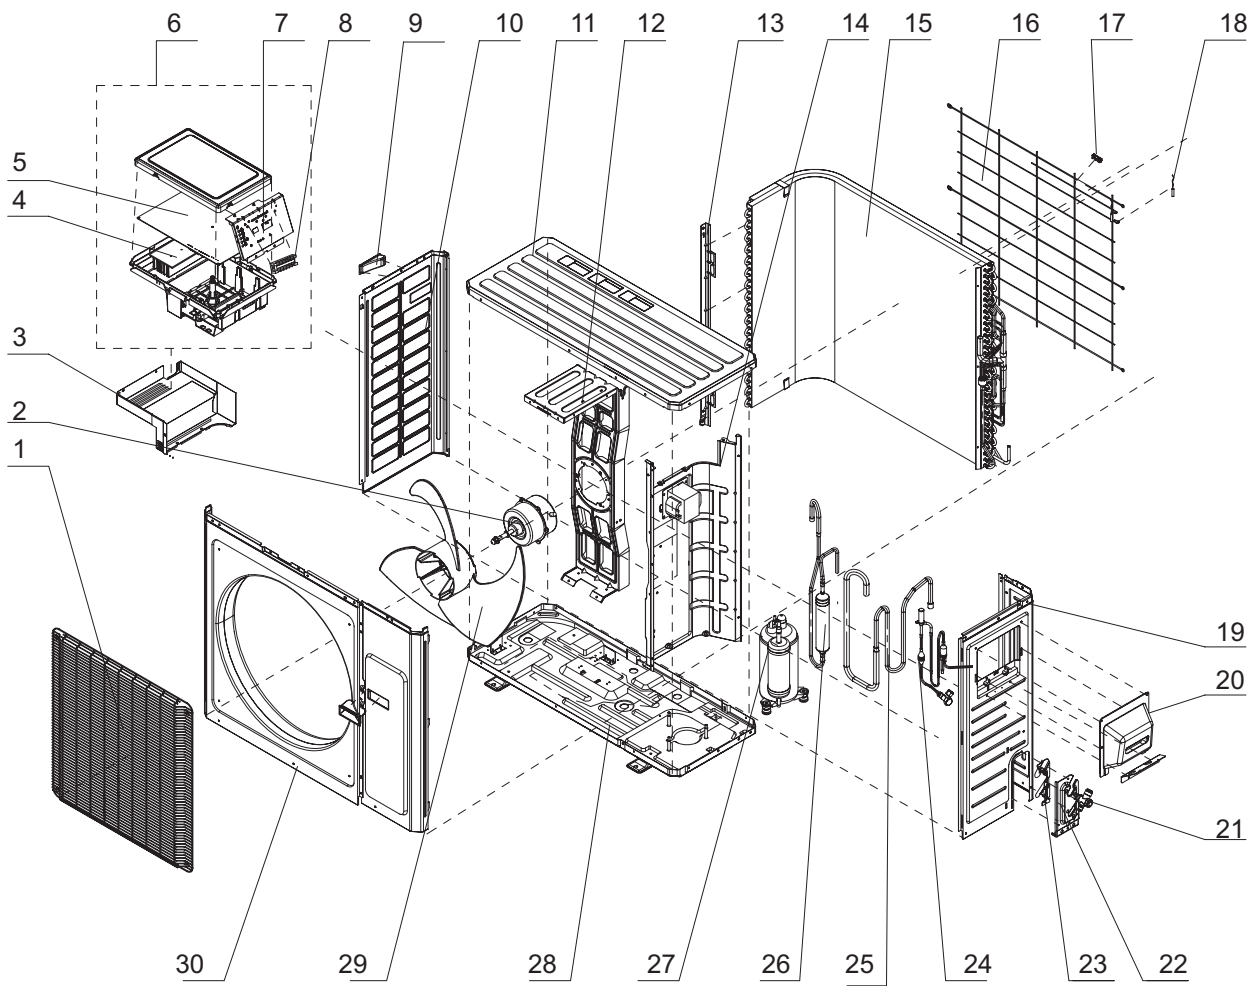


The component picture is only for reference; please refer to the actual product.

No.	Description	Part Code	Qty
		KW24CQ2B8DO	
Product Code		CB419W06500_L74316	
1	Front Grill	016004060005	1
2	Fan Motor	15010400000102	1
3	Electric Box (Fireproofing)	01413426	1
4	Radiator	49015215	1
5	Main Board	30138000874	1
6	Electric Box Assy	10000100614	1
7	Wire Clamp	71010003/71010102	1
8	Terminal Board	42200006001401	1
9	Left Handle	26233053	1
10	Left Side Plate	01305043P	1
11	Coping	01255020P	1
12	Motor Support Sub-Assy	01705079	1
13	Condenser Support Plate	01175092	1
14	Clapboard Sub-Assy	01255016	1
15	Condenser Assy	01100200498	1
16	Rear Grill	01475013	1
17	Wiring Clamp	26115004	1
18	Temperature Sensor	39000072	1
19	Right Side Plate	0130504402P	1
20	Handle Assy	02113109	1
21	Cut off Valve	07130239	1
22	Valve Support Sub-Assy	0171501201P	1
23	Baffle(Valve Support)	01365435P	1
24	Electronic Expansion Valve assy	03017400037	1
25	Inhalation Tube Sub-assy	03001000339	1
26	Discharge Tube Sub-assy	03001300336	1
27	Compressor and Fittings	00105051	1
28	Chassis Sub-assy	0280337201P	1
29	Axial Flow Fan	10335014	1
30	Cabinet	0143500401P	1

Above data is subject to change without notice.

KW18HQ2B8DO

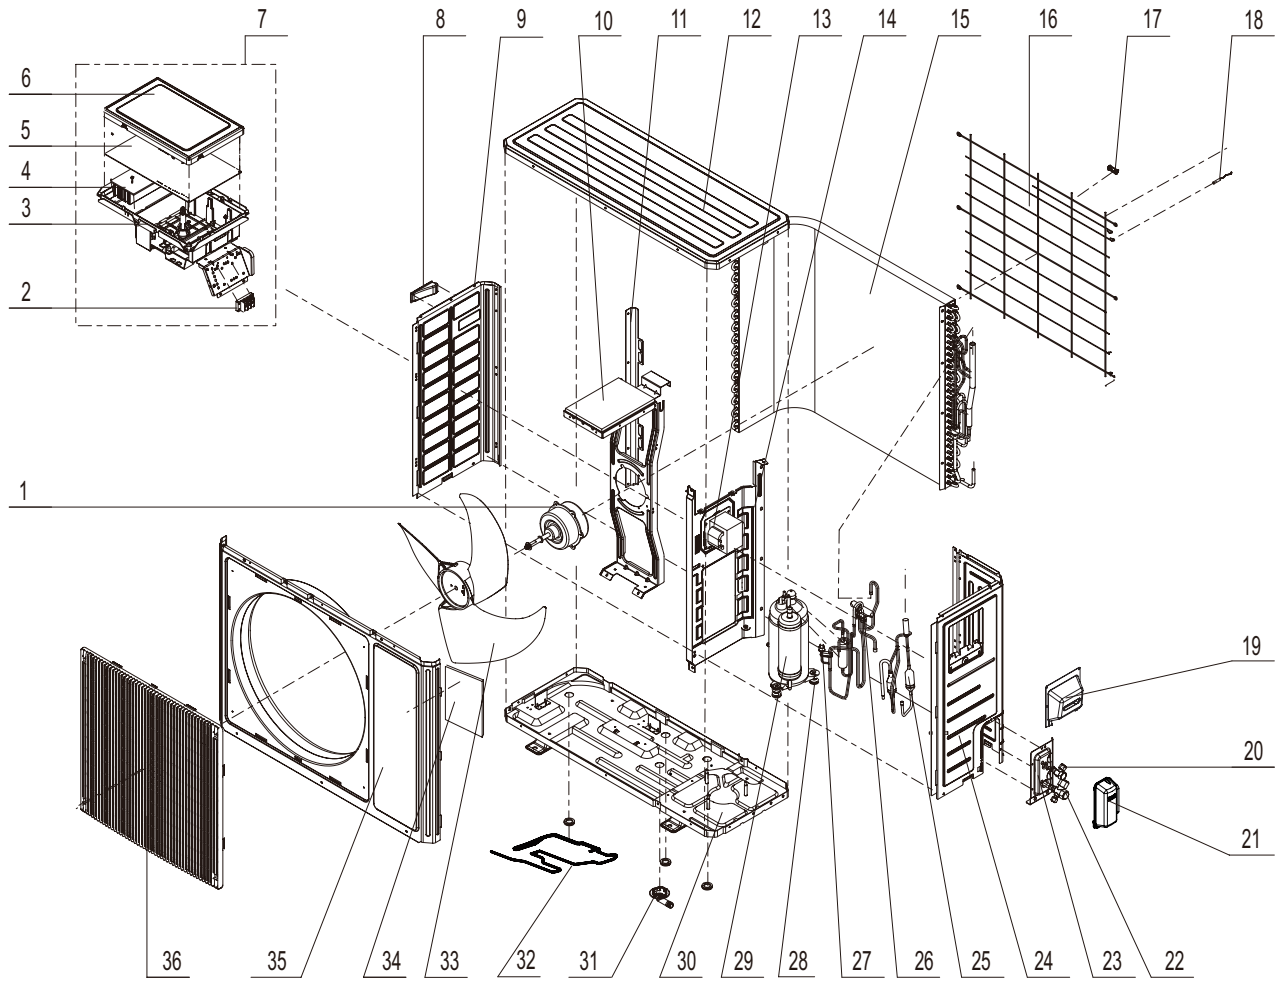

The component picture is only for reference; please refer to the actual product.

No.	Description	Part Code	Qty
		KW18HQ2B8DO	
		Product Code CB419W06700_L74316	
1	Fan Motor	1501506402	1
2	Terminal Board	42200006001401	1
3	Electric Box	20115003	1
4	Radiator	49010252	1
5	Main Board	30138000873	1
6	Electric Box Cover	20125002	1
7	Electric Box Assy	10000100632	1
8	Left Handle	26233053	1
9	Left Side Plate	01305093P	1
10	Motor Support Sub-Assy	01705067	1
11	Condenser Support Plate	01795031	1
12	Coping	012049000007P	1
13	Reactor	/	/
14	Clapboard Assy	01235081	1
15	Condenser Assy	01103000090	1
16	Rear Grill	01475020	1
17	Wiring Clamp	/	/
18	Temperature Sensor	3900030902	1
19	Handle	26233053	1
20	Cut off Valve	07130239	1
21	Valve Cover	22245002	1
22	Cut off Valve	07133844	1
23	Valve Support Sub-Assy	01705046P	1
24	Right Side Plate	0130509002P	1
25	Electronic Expansion Valve assy	03017400044	1
26	4-Way Valve Assy	03073411	1
27	Magnet Coil	4300040078	1
28	Compressor Gasket	76710247	3
29	Compressor and Fittings	00105249G	1
30	Chassis Sub-assy	01700000161P	1
31	Drainage Connector	06123401	1
32	Electrical Heater (Chassis)	7651000411	1
33	Axial Flow Fan	10335008	1
34	Insulated Board (Cover of Electric Box)	20113003	1
35	Cabinet	01433047P	1
36	Front Grill	016004000006	1




Above data is subject to change without notice.

# 11. Removal Procedure

**⚠ Warning: Be sure to wait for a minimum of 20 minutes after turning off all power supplies and discharge the refrigerant completely before removal.**




## 11.1 Removal Procedure of Indoor Unit


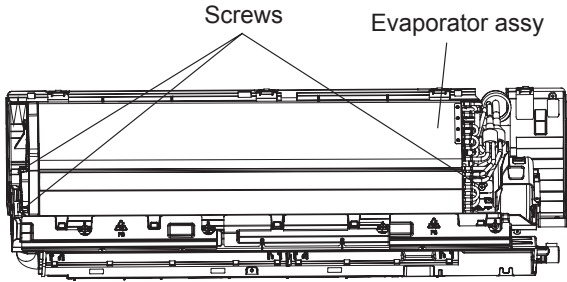
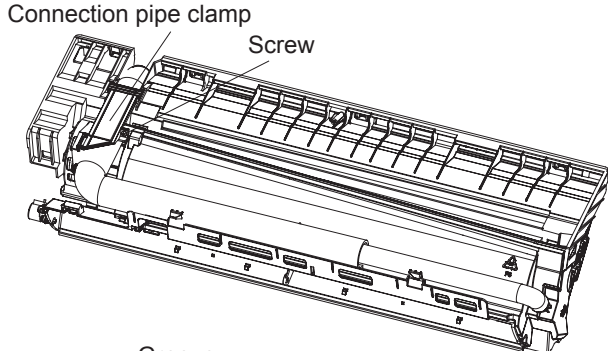
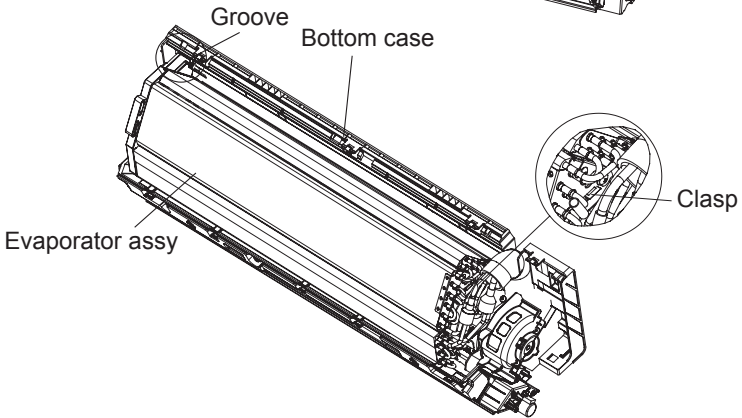
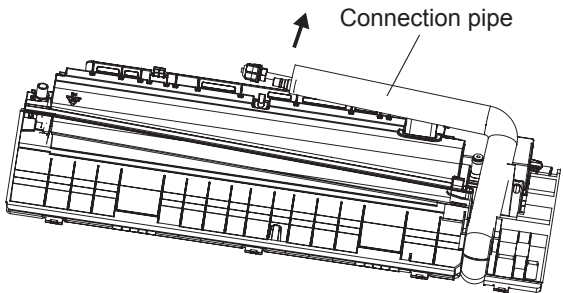
09/12K

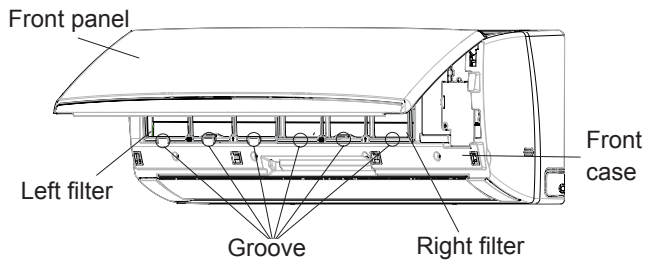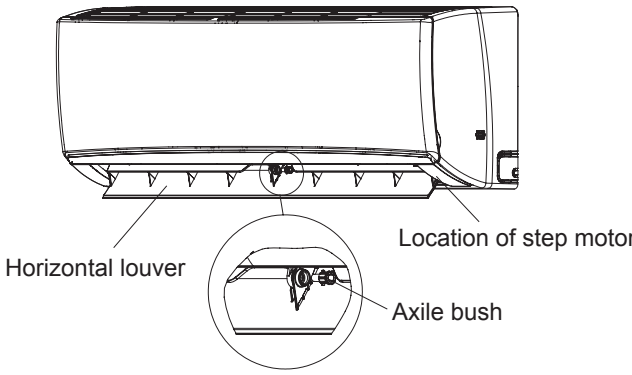
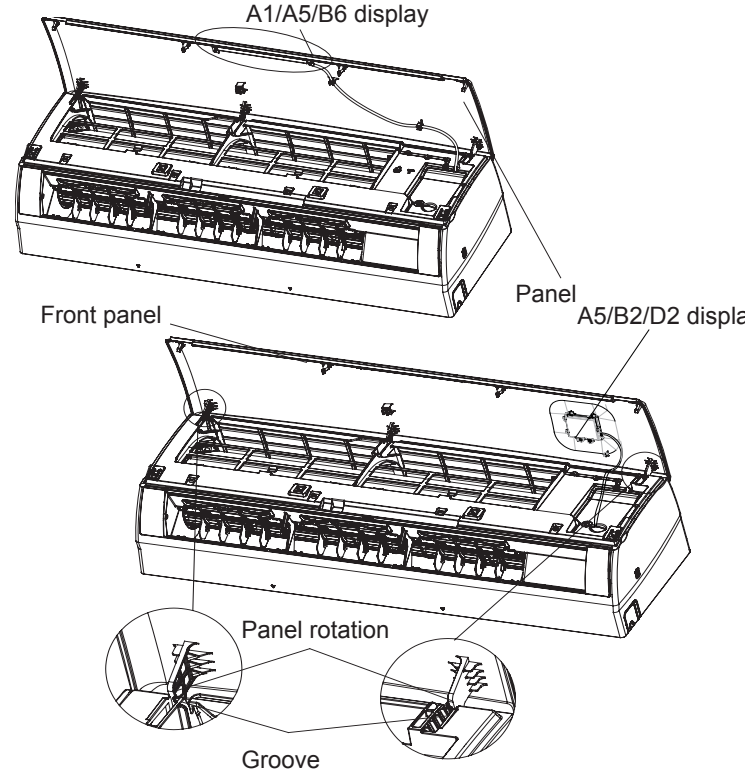
Step	Procedure	
1. Remove filter assembly	<p>Open the front panel. Push the left filter and right filter until they are separate from the groove on the front panel. Remove the left filter and right filter respectively.</p>	
2. Remove horizontal louver	<p>Push out the axle bush on horizontal louver. Bend the horizontal louver with hand and then separate the horizontal louver from the crankshaft of step motor to remove it.</p>	
3. Remove panel and display	<p>a                      (1)A1/A5 panel display: Screw off the 2 screws that are locking the display board. Separate the display board from the front panel.                      (2)B2/A5/D2 panel display: Screw off the 2 screws that are locking the display board.</p> <p>b                      Separate the panel rotation shaft from the groove fixing the front panel and then removes the front panel.</p>	

Step	Procedure	
4.	<p>Remove detecting plate and electric box cover 2</p> <p>Remove the screw fixing detecting plate and then remove the detecting plate. (only for the mode with this function)</p> <p>Note:The position of detection board(WIFI) may be different for different models.</p> <p>Remove the screw fixing electric box cover 2 and then remove the electric box cover 2.</p>	
5.	<p>Remove front case sub-assy</p> <p>a Remove the screws fixing front case.</p> <p>Note: 1.Open the screw caps before removing the screws around the air outlet. 2.The quantity of screws fixing the front case sub-assy is different for different models.</p> <p>b Loosen the connection clasps between front case sub-assy and bottom case. Lift up the front case sub-assy and take it out.</p>	
6.	<p>Remove vertical louver</p> <p>Loosen the connection clasps between vertical louver and bottom case to remove vertical louver.</p>	

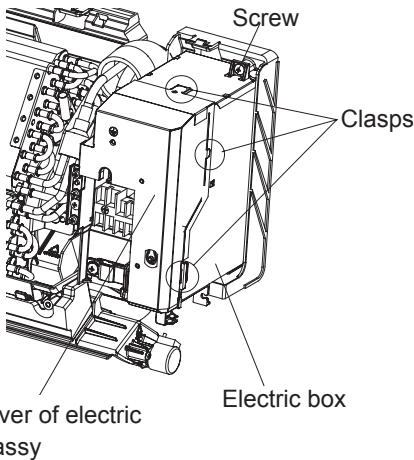
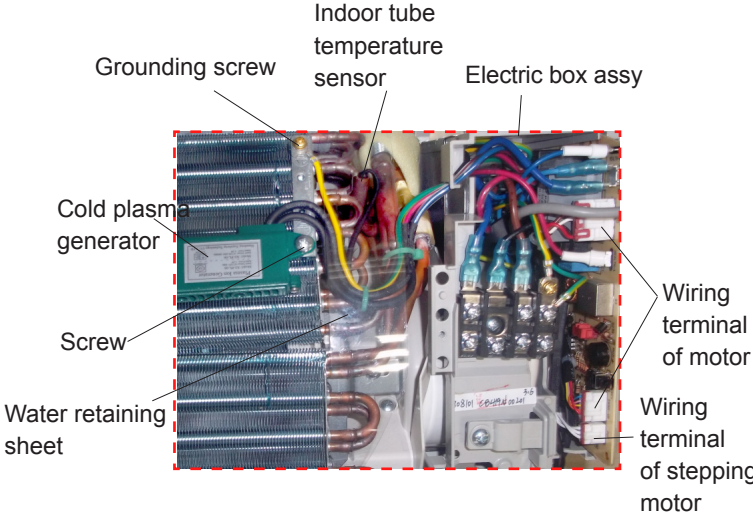
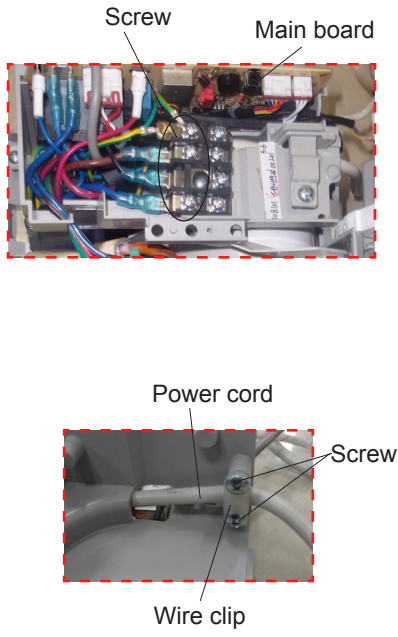


Step	Procedure
7. Remove electric box assy	
a	<p>Loosen the connection clasps between shield cover of electric box sub-assy and electric box, and then remove the shield cover of electric box sub-assy. Remove the screw fixing electric box assy .</p> 
b	<p>① Take off the water retaining sheet. Remove the cold plasma generator by screwing off the locking screw on the generator. ② Take off the indoor tube temperature sensor. ③ Screw off 1 grounding screw. ④ Remove the wiring terminals of motor and stepping motor. ⑤ Remove the electric box assy.</p> 
c	<p>Twist off the screws that are locking each lead wire and rotate the electric box assy. Twist off the screws that are locking the wire clip. Loosen the power cord and remove its wiring terminal. Lift up the main board and take it off.</p> 




Step	Procedure	
	<p>Instruction: Some wiring terminal of this product is with lock catch and other devices. The pulling method is as below:</p> <ol style="list-style-type: none"> <li>1.Remove the soft sheath for some terminals at first, hold the circlip and then pull out the terminals.</li> <li>2.Pull out the holder for some terminals at first (holder is not available for some wiring terminal), hold the connector and then pull the terminal.</li> </ol>	 <p>Labels: circlip, soft sheath, holder, connector</p>
8. Remove evaporator assy		
a	Remove 3 screws fixing evaporator assy.	 <p>Labels: Screws, Evaporator assy</p>
b	At the back of the unit, remove the screw fixing connection pipe clamp and then remove the connection pipe clamp.	 <p>Labels: Connection pipe clamp, Screw</p>
c	First remove the left side of the evaporator from the groove of bottom case and then remove the right side from the clasp on the bottom case.	 <p>Labels: Groove, Bottom case, Evaporator assy, Clasp</p>
d	Adjust the position of connection pipe on evaporator slightly and then lift the evaporator upwards to remove it.	 <p>Labels: Connection pipe</p>



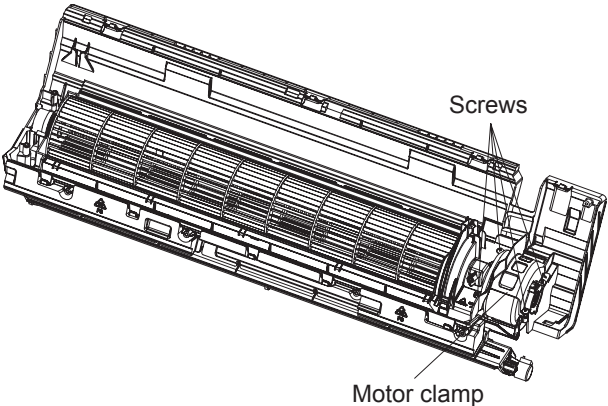
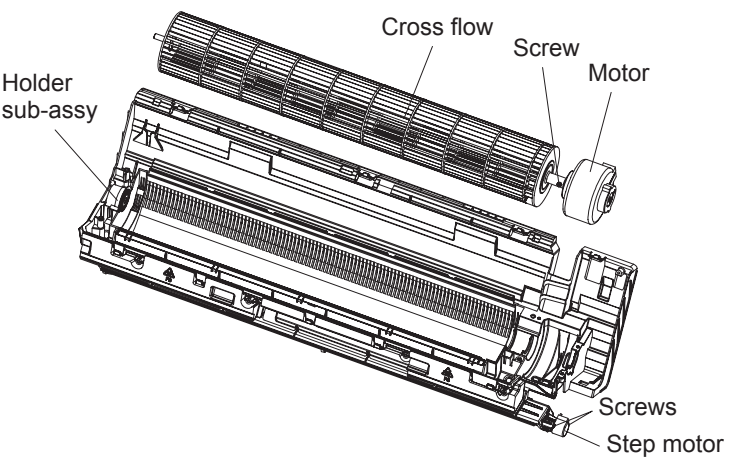
Step	Procedure	
9. Remove motor and cross flow blade		
a	Remove the screws fixing motor clamp and then remove the motor clamp.	
b	Remove the screws at the connection place of cross flow blade and motor; lift the motor and cross flow blade upwards to remove them. Remove the bearing holder sub-assy. Remove the screw fixing step motor and then remove the step motor.	

18/24K

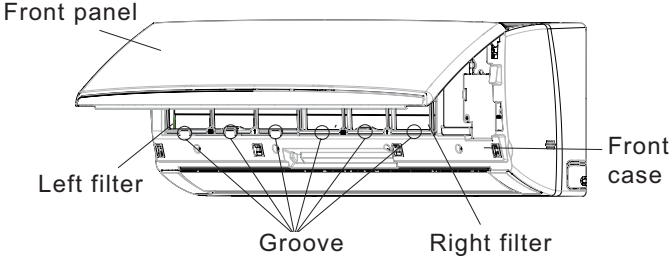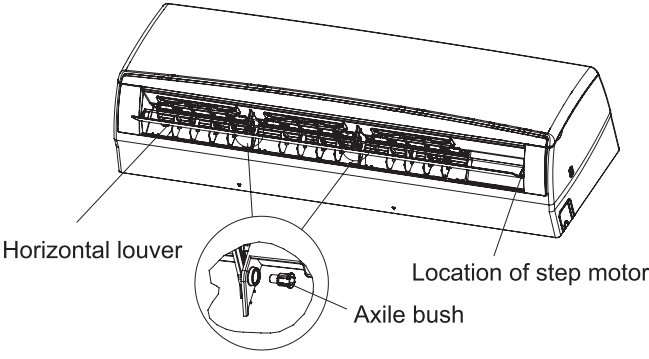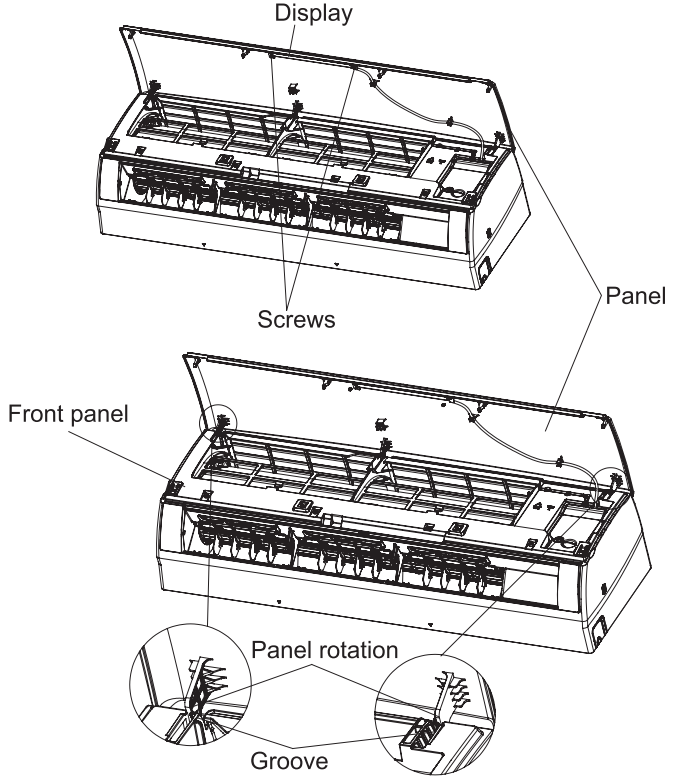Step	Procedure
1. Remove filter assy	
	<p>Open the front panel. Push the left and right filters to make them break away from the groove on the front case. Then remove the left and right filters one by one.</p>  <p>Labels in diagram: Front panel, Left filter, Groove, Right filter, Front case.</p>
2. Remove horizontal louver	
	<p>Push out the axle bush on horizontal louver. Bend the horizontal louver with hand and then separate the horizontal louver from the crankshaft of step motor to remove it.</p>  <p>Labels in diagram: Horizontal louver, Location of step motor, Axile bush.</p>
3. Remove panel	
<p>a</p> <p>b</p>	<p>Screw off the 2 screws that are locking the display board. Separate the display board from the front panel.</p> <p>Separate the panel rotation shaft from the groove fixing the front panel and then removes the front panel.</p>  <p>Labels in top diagram: Display, Panel, Screws.</p> <p>Labels in bottom diagram: Front panel, Panel rotation, Groove.</p>

Step	Procedure	
4. Remove electric box cover 2 and detecting plate(WIFI)	<p>Remove the screws on the electric box cover 2 and detecting plate(WIFI), to remove the electric box cover 2 and detecting plate(WIFI).</p>	<p>Electric box cover 2</p> <p>Screw</p> <p>Screws</p> <p>Detecting plate (WIFI)</p>
5. Remove front case sub-assy	<p>a Remove the screws fixing front case.</p> <p>Note: 1.Open the screw caps before removing the screws around the air outlet. 2.The quantity of screws fixing the front case sub-assy is different for different models.</p> <p>b Loosen the connection clasps between front case sub-assy and bottom case. Lift up the front case sub-assy and take it out.</p>	<p>Screws</p> <p>Front case sub-assy</p> <p>Screw</p> <p>Screw caps</p> <p>Clasp</p> <p>Front case sub-assy</p>
6. Remove vertical louver	<p>Loosen the connection clasps between vertical louver and bottom case to remove vertical louver.</p> <p>Screw off the screws that are locking the swing motor and take the motor off.</p>	<p>Vertical louver</p> <p>Bottom case</p> <p>Swing motor</p> <p>Screws</p> <p>Clasps</p>

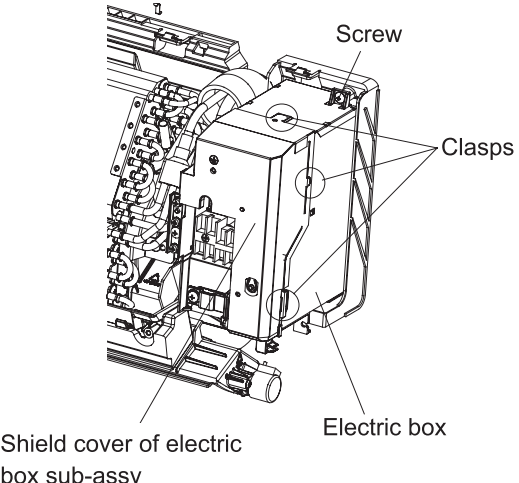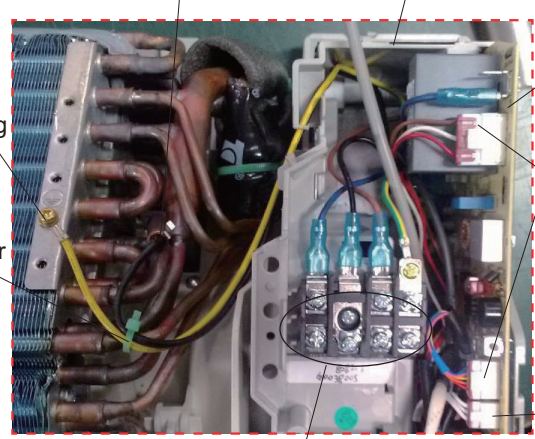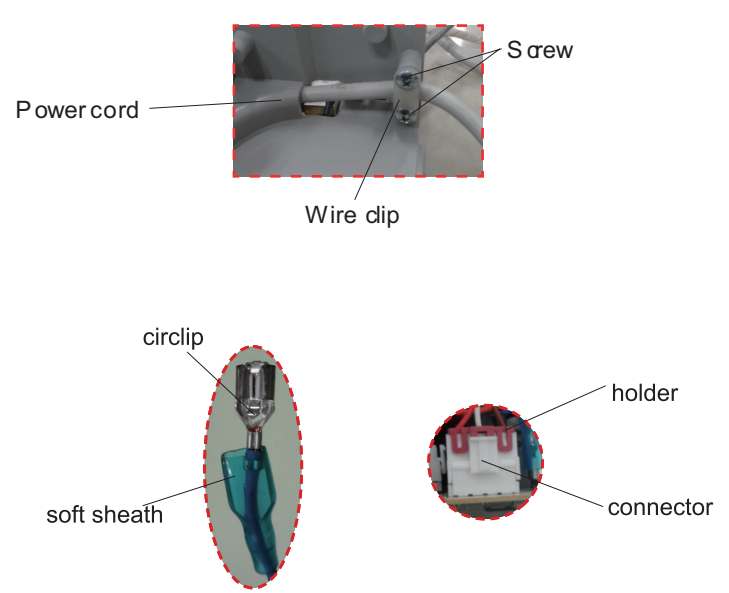Step	Procedure	Image
7. Remove electric box assy		
a	<p>Loosen the connection clasps between shield cover of electric box sub-assy and electric box, and then remove the shield cover of electric box sub-assy. Remove the screw fixing electric box assy .</p>	 <p>Screw Clasps Shield cover of electric box sub-assy Electric box</p>
b	<ol style="list-style-type: none"> <li>① Cut off the wire binder and pull out the indoor tube temperature sensor.</li> <li>② Screw off one grounding screw.</li> <li>③ Remove the wiring terminals of motor and stepping motor.</li> <li>④ Remove the electric box assy.</li> <li>⑤ Screw off the screws that are locking each lead wire.</li> </ol>	 <p>Indoor tube temperature sensor Electric box assy Main board Wiring terminal of motor Wiring terminal of stepping motor Screw Grounding screw Wire binder</p>
c	<p>Rotate the electric box assy. Twist off the screws that are locking the wire clip and loosen the power cord. Remove the wiring terminal of power cord. Lift up the main board and take it off.</p> <p>Instruction: Some wiring terminal of this product is with lock catch and other devices. The pulling method is as below: 1.Remove the soft sheath for some terminals at first, hold the circlip and then pull out the terminals. 2.Pull out the holder for some terminals at first (holder is not available for some wiring terminal), hold the connector and then pull the terminal.</p>	 <p>Screw Power cord Wire clip circlip soft sheath holder connector</p>

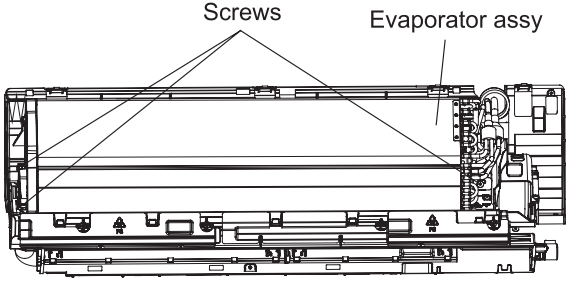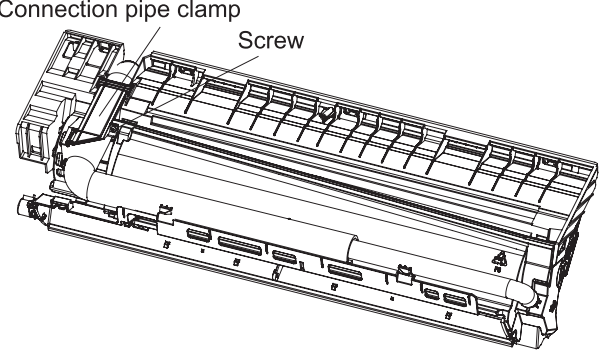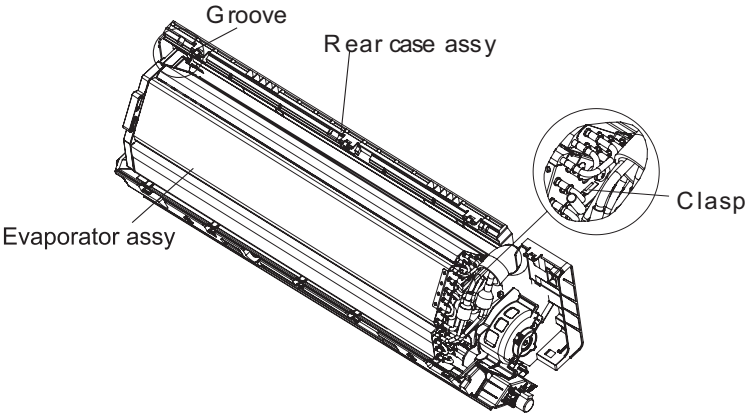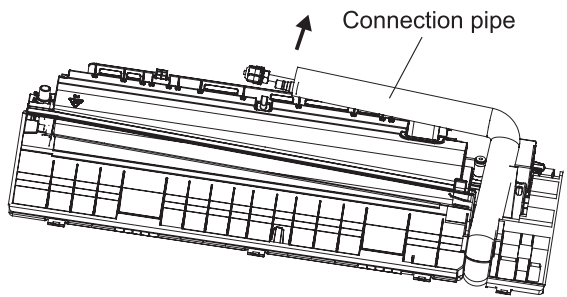Step	Procedure
8. Remove evaporator assy	
a	<p>Remove 3 screws fixing evaporator assy.</p> 
b	<p>At the back of the unit, remove the screw fixing connection pipe clamp and then remove the connection pipe clamp.</p> 
c	<p>First remove the left side of evaporator from the groove on the rear case assy. Then remove the right side from the clasp on the rear case assy.</p> 
d	<p>Adjust the position of connection pipe on evaporator slightly and then lift the evaporator upwards to remove it.</p> 











## 11.2 Removal Procedure of Outdoor Unit




**⚠ Warning: Be sure to wait for a minimum of 20 minutes after turning off all power supplies and discharge the refrigerant completely before removal.**

09/12K

NOTE: Take heat pump for example.

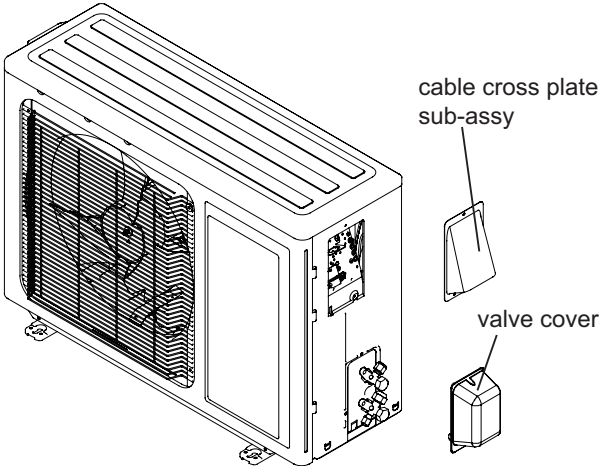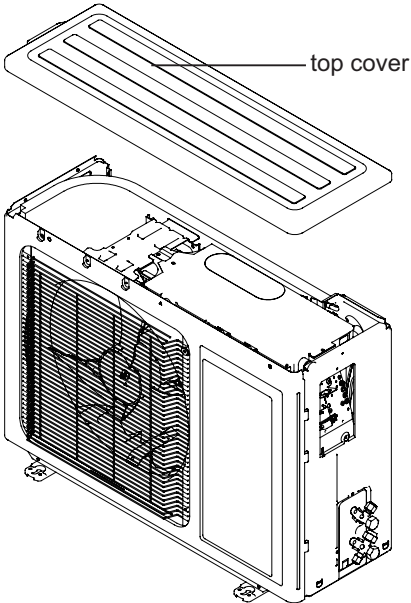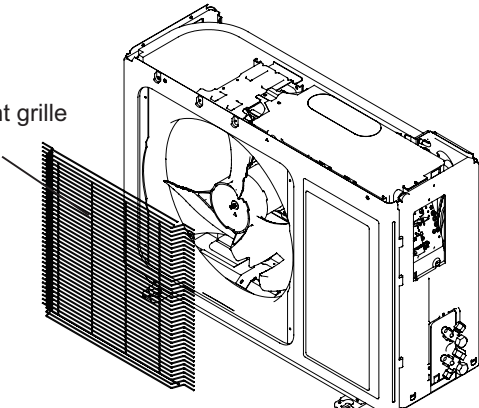Steps	Procedure
<p><b>1.Remove cable cross plate sub-assy and valve cover</b></p>	<p>Remove the screws fixing cable cross plate sub-assy and then remove the cable cross plate sub-assy.</p> <p>Remove the screws fixing valve cover and then remove the valve cover.</p>  <p>Labels: cable cross plate sub-assy, valve cover</p>
<p><b>2.Remove top cover</b></p>	<p>Remove connection screws connecting the top cover plate with the front panel and the right side plate, and then remove the top cover.</p>  <p>Label: top cover</p>
<p><b>3.Remove front grille</b></p>	<p>Remove connection screws between the front grille and the front panel. Then remove the front grille.</p>  <p>Label: front grille</p>

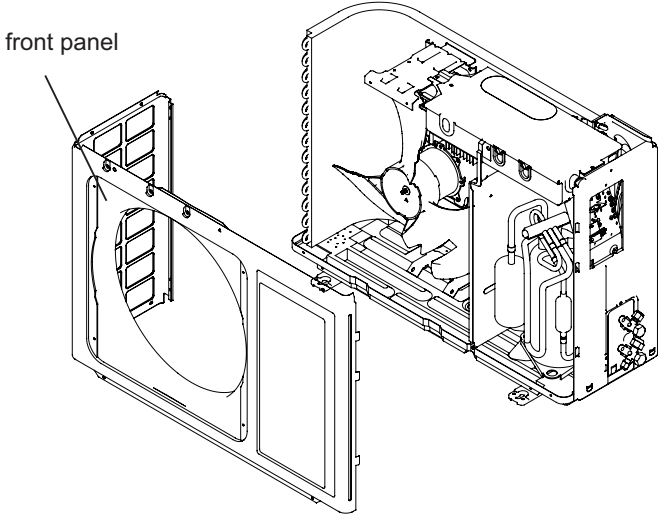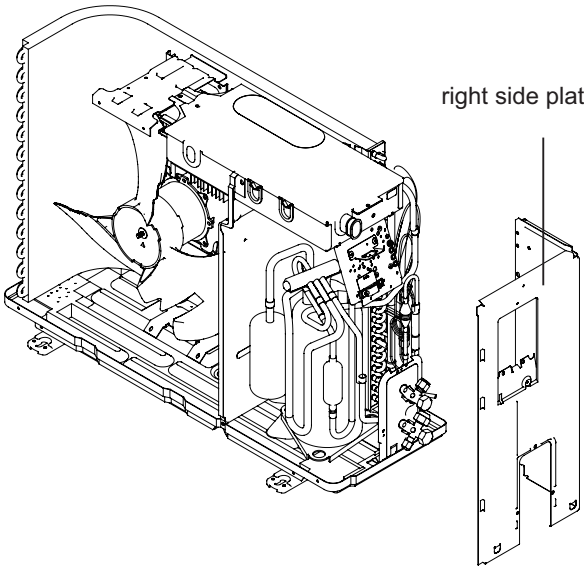
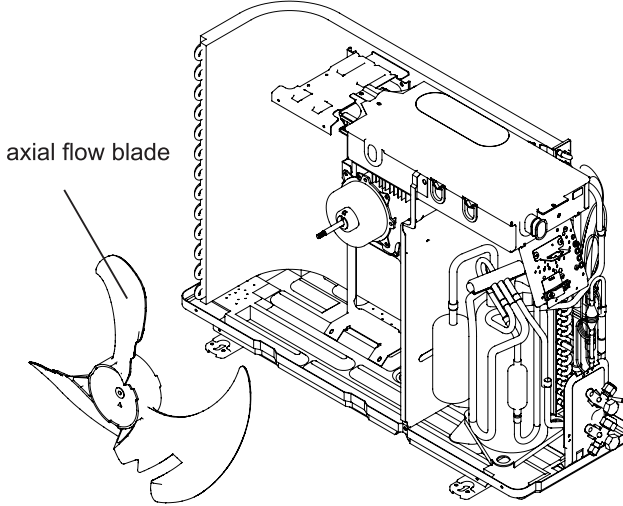
Steps	Procedure
<p><b>4.Remove front panel</b></p>	<p>Remove connection screws connecting the front panel with the chassis and the motor support, and then remove the front panel.</p> 
<p><b>5.Remove right side plate</b></p>	<p>Remove connection screws connecting the right side plate with the valve support and the electric box. Then remove the right side plate.</p> 
<p><b>6.Remove axial flow blade</b></p>	<p>Remove the nut fixing the blade and then remove the axial flow blade.</p> 

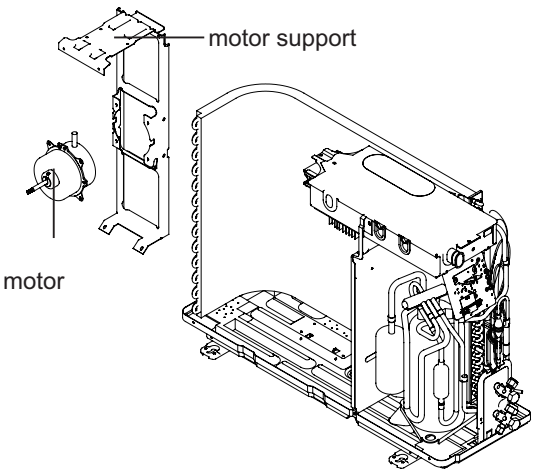
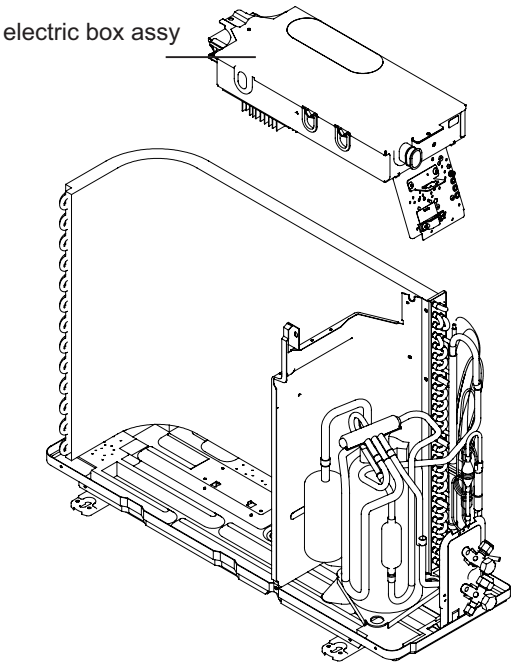
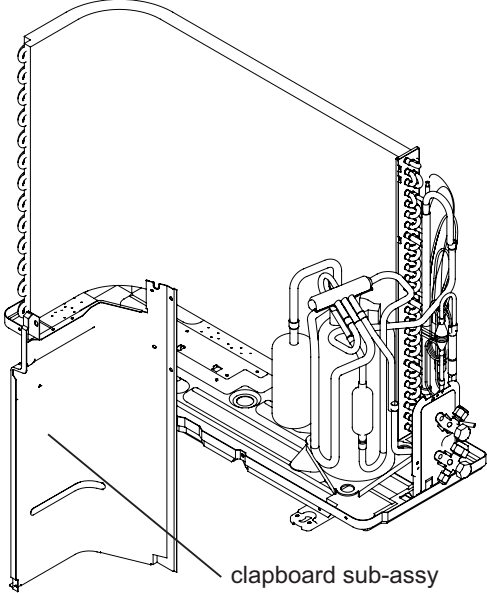
Steps	Procedure
<p><b>7.Remove motor and motor support</b></p>	<p>Remove the 4 tapping screws fixing the motor. Pull out the lead-out wire and remove the motor. Remove the 2 tapping screws fixing the motor support. Lift motor support to re-move it.</p> 
<p><b>8.Remove electric box assy</b></p>	<p>Remove the 2 screws fixing the cover of electric box. Lift to remove the cover. Loosen the wire and disconnect the terminal. Lift to re-move the electric box assy.</p> 
<p><b>9.Remove clapboard sub-assy</b></p>	<p>Loosen the screws of the clapboard sub-assy. The clapboard sub-assy has a hook on the lower side. Lift and pull the clapboard sub-assy to remove.</p> 








KW09HQ1B8DO  
 KW12HQ1B8DO  
 KW12CQ1B8DO  
 KW09HQ3B8DO  
 KW12HQ3B8DO  
 KW18HQ2B8DO

NOTE: Take heat pump for example.

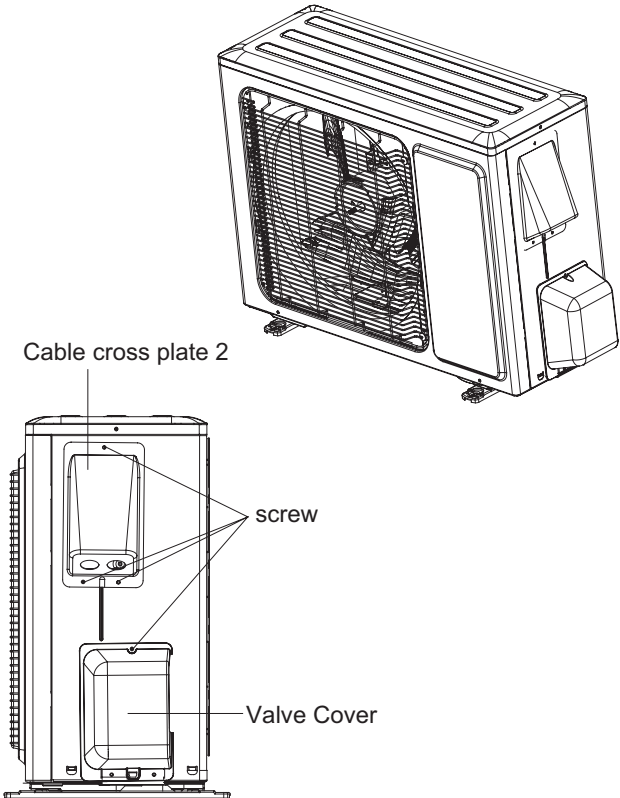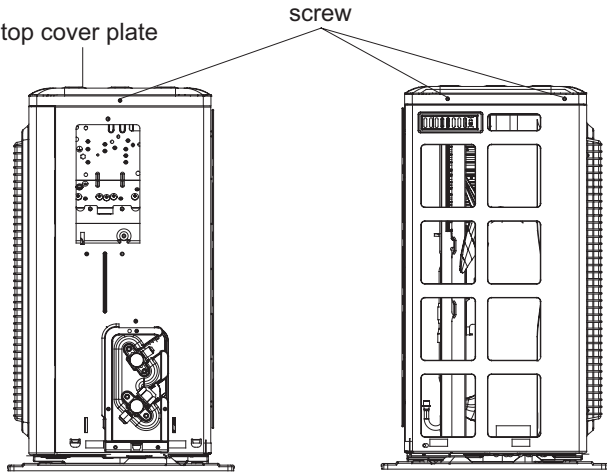Steps	Procedure
<p><b>1.Remove cable cross plate 2 and valve cover</b></p>	<p>Before disassemble.</p> <p>Remove 3 connection screw fixing cable cross plate 2 and then remove the Cable cross plate 2.</p> <p>Remove 1 connection screw fixing valve cover and then remove the valve cover.</p> 
<p><b>2.Remove top cover</b></p>	<p>Remove 3 connection screws among top cover plate, front panel and right side plate. Then remove top cover plate.</p> 

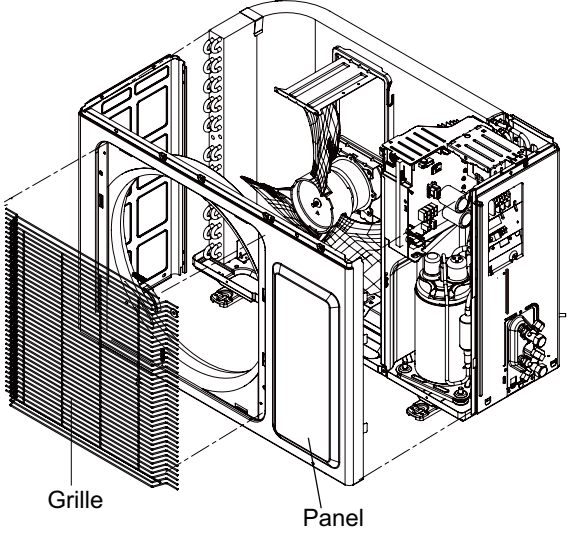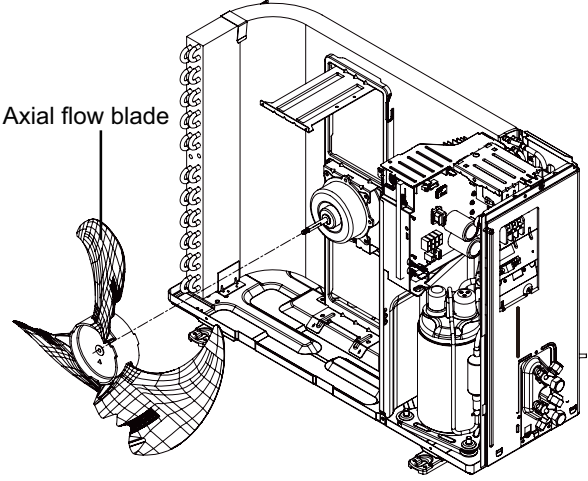
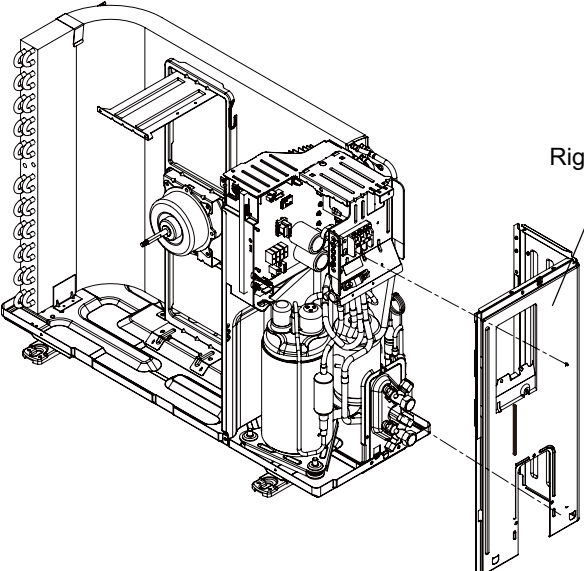
Steps	Procedure
<p><b>3.Remove grille and front panel</b></p>	<p>Remove connection screws between the front grille and the front panel. Then remove the front grille. Remove connection screws connecting the front panel with the chassis and the motor support, and then remove the front panel.</p>  <p>Grille</p> <p>Panel</p>
<p><b>4.Remove axial flow blade</b></p>	<p>Remove the nut fixing the blade and then remove the axial flow blade.</p>  <p>Axial flow blade</p>
<p><b>5.Remove right side plate</b></p>	<p>Remove connection screws connecting the right side plate with the valve support and the electric box. Then remove the right side plate.</p>  <p>Right side plate</p>

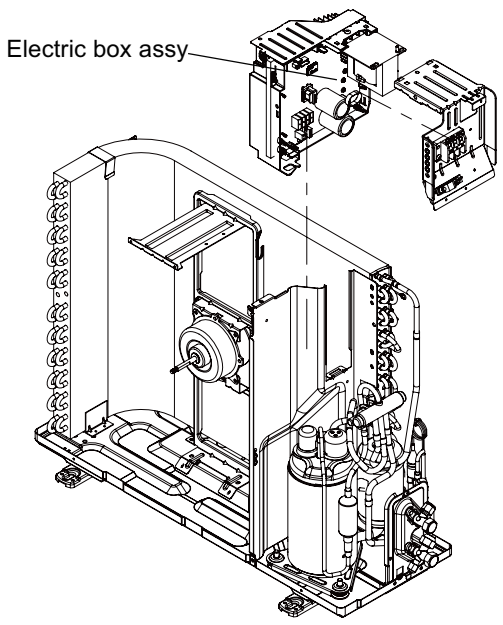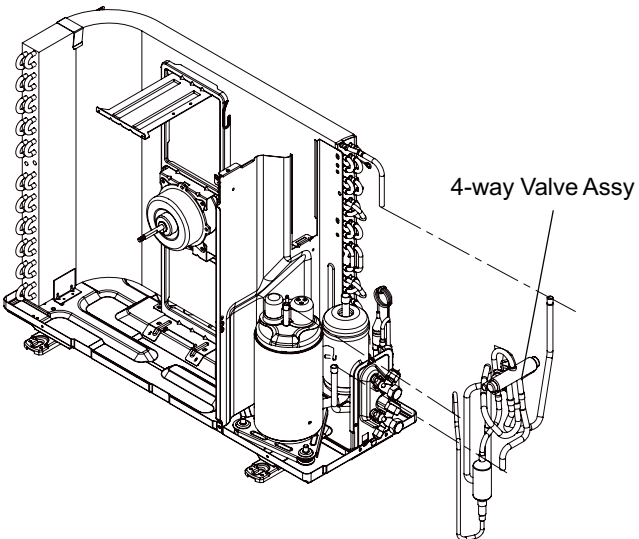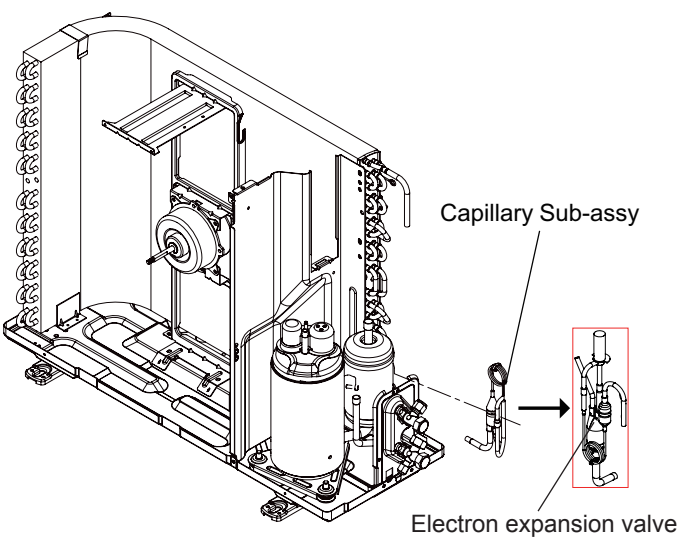Steps	Procedure
<p><b>6.Remove electric box assy</b></p>	<p>Remove the 2 screws fixing the cover of electric box. Lift to remove the cover. Loosen the wire and disconnect the terminal. Lift to remove the electric box assy.</p> 
<p><b>7.Remove 4-way valve assy</b></p>	<p>Unscrew the fastening nut of the 4-way Valve Assy coil and remove the coil. Wrap the 4-way Valve Assy with wet cotton and unsolder the 4 weld spots connecting the 4-way Valve Assy to take it out.(Note: Refrigerant should be discharged firstly.) Welding process should be as quickly as possible and keep wrapping cotton wet all the time. Be sure not to burn out the lead-out wire of compressor.</p> 
<p><b>8.Remove capillary sub-assy</b></p>	<p>Unsolder weld point of capillary Sub-assy, valve and outlet pipe of condensator. Then remove the capillary Sub-assy. Do not block the capillary when unsoldering it. (Note: before unsoldering, discharge refrigerants completely)</p> 

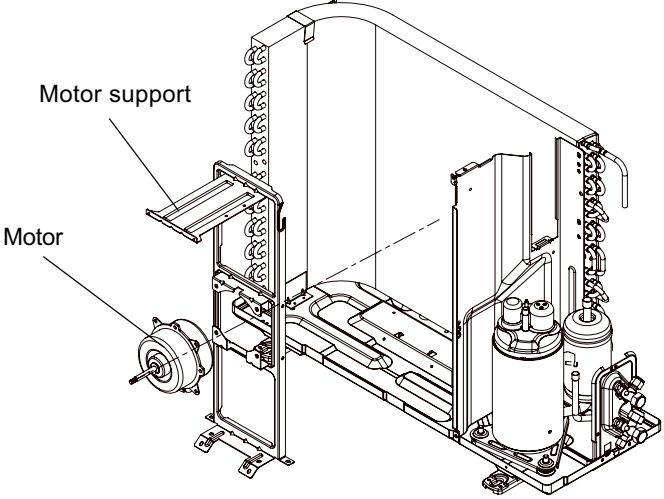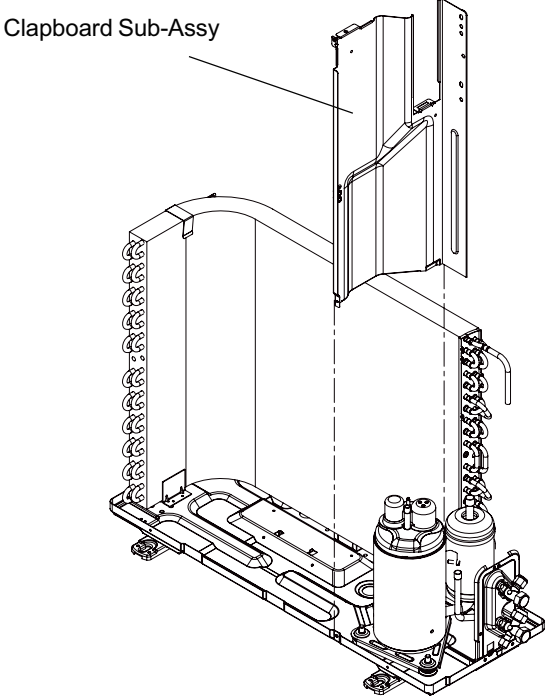Steps	Procedure
<p><b>9.Remove motor and motor support</b></p>	<p>Remove the 4 tapping screws fixing the motor. Pull out the lead-out wire and remove the motor. Remove the 2 tapping screws fixing the motor support. Lift motor support to remove it.</p> 
<p><b>10.Remove clapboard sub-assy</b></p>	<p>Loosen the screws of the Clapboard Sub-Assy . The Clapboard Sub-Assy has a hook on the lower side. Lift and pull the Clapboard Sub-Assy to remove.</p> 








Steps	Procedure
<b>11.Remove Compressor</b>	
<p>a</p>	<p>Remove the 2 screws fixing the gas valve. Unsolder the welding spot connecting gas valve and air return pipe and remove the gas valve. (Note: it is necessary to warp the gas valve when unsoldering the welding spot.) Remove the 2 screws fixing liquid valve. Unsolder the welding spot connecting liquid valve and remove the liquid valve.</p>
<p>b</p>	<p>Remove the 3 footing screws of the compressor and remove the compressor.</p>


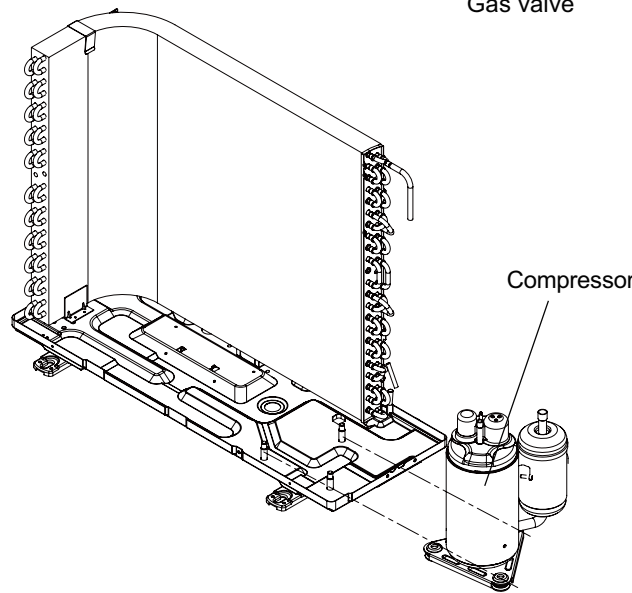
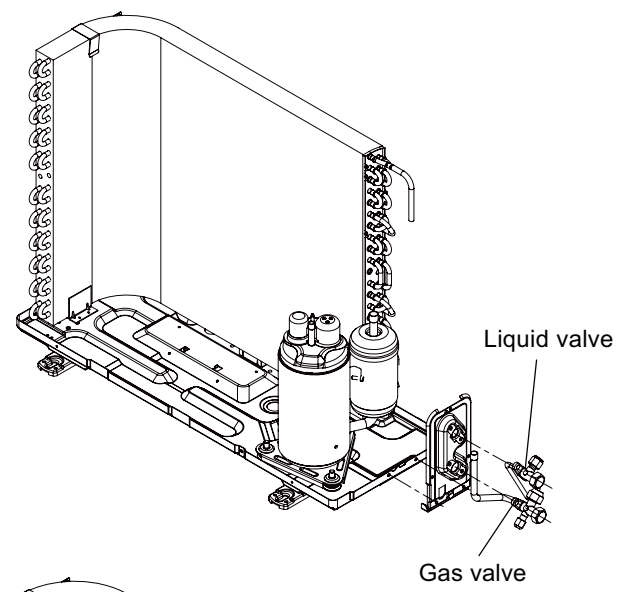





KW09HQ1B8DO KW12HQ1B8DO  
 KW12CQ1B8DO KW09HQ3B8DO  
 KW12HQ3B8DO KW18CQ2B8DO  
 KW18HQ2B8DO




NOTE: Take heat pump for example.

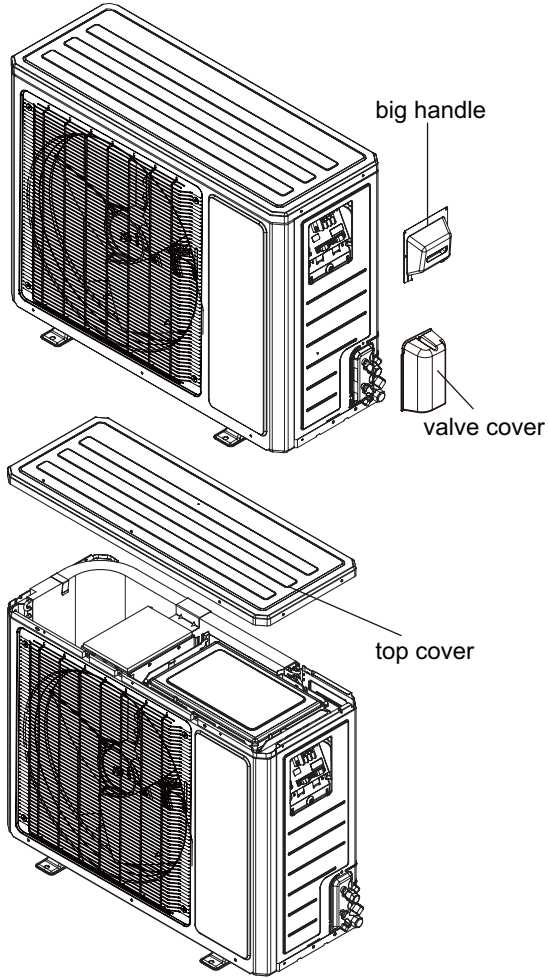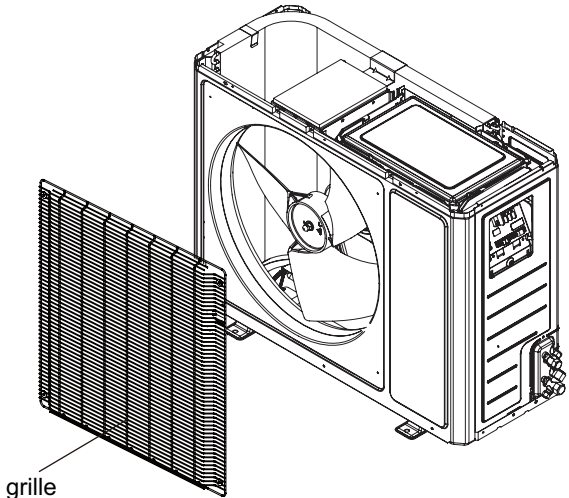Steps	Procedure	
<p>1. Remove big handle, valve cover and top cover</p>	<p>a Remove the screw connecting the big handle and right side plate, and then remove the big handle. Remove the screw connecting the valve cover and right side plate, and then remove the valve cover.</p> <p>b Remove the screws connecting the top cover with outer case, right side plate and left side plate; lift the top cover upwards to remove it.</p>	 <p>The diagram illustrates the removal of three components from the heat pump unit. In the top view, the 'big handle' and 'valve cover' are shown being detached from the right side plate. In the bottom view, the 'top cover' is shown being lifted upwards from the main unit casing.</p>
<p>2. Remove grille and outer case</p>	<p>Remove the 4 screws connecting the grille and outer case, and then remove the panel grille.</p>	 <p>The diagram shows the 'grille' being removed from the front of the heat pump unit. The grille is a rectangular panel with a grid pattern, and it is shown being lifted away from the unit's outer case.</p>

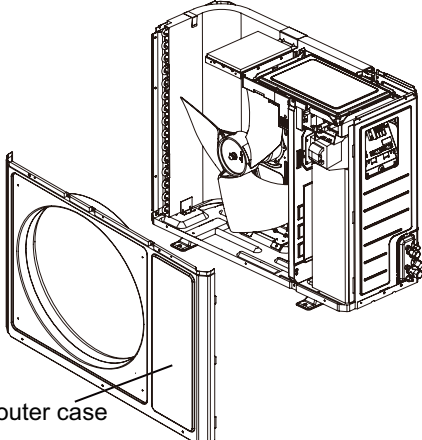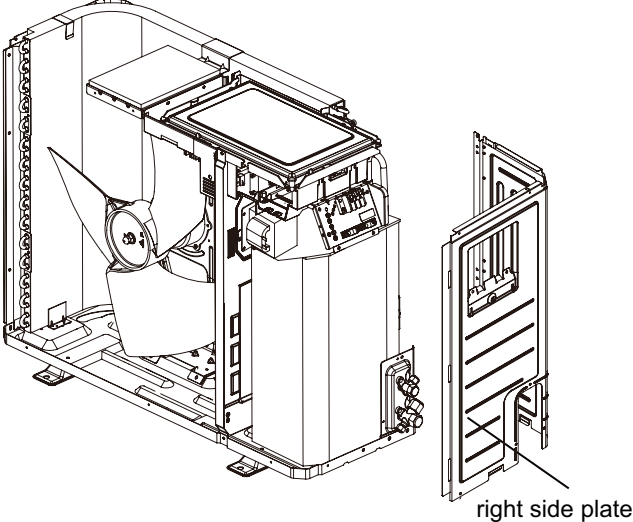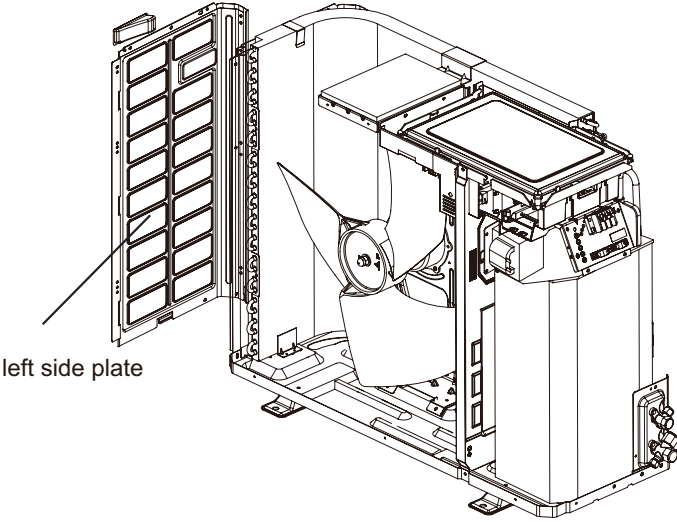Steps	Procedure	
	<p>Remove the screws connecting the outer case with motor support, isolation plate and chassis; lift the outer case upwards; loosen the clasps of outer case with right side plate and left side plate, and then remove the outer case.</p>	 <p>outer case</p>
<p>3. Remove right&amp;left side plate</p>		
<p>a</p>	<p>Remove the screws connecting the right side plate with electric box assy, valve support, chassis and condenser side plate, and then remove the right side plate.</p>	 <p>right side plate</p>
<p>b</p>	<p>Remove the screws connecting the left side plate with chassis, and then remove the left side plate.</p>	 <p>left side plate</p>

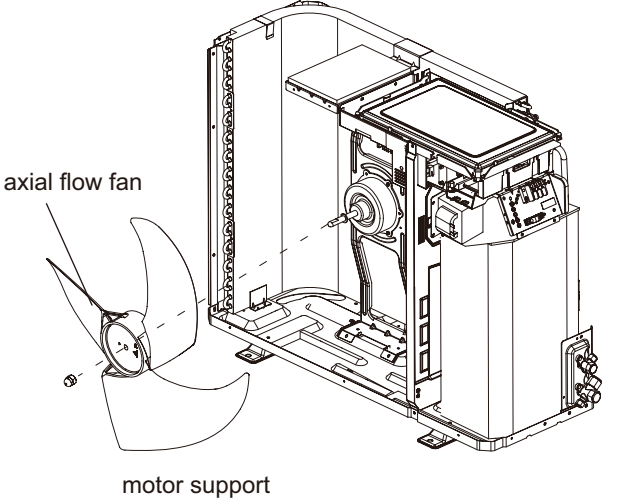
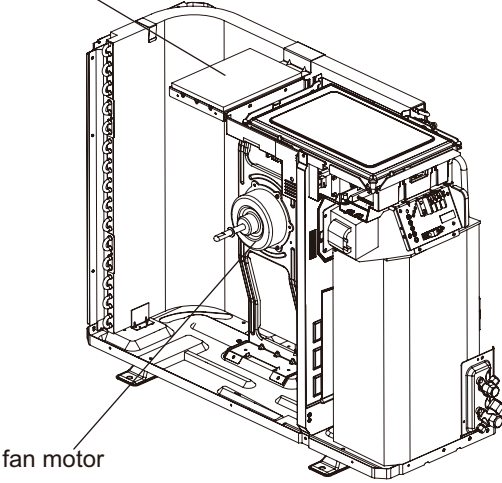
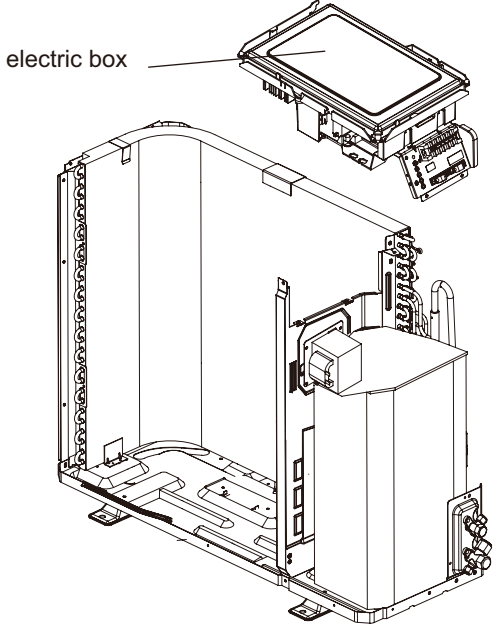
Steps	Procedure	
4. Remove axial flow blade		
a	<p>Remove the nut fixing axial flow blade and then remove the blade.</p>	 <p>axial flow fan</p> <p>motor support</p>
b	<p>Remove the 6 screws fixing the motor and then remove the motor. Remove the 2 screws connecting the motor support and chassis, and then loosen the stopper to remove the motor support.</p>	 <p>fan motor</p>
5. Remove electric box		
	<p>Remove the screws fixing the electric box sub-assy; loosen the wire bundle; pull out the wiring terminals and then pull the electric box upwards to remove it.</p>	 <p>electric box</p>

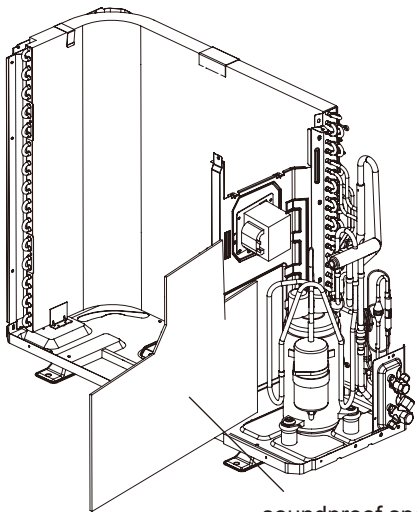
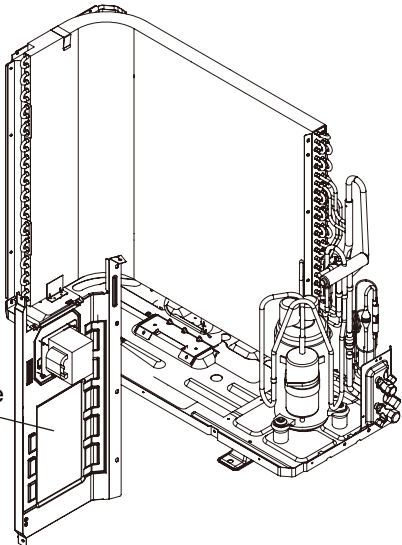
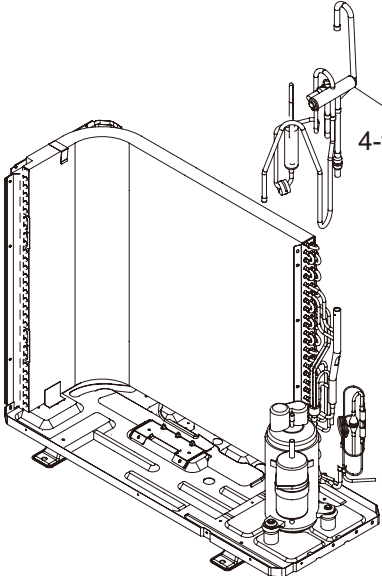
Steps	Procedure	
6. Remove the soundproof sponge	<p>Tear off the sticking stripe and then remove the soundproof sponge.</p>	 <p>soundproof sponge</p>
7. Remove isolation plate	<p>Remove the 2 screws connecting the isolation plate and condenser side plate; remove the 3 screws connecting the isolation plate and chassis, and then remove the isolation plate.</p>	 <p>isolation plate</p>
8. Remove 4-way valve assy	<p>Unsolder the welding joints connecting the 4-way valve assy with capillary sub-assy, compressor and condenser; remove the 4-way valve.</p> <p>Note: Before unsoldering the welding joint, wrap the 4-way valve with a wet cloth completely to avoid damage to the valve caused by high temperature.</p>	 <p>4-way valve assy</p>

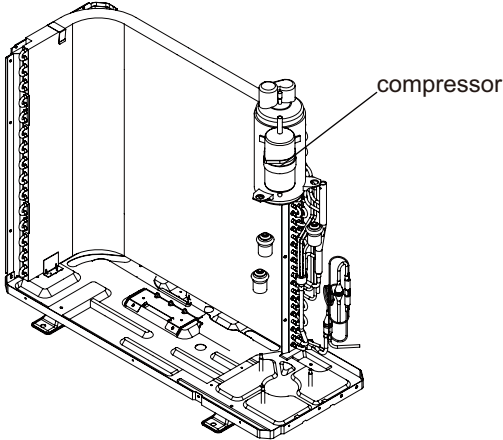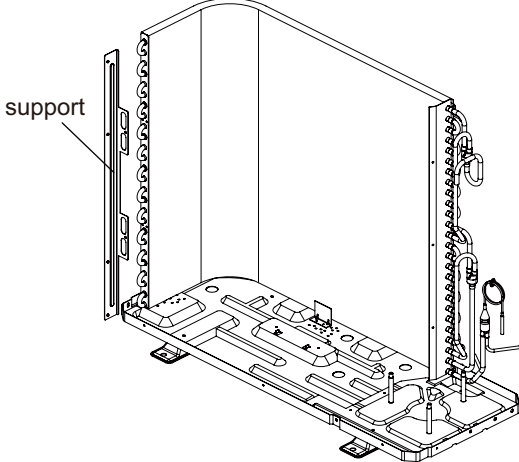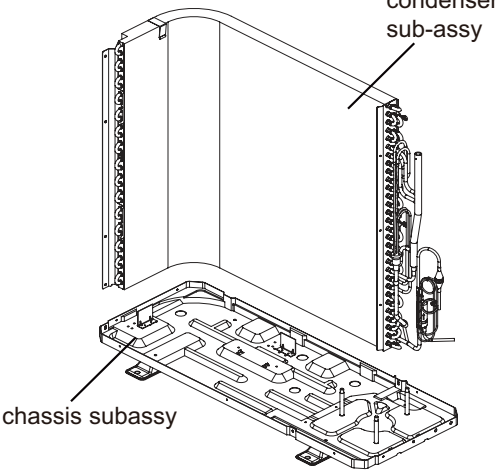Steps	Procedure
9. Remove compressor	<p>Remove the 3 foot nuts fixing compressor and then lift the compressor upwards to remove the compressor and damping cushion.</p> <p>Note: Keep the ports of discharge pipe and suction pipe from foreign objects.</p>  <p>The diagram shows a perspective view of the chassis sub-assembly with the compressor being lifted upwards. A label 'compressor' points to the vertical cylindrical component being removed.</p>
10. Remove condenser sub-assy	<p>a Remove the screws connecting the support (condenser) and condenser assy, and then remove the support (condenser).</p>  <p>The diagram shows the condenser support being removed from the chassis sub-assembly. A label 'support' points to the vertical frame component.</p> <p>b Remove the 2 screws fixing the condenser and chassis, and then lift the condenser upwards to remove it.</p>  <p>The diagram shows the condenser sub-assembly being lifted from the chassis sub-assembly. Labels 'condenser sub-assy' and 'chassis subassy' point to their respective parts.</p>



KW24HQ2B8DO KW24CQ2B8DO




NOTE: Take heat pump for example.

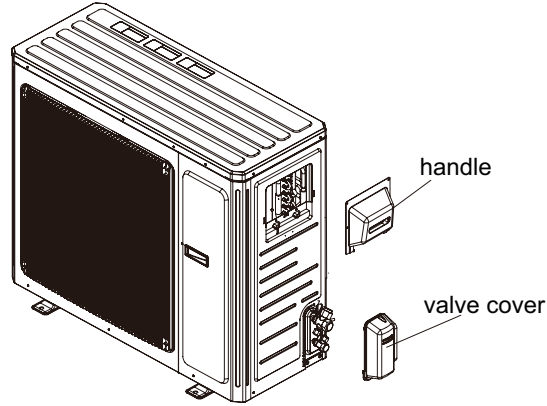
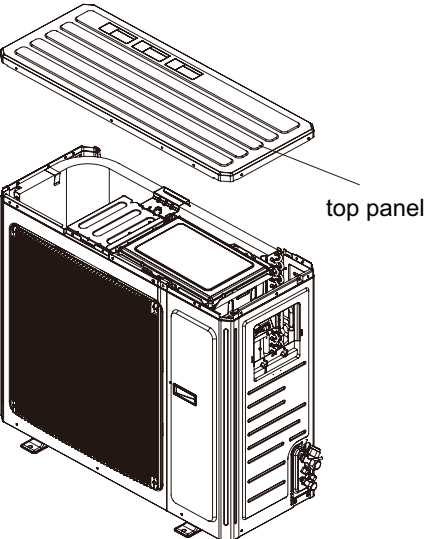
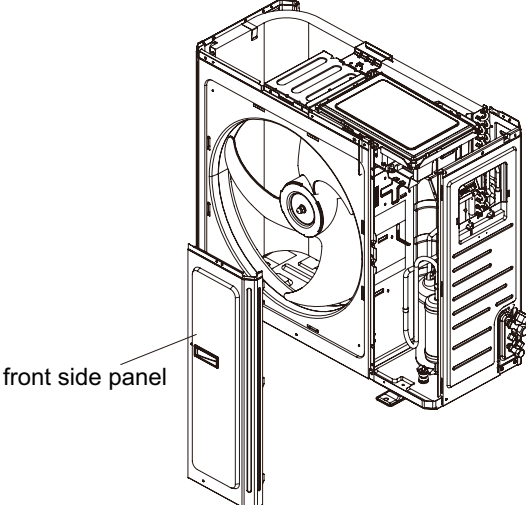
Steps	Procedure
<p>1. Remove big handle, valve cover and top cover</p>	<p>Remove the screw connecting the big handle and right side plate, and then remove the big handle. Remove the screw connecting the valve cover and right side plate, and then remove the valve cover.</p> 
<p>2. Remove top panel</p>	<p>Remove the screws connecting the top panel with the front panel and left&amp;right side plate, and then remove the top panel.</p> 
<p>3. Remove front side panel</p>	<p>Loosen the screws connecting the front side panel and chassis. Remove the front side panel.</p> 

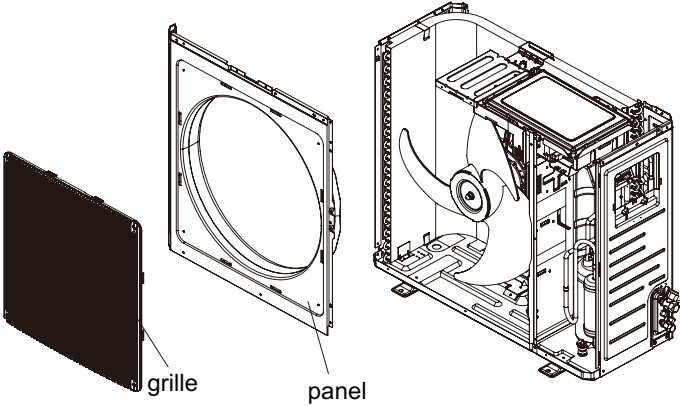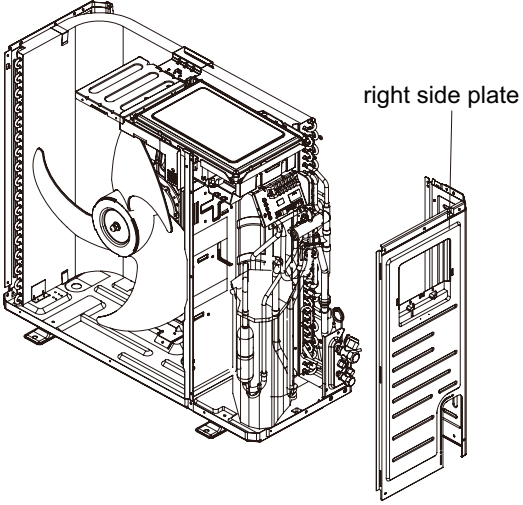
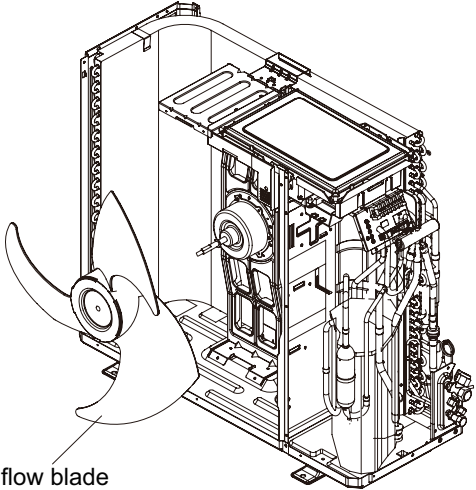
Steps	Procedure	
4.Remove grille and panel		
a	Twist off the screws connecting the grille and panel, and then remove the grille.	
b	Twist off the screws connecting the panel, chassis and motor support with screwdriver, and then remove the panel.	
5.Remove right side plate		
	Twist off the screws connecting the right side plate and chassis, valve support and condenser, and then remove the right side plate.	
6.Remove axial flow blade		
	Twist off the nuts on blade with wrench and then remove the axial flow blade.	

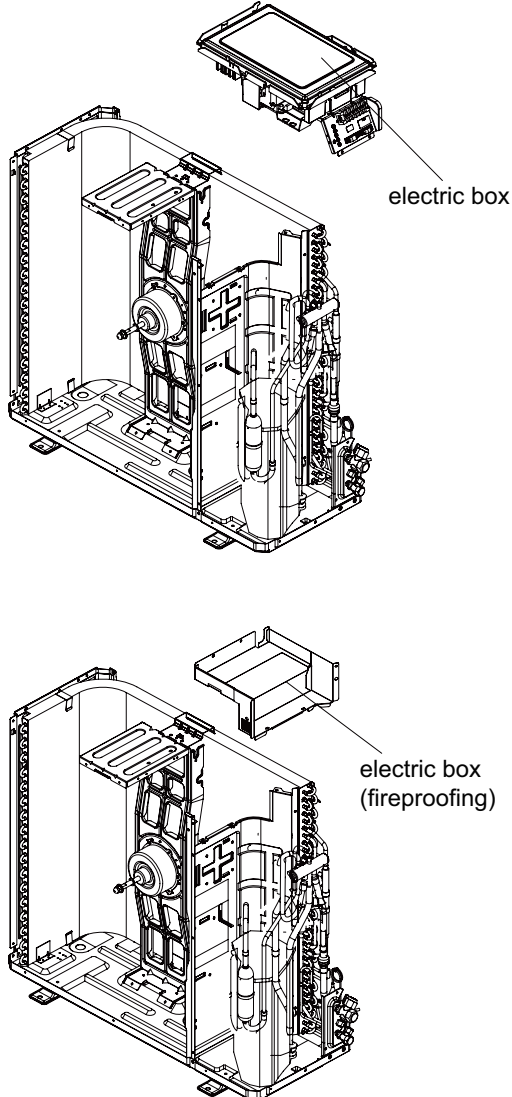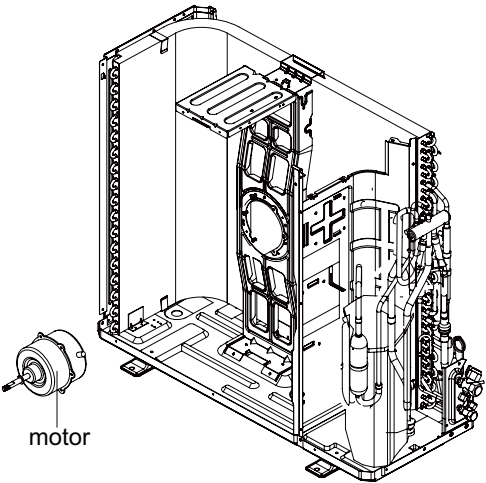

Steps	Procedure	
<p>7.Remove electric box</p> <p>a</p> <p>b</p>	<p>Twist off the screws on electric box, cut off the tieline with scissors or pliers, pull out the wiring terminal, pull it upwards to remove the electric box.</p> <p>Twist off the screws on electric box (fireproofing) with screwdriver, and then remove the electric box (fireproofing).</p>	
<p>8.Remove motor</p>	<p>Twist off the tapping screws fixing the motor, pull out the pin of leading wire for motor and then remove the motor.</p>	

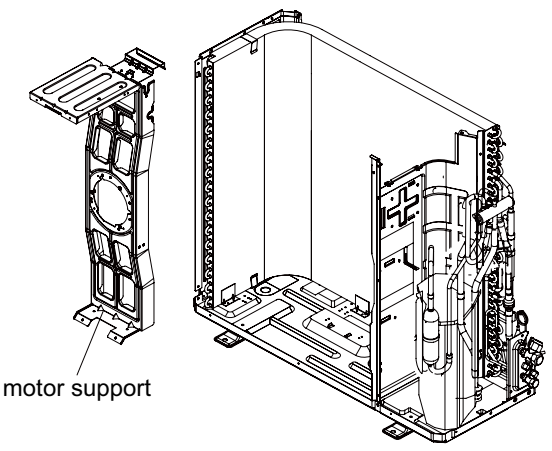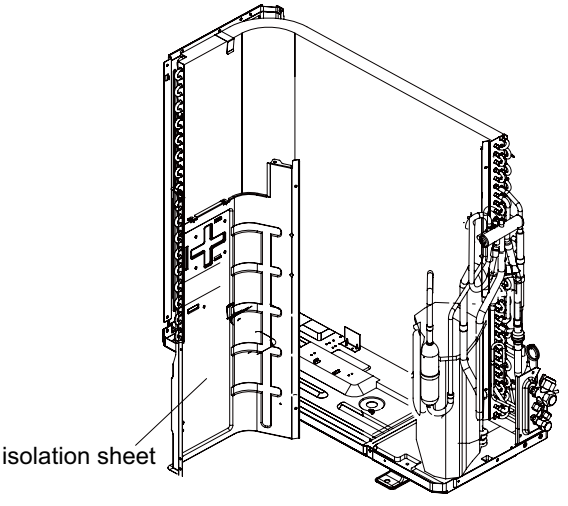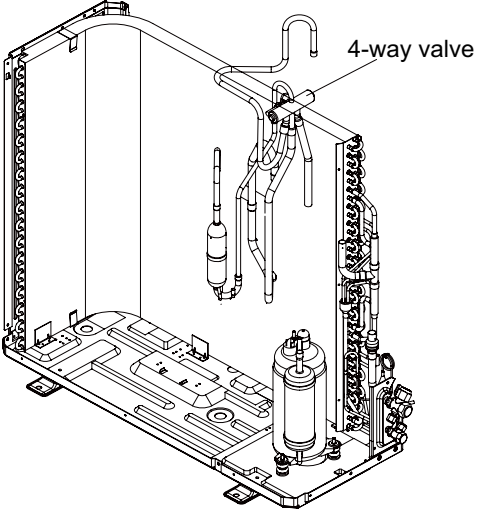Steps	Procedure
<p>9.Remove motor support</p>	<p>Twist off the tapping screws fixing the motor support, pull it upwards and then remove the motor support.</p> 
<p>10.Remove isolation sheet</p>	<p>Twist off the screws connecting isolation sheet and end plate of condenser and chassis, and then remove the isolation sheet.</p> 
<p>11.Remove 4-way valve</p>	<p>Unsolder the pipeline between compressor, condenser, gas and liquid valve, and then remove the 4-way valve. (note: release all refrigerant before unsoldering).</p> 

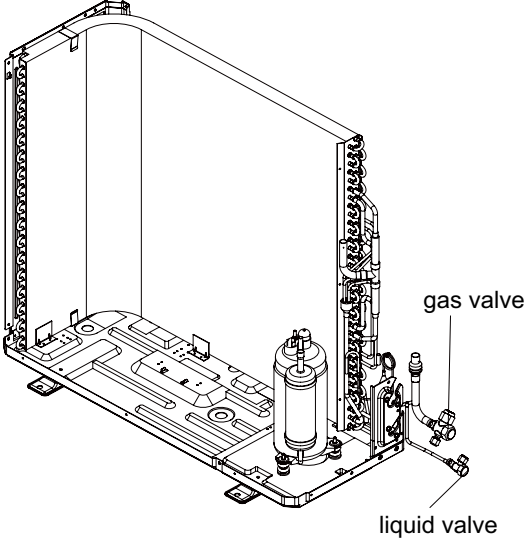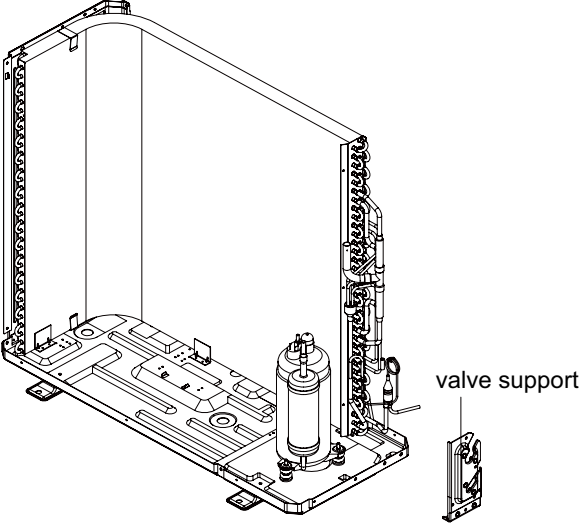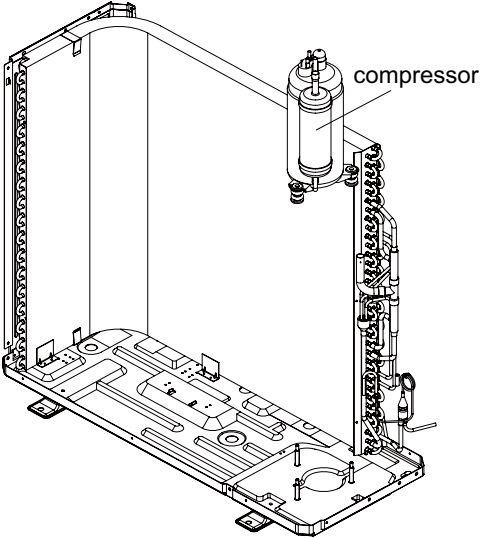Steps	Procedure
12.Remove gas valve and liquid valve	<p>Twist off the 2 bolts fixing the valve sub-assy. Unsolder the soldering joint between gas valve and air-return pipe and then remove the gas valve.(note: when unsoldering the soldering joint, wrap the gas valve with wet cloth completely to avoid the damage to valve, and release all refrigerant completely at first). Unsolder the soldering joint between liquid valve and connection pipe of liquid valve, and then remove the liquid valve.</p> 
13.Remove valve support	<p>Twist off the screws connecting valve support and chassis, and then remove the valve support.</p> 
14.Remove compressor	<p>Twist off the 3 foot nuts on compressor and then remove the compressor.</p> 

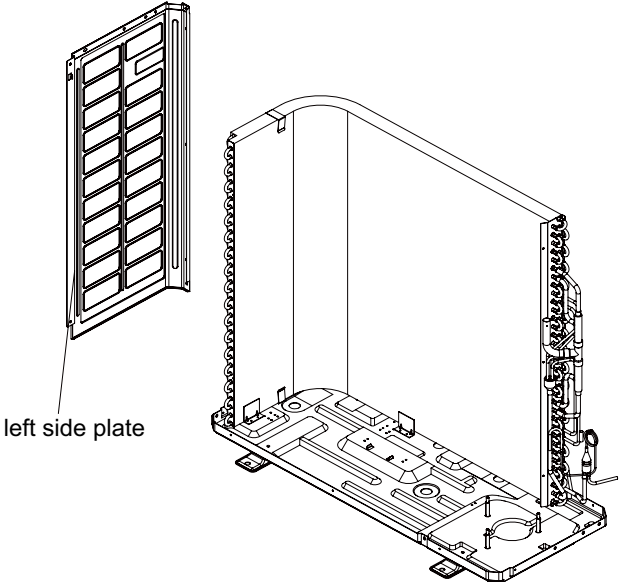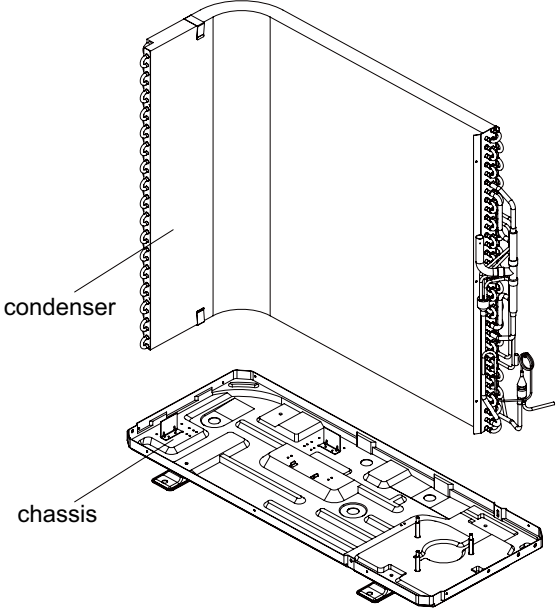Steps	Procedure
<p>15.Remove left side plate</p>	<p>Twist off the screws connecting the left side plate and chassis with screwdriver, and then remove the left side plate.</p>  <p>left side plate</p>
<p>16.Remove chassis and condenser</p>	<p>Pull it upwards to separate the chassis and condenser.</p>  <p>condenser</p> <p>chassis</p>

## Appendix:

### Appendix 1: Reference Sheet of Celsius and Fahrenheit

Conversion formula for Fahrenheit degree and Celsius degree:  $T_f = T_c \times 1.8 + 32$

Set temperature

Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius(°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius(°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius(°C)
61	60.8	16	69/70	69.8	21	78/79	78.8	26
62/63	62.6	17	71/72	71.6	22	80/81	80.6	27
64/65	64.4	18	73/74	73.4	23	82/83	82.4	28
66/67	66.2	19	75/76	75.2	24	84/85	84.2	29
68	68	20	77	77	25	86	86	30

Ambient temperature

Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius(°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius(°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius(°C)
32/33	32	0	55/56	55.4	13	79/80	78.8	26
34/35	33.8	1	57/58	57.2	14	81	80.6	27
36	35.6	2	59/60	59	15	82/83	82.4	28
37/38	37.4	3	61/62	60.8	16	84/85	84.2	29
39/40	39.2	4	63	62.6	17	86/87	86	30
41/42	41	5	64/65	64.4	18	88/89	87.8	31
43/44	42.8	6	66/67	66.2	19	90	89.6	32
45	44.6	7	68/69	68	20	91/92	91.4	33
46/47	46.4	8	70/71	69.8	21	93/94	93.2	34
48/49	48.2	9	72	71.6	22	95/96	95	35
50/51	50	10	73/74	73.4	23	97/98	96.8	36
52/53	51.8	11	75/76	75.2	24	99	98.6	37
54	53.6	12	77/78	77	25			

### Appendix 2: Configuration of Connection Pipe

- Standard length of connection pipe(See the specification)
- Min. length of connection pipe is 9.84ft.
- Max. length of connection pipe and max. high difference.(See the specification)
- The additional refrigerant oil and refrigerant charging required after prolonging connection pipe
  - After the length of connection pipe is prolonged for 32.81ft at the basis of standard length, you should add 0.0013gal of refrigerant oil for each additional 16.40ft of connection pipe.
  - The calculation method of additional refrigerant charging amount (on the basis of liquid pipe):
  - Basing on the length of standard pipe, add refrigerant according to the requirement as shown in the table. The additional refrigerant charging amount per meter is different according to the diameter of liquid pipe. See the following sheet.
  - Additional refrigerant charging amount = prolonged length of liquid pipe X additional refrigerant charging amount per meter

Additional refrigerant charging amount for R22, R407C, R410A and R134a			
Diameter of connection pipe		Outdoor unit throttle	
Liquid pipe(inch)	Gas pipe(inch)	Cooling only(oz/ft.)	Cooling and heating(oz/ft.)
Φ1/4	Φ3/8or Φ1/2	0.2	0.2
Φ1/4 or Φ3/8	Φ5/8 or Φ3/4	0.2	0.6
Φ1/2	Φ3/4 or Φ7/8	0.3	1.3
Φ5/8	Φ1 or Φ1 1/4	0.7	1.3
Φ3/4	/	2.7	2.7
Φ7/8	/	3.8	3.8



## Appendix 4: List of Resistance for Temperature Sensor

Resistance Table of Ambient Temperature Sensor for Indoor and Outdoor(15K)

Temp.(°F)	Resistance(kΩ)	Temp.(°F)	Resistance(kΩ)	Temp.(°F)	Resistance(kΩ)	Temp.(°F)	Resistance(kΩ)
-2.2	138.1	68	18.75	138.2	3.848	208.4	1.071
-0.4	128.6	69.8	17.93	140	3.711	210.2	1.039
1.4	121.6	71.6	17.14	141.8	3.579	212	1.009
3.2	115	73.4	16.39	143.6	3.454	213.8	0.98
5	108.7	75.2	15.68	145.4	3.333	215.6	0.952
6.8	102.9	77	15	147.2	3.217	217.4	0.925
8.6	97.4	78.8	14.36	149	3.105	219.2	0.898
10.4	92.22	80.6	13.74	150.8	2.998	221	0.873
12.2	87.35	82.4	13.16	152.6	2.896	222.8	0.848
14	82.75	84.2	12.6	154.4	2.797	224.6	0.825
15.8	78.43	86	12.07	156.2	2.702	226.4	0.802
17.6	74.35	87.8	11.57	158	2.611	228.2	0.779
19.4	70.5	89.6	11.09	159.8	2.523	230	0.758
21.2	66.88	91.4	10.63	161.6	2.439	231.8	0.737
23	63.46	93.2	10.2	163.4	2.358	233.6	0.717
24.8	60.23	95	9.779	165.2	2.28	235.4	0.697
26.6	57.18	96.8	9.382	167	2.206	237.2	0.678
28.4	54.31	98.6	9.003	168.8	2.133	239	0.66
30.2	51.59	100.4	8.642	170.6	2.064	240.8	0.642
32	49.02	102.2	8.297	172.4	1.997	242.6	0.625
33.8	46.6	104	7.967	174.2	1.933	244.4	0.608
35.6	44.31	105.8	7.653	176	1.871	246.2	0.592
37.4	42.14	107.6	7.352	177.8	1.811	248	0.577
39.2	40.09	109.4	7.065	179.6	1.754	249.8	0.561
41	38.15	111.2	6.791	181.4	1.699	251.6	0.547
42.8	36.32	113	6.529	183.2	1.645	253.4	0.532
44.6	34.58	114.8	6.278	185	1.594	255.2	0.519
46.4	32.94	116.6	6.038	186.8	1.544	257	0.505
48.2	31.38	118.4	5.809	188.6	1.497	258.8	0.492
50	29.9	120.2	5.589	190.4	1.451	260.6	0.48
51.8	28.51	122	5.379	192.2	1.408	262.4	0.467
53.6	27.18	123.8	5.197	194	1.363	264.2	0.456
55.4	25.92	125.6	4.986	195.8	1.322	266	0.444
57.2	24.73	127.4	4.802	197.6	1.282	267.8	0.433
59	23.6	129.2	4.625	199.4	1.244	269.6	0.422
60.8	22.53	131	4.456	201.2	1.207	271.4	0.412
62.6	21.51	132.8	4.294	203	1.171	273.2	0.401
64.4	20.54	134.6	4.139	204.8	1.136	275	0.391
66.2	19.63	136.4	3.99	206.6	1.103	276.8	0.382

Resistance Table of Tube Temperature Sensors for Indoor and Outdoor (20K)

Temp.(°F)	Resistance(kΩ)	Temp.(°F)	Resistance(kΩ)	Temp.(°F)	Resistance(kΩ)	Temp.(°F)	Resistance(kΩ)
-2.2	181.4	68	25.01	138.2	5.13	208.4	1.427
-0.4	171.4	69.8	23.9	140	4.948	210.2	1.386
1.4	162.1	71.6	22.85	141.8	4.773	212	1.346
3.2	153.3	73.4	21.85	143.6	4.605	213.8	1.307
5	145	75.2	20.9	145.4	4.443	215.6	1.269
6.8	137.2	77	20	147.2	4.289	217.4	1.233
8.6	129.9	78.8	19.14	149	4.14	219.2	1.198
10.4	123	80.6	18.13	150.8	3.998	221	1.164
12.2	116.5	82.4	17.55	152.6	3.861	222.8	1.131
14	110.3	84.2	16.8	154.4	3.729	224.6	1.099
15.8	104.6	86	16.1	156.2	3.603	226.4	1.069
17.6	99.13	87.8	15.43	158	3.481	228.2	1.039
19.4	94	89.6	14.79	159.8	3.364	230	1.01
21.2	89.17	91.4	14.18	161.6	3.252	231.8	0.983
23	84.61	93.2	13.59	163.4	3.144	233.6	0.956
24.8	80.31	95	13.04	165.2	3.04	235.4	0.93
26.6	76.24	96.8	12.51	167	2.94	237.2	0.904
28.4	72.41	98.6	12	168.8	2.844	239	0.88
30.2	68.79	100.4	11.52	170.6	2.752	240.8	0.856
32	65.37	102.2	11.06	172.4	2.663	242.6	0.833
33.8	62.13	104	10.62	174.2	2.577	244.4	0.811
35.6	59.08	105.8	10.2	176	2.495	246.2	0.77
37.4	56.19	107.6	9.803	177.8	2.415	248	0.769
39.2	53.46	109.4	9.42	179.6	2.339	249.8	0.746
41	50.87	111.2	9.054	181.4	2.265	251.6	0.729
42.8	48.42	113	8.705	183.2	2.194	253.4	0.71
44.6	46.11	114.8	8.37	185	2.125	255.2	0.692
46.4	43.92	116.6	8.051	186.8	2.059	257	0.674
48.2	41.84	118.4	7.745	188.6	1.996	258.8	0.658
50	39.87	120.2	7.453	190.4	1.934	260.6	0.64
51.8	38.01	122	7.173	192.2	1.875	262.4	0.623
53.6	36.24	123.8	6.905	194	1.818	264.2	0.607
55.4	34.57	125.6	6.648	195.8	1.736	266	0.592
57.2	32.98	127.4	6.403	197.6	1.71	267.8	0.577
59	31.47	129.2	6.167	199.4	1.658	269.6	0.563
60.8	30.04	131	5.942	201.2	1.609	271.4	0.549
62.6	28.68	132.8	5.726	203	1.561	273.2	0.535
64.4	27.39	134.6	5.519	204.8	1.515	275	0.521
66.2	26.17	136.4	5.32	206.6	1.47	276.8	0.509



Resistance Table of Discharge Temperature Sensor for Outdoor(50K)

Temp.(°F)	Resistance(kΩ)	Temp.(°F)	Resistance(kΩ)	Temp.(°F)	Resistance(kΩ)	Temp.(°F)	Resistance(kΩ)
-20.2	853.5	50	98	120.2	18.34	190.4	4.754
-18.4	799.8	51.8	93.42	122	17.65	192.2	4.609
-16.6	750	53.6	89.07	123.8	16.99	194	4.469
-14.8	703.8	55.4	84.95	125.6	16.36	195.8	4.334
-13	660.8	57.2	81.05	127.4	15.75	197.6	4.204
-11.2	620.8	59	77.35	129.2	15.17	199.4	4.079
-9.4	580.6	60.8	73.83	131	14.62	201.2	3.958
-7.6	548.9	62.6	70.5	132.8	14.09	203	3.841
-5.8	516.6	64.4	67.34	134.6	13.58	204.8	3.728
-4	486.5	66.2	64.33	136.4	13.09	206.6	3.619
-2.2	458.3	68	61.48	138.2	12.62	208.4	3.514
-0.4	432	69.8	58.77	140	12.17	210.2	3.413
1.4	407.4	71.6	56.19	141.8	11.74	212	3.315
3.2	384.5	73.4	53.74	143.6	11.32	213.8	3.22
5	362.9	75.2	51.41	145.4	10.93	215.6	3.129
6.8	342.8	77	49.19	147.2	10.54	217.4	3.04
8.6	323.9	78.8	47.08	149	10.18	219.2	2.955
10.4	306.2	80.6	45.07	150.8	9.827	221	2.872
12.2	289.6	82.4	43.16	152.6	9.489	222.8	2.792
14	274	84.2	41.34	154.4	9.165	224.6	2.715
15.8	259.3	86	39.61	156.2	8.854	226.4	2.64
17.6	245.6	87.8	37.96	158	8.555	228.2	2.568
19.4	232.6	89.6	36.38	159.8	8.268	230	2.498
21.2	220.5	91.4	34.88	161.6	7.991	231.8	2.431
23	209	93.2	33.45	163.4	7.726	233.6	2.365
24.8	198.3	95	32.09	165.2	7.47	235.4	2.302
26.6	199.1	96.8	30.79	167	7.224	237.2	2.241
28.4	178.5	98.6	29.54	168.8	6.998	239	2.182
30.2	169.5	100.4	28.36	170.6	6.761	240.8	2.124
32	161	102.2	27.23	172.4	6.542	242.6	2.069
33.8	153	104	26.15	174.2	6.331	244.4	2.015
35.6	145.4	105.8	25.11	176	6.129	246.2	1.963
37.4	138.3	107.6	24.13	177.8	5.933	248	1.912
39.2	131.5	109.4	23.19	179.6	5.746	249.8	1.863
41	125.1	111.2	22.29	181.4	5.565	251.6	1.816
42.8	119.1	113	21.43	183.2	5.39	253.4	1.77
44.6	113.4	114.8	20.6	185	5.222	255.2	1.725
46.4	108	116.6	19.81	186.8	5.06	257	1.682
48.2	102.8	118.4	19.06	188.6	4.904	258.8	1.64



JF00304217

